afifurnishings.com

PRINTER STAND CHARGING STATION


ASSEMBLY INSTRUCTIONS



Before assembling your printer stand, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com 1-800-955-3726



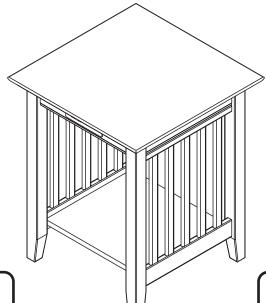



PO:

CODE

ITEM

TB-PR-MSN

H-7906X

Spare - 1 pc

 
NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.



A Flat washer - 8 pcs Spare - 2 pcs



Hexagon wrench - 1 pc








B Hexagon nut - 8 pcs Spare - 2 pcs




D) Wooden dowel 1/4" X 1 1/4" - 4 pcs Spare - 1 pc



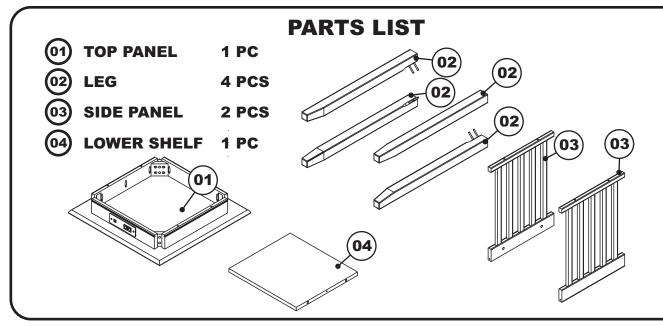




Attach the legs (02) to the top panel (01) using flat washers (A) and hexagon nuts (B), tighten with hexagon wrench (C), as shown below.

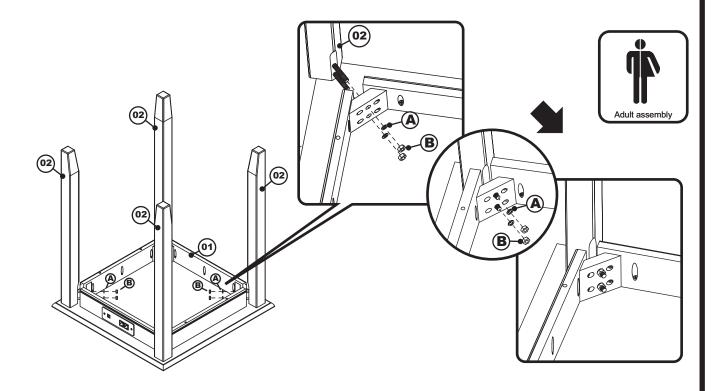

STEP 2

Install wooden dowels (D) and (E) into the locator holes on (03) and (04) as shown below.

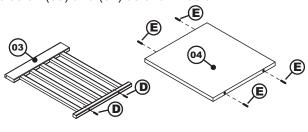

STEP 3

Attach first side panel (03) to printer stand aligning the dowels (D) with the holes in the apron. Be sure the panel is centered before tightening the wood screw (F).

(03)

