ASSEMBLY INSTRUCTIONS

ITEM NO: B2150-K-FB / B2150-KQ-RAIL / B2150-K-HBWG KING BED

(BOX 1) BOX OF FOOTBOARD

BOX OF TOO I BOXIND				
ITEM	DRAWING	DESCRIPTION	QTY	
A		FOOTBOARD	1	
В	٥	BUN FOOT	2	
C		WOODEN SLAT	4	
D		WOODEN SUPPORT WITH ADJUSTER	8	

(BOX 2) BOX OF SIDE RAIL


ITEM	DRAWING	DESCRIPTION	QTY
E		SIDE RAIL (L/R)	2


(BOX 3) BOX OF HEADBOARD WING

ITEM	DRAWING	DESCRIPTION	QTY
F		HEADBOARD WING (L / R)	2

(BOX 1) HARDWARE LIST

 ITEM	DRAWING	DESCRIPTION	QTY
1		ALLEN KEY (M4)	1
2	0.0000)D	CONNECTION BOLT (M6 x 30mm) W/SPRING WASHER & WASHER MEDIUM	4
3	0.0000 June	CONNECTION BOLT (M6 x 40mm) W/SPRING WASHER & WASHER MEDIUM	6
4	Organic Justin	CONNECTION BOLT (M6 x 60mm) W/SPRING WASHER & WASHER MEDIUM	6
5	0	CONNECTION BOLT (M6 x 40mm)	8
6	(S)mmmm	CSK SCREW (M4 x 32mm)	8
7		SCREW DRIVER (*)	1



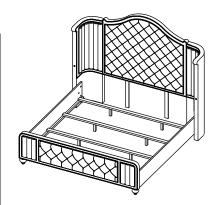


 $\frac{COMPLETED\ KING\ BED}{ASSEMBLY}$

STEP 1 STEP 2


THE HARDWARE IS LOCATED IN THE PACKING ITEMS.

NOTE : MUST TIGHTEN BOLTS & SCREWS PERIODICALLY. WITH USE BOLTS & SCREWS MAY BECOME LOOSE. CHECK TIGHTNESS OF ALL BOLTS & SCREWS EVERY 6-8 WEEKS.

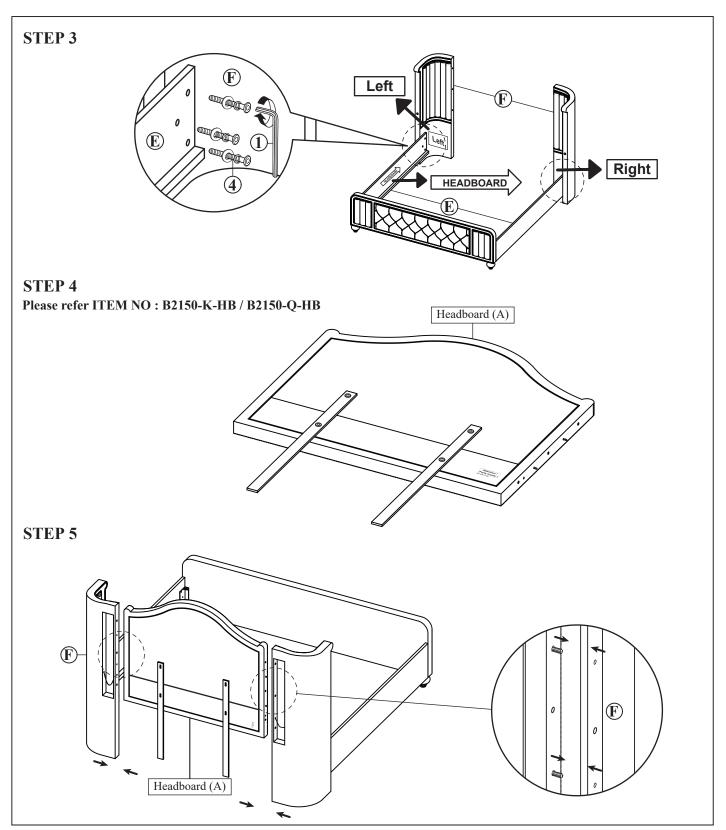


THE HARDWARE IS LOCATED IN THE PACKING ITEMS.

NOTE : MUST TIGHTEN BOLTS & SCREWS PERIODICALLY, WITH USE BOLTS & SCREWS MAY BECOME LOOSE. CHECK TIGHTNESS OF ALL BOLTS & SCREWS EVERY 6-8 WEEKS.

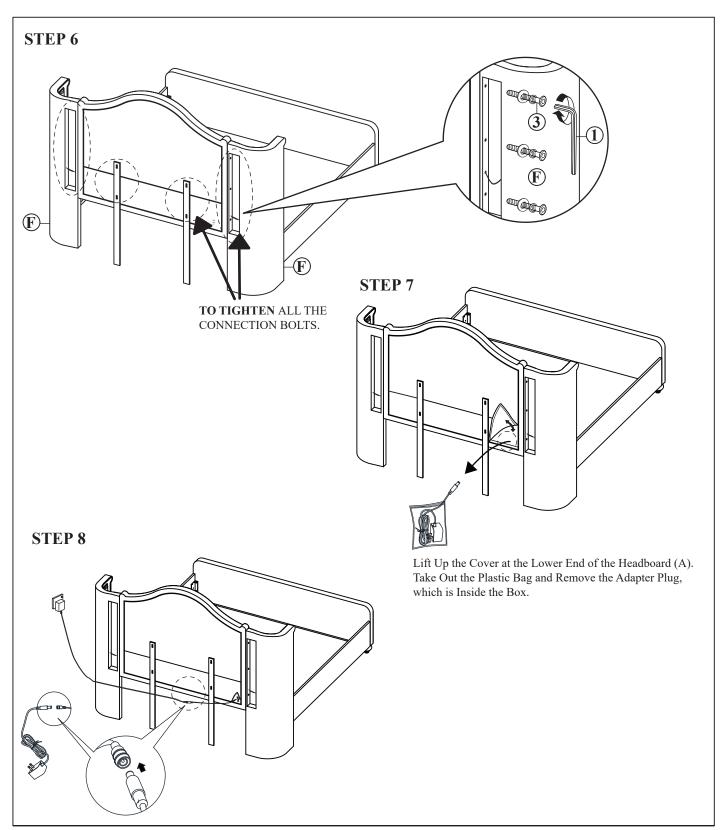

THE HARDWARE IS LOCATED IN THE PACKING ITEMS.

NOTE: MUST TIGHTEN BOLTS & SCREWS PERIODICALLY. WITH USE BOLTS & SCREWS MAY BECOME LOOSE. CHECK TIGHTNESS OF ALL BOLTS & SCREWS EVERY 6-8 WEEKS.

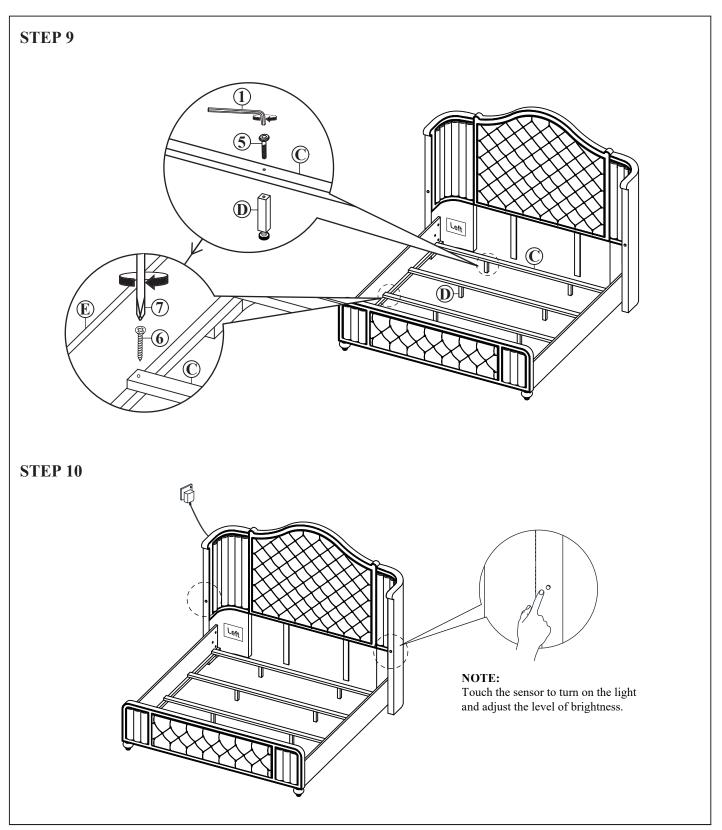

THE HARDWARE IS LOCATED IN THE PACKING ITEMS.

NOTE : MUST TIGHTEN BOLTS & SCREWS PERIODICALLY. WITH USE BOLTS & SCREWS MAY BECOME LOOSE. CHECK TIGHTNESS OF ALL BOLTS & SCREWS EVERY 6-8 WEEKS.