ASSEMBLY INSTRUCTIONS

ITEM NO: B8160 / B8162 - K - HBFB / KQ - RAIL KING HEADBOARD / FOOTBOARD / SIDE RAIL

(BOX 1) BOX OF HEADBOARD / FOOTBOARD

ITEM	DRAWING	DESCRIPTION	QTY
A		HEADBOARD PANEL	1
В		LEFT HEADBOARD LEG	1
С		RIGHT HEADBOARD LEG	1
D		FOOTBOARD	1
E		WOODEN SLAT	4
F	1	WOODEN SUPPORT	8

(BOX 1) HEADBOARD / FOOTBOARD HARDWARE LIST

ITEM	DRAWING	DESCRIPTION	QTY
1		ALLEN WRENCH (M4)	1
2	97 9 00	CONNECTION BOLT (M6 x 45mm) W/WASHER & SPRING WASHER	8
3	33 000	CONNECTION BOLT (M6 x 20mm) W/WASHER & SPRING WASHER	8
4	Ø Trans	FLAT HEAD SCREW (#8 x 1 1/8")	8
5		Assembly Tool Not Included	1




 $\frac{\textbf{COMPLETED KING BED}}{\textbf{ASSEMBLY}}$

(BOX 2) BOX OF SIDE RAIL

ITEM	DRAWING	DESCRIPTION	QTY
G		SIDE RAIL	2

(BOX 2) SIDE RAIL HARDWARE LIST

ITEM	DRAWING	DESCRIPTION	QTY
6		WOOD DOWEL (M8 x 30mm)	8

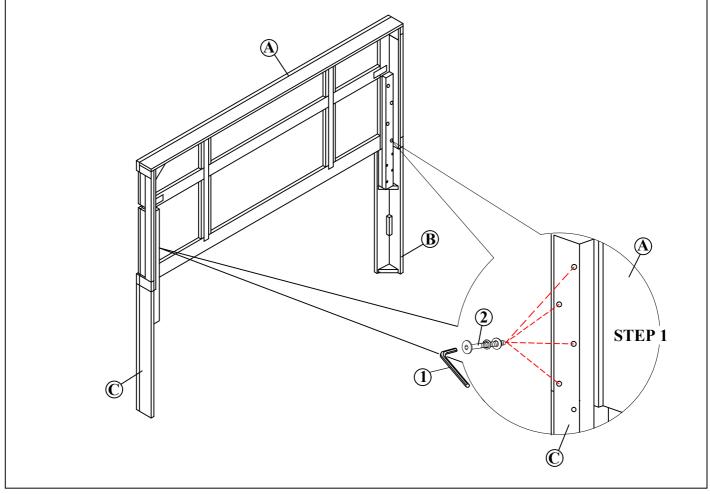


THE HARDWARE IS LOCATED IN THE PACKING ITEMS

NOTE: MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE. CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

CLEANING INSTRUCTION

ASSEMBLY INSTRUCTIONS

ITEM NO: B8160 / B8162 - K - HBFB / KQ - RAIL KING HEADBOARD / FOOTBOARD / SIDE RAIL

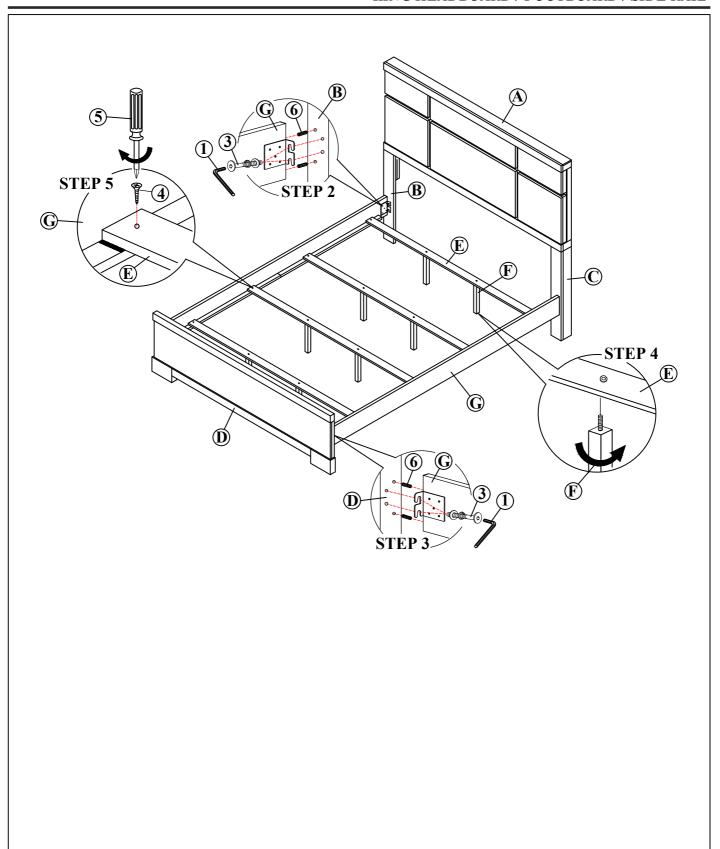

THE HARDWARE IS LOCATED IN THE PACKING ITEMS

NOTE: MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE. CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

CLEANING INSTRUCTION