ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

- 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
- 3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed: Screwdriver (not provider).

PART LIST			
ITEM	DESCRIPTION	QTY	
Α	CHAIR BACK	1 PC	
В	CHAIR SEAT FRAME	1 PC	
С	CUSHION	1 PC	
D	ARM (L)	1 PC	
E	ARM (R)	1 PC	
F	CENTER LEG	1 PC	

HARDWARE LIST			
ITEM	DESCRIPTION		QTY
1	JCBC Bolt M6 x 35mm	 (9	6 PCS
2	JCBC Bolt M6 x 60mm	@	4 PCS
3	JCBC Bolt M6 x 80mm		4 PCS
4	M6 FLAT WASHER	0	14 PCS
5	M6 SPRING WASHER		14 PCS
6	WOOD SCREW M4 x 32mm		12 PCS
7	M4 ALLEN KEY (BALL SHAPE)		1 PC
8	M6 x 16mm ADJUSTER SCREW		1 PC





