Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.

3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

PARTS LIST			
ITEM	DESCRIPTION	QTY	
Α	HEADBOARD	1 PC	
В	FOOTBOARD	1 PC	
С	SIDE RAIL	2 PCS	
D	CENTER RAIL	1 PC	
E	CENTER SUPPORT LEG	3 PCS	
F	SLAT	1 SET	
G	BED LEG	4 PCS	

HARDWARE LIST				
ITEM	DESCRIPTION	QTY		
1	JCBC BOLT M6 x 20mm ■	8 PCS		
2	JCBB BOLT M8 x 16mm	4 PCS		
3	JCBB BOLT M8 x 30mm	4 PCS		
4	M6 FLAT WASHER	8 PCS		
5	M6 SPRING WASHER	8 PCS		
6	WOOD SCREW M4 x 38mm	9 PCS		
7	M4 ALLEN KEY (BALL SHAPE)	1 PC		
8	M5 ALLEN KEY (BALL SHAPE)	1 PC		
9	201 LEG BRACKET	4 PCS		
10	WOOD SCREW M4 x 20mm	16 PCS		
11	M8 FLAT WASHER	4 PCS		
12	M8 SPRING WASHER	4 PCS		
13	5/16" HEX NUT	4 PCS		
14	SPANNER 13mm	1 PC		





