Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.

3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

PARTS LIST				
ITEM	DESCRIPTION	QTY		
Α	HEADBOARD	1 PC		
В	FOOTBOARD	1 PC		
С	SIDE RAIL	2 PCS		
D	CENTER RAIL	1 PC		
E	CENTER SUPPORT LEG	3 PCS		
F	SLAT	1 SET		
G	BED LEG	4 PCS		

HARDWARE LIST				
ITEM	DESCRIPTION		QTY	
1	JCBC BOLT M6 x 20mm	<b></b>	8 PCS	
2	JCBB BOLT M8 x 16mm	omm⊏()	4 PCS	
3	JCBB BOLT M8 x 30mm	<b></b>	4 PCS	
4	M6 FLAT WASHER	0	8 PCS	
5	M6 SPRING WASHER		8 PCS	
6	WOOD SCREW M4 x 38mm	B	9 PCS	
7	M4 ALLEN KEY (BALL SHAPE)		1 PC	
8	M5 ALLEN KEY (BALL SHAPE)		1 PC	
9	201 LEG BRACKET	<b>₩</b>	4 PCS	
10	WOOD SCREW M4 x 20mm		16 PCS	
11	M8 FLAT WASHER	0	4 PCS	
12	M8 SPRING WASHER	•	4 PCS	
13	5/16" HEX NUT	<b>9</b>	4 PCS	
14	SPANNER 13mm	Д	1 PC	





