

BUTLER

Assembly Instructions
Style Number 0464070

SPECIALTY COMPANY
8200 SOUTH CHICAGO AVE. CHICAGO, IL 60617

PACKAGED


- | | |
|---------------------------|------------------------|
| (A) 1-Table Body | (D) 12 - Bolt |
| (B) 1-Lift-out Game Board | (E) 12 - Plain Washers |
| (C) 4-Legs | (F) 12 - Lock Washers |

Read all instructions before starting assembly.

Step #1 Remove all the contents from the package checking that all of the components listed in "Packaged" are included. Prepare a flat, protected work surface where the product can be assembled.

Step #2 Carefully remove the drawer where the legs are placed in a box. Legs are pre-fitted and marked. Align protruding hanger bolt in leg over matching insert holes in assembly bottom. Twist the bolt until securely tighten. Repeat the procedure on the remaining legs. (Do not overtighten the bolt).

Step #3 Place the top of the Game Table into upright position (2 persons required). Re-install the drawer to its original position.

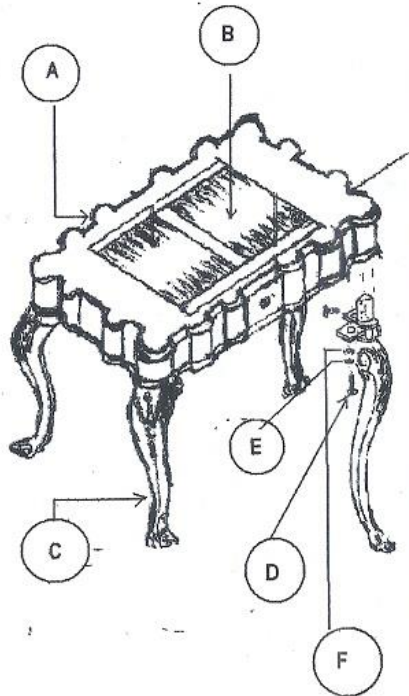

(*) **Caution: DO NOT OVERTIGHTEN.**

In any correspondence regarding this product, please include the complete Butler identification number located on the underside of the product.

We hope this Game Table will be a useful and decorative addition to your home for years to come.

Copyright © Butler Specialty Company, 08/99