

## **Parts**



 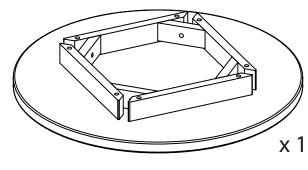


Table Top (A)

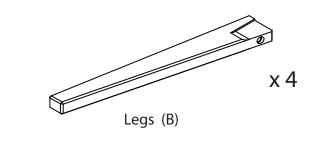

## **Hardware**



RF10034




Washer RF40052



**Spring Washer** RF40193



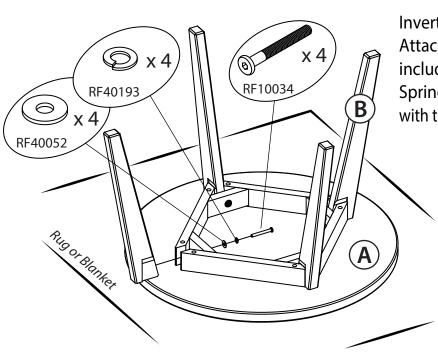

Invert the Table Top (A) on a soft surface. Attach the Legs (B) into the Table Top (A) with included Screws (RF10034), Washer (RF40052), Spring Washer (RF40193). tighten the screws with the provided allen key as picture shown.