






 
 







 


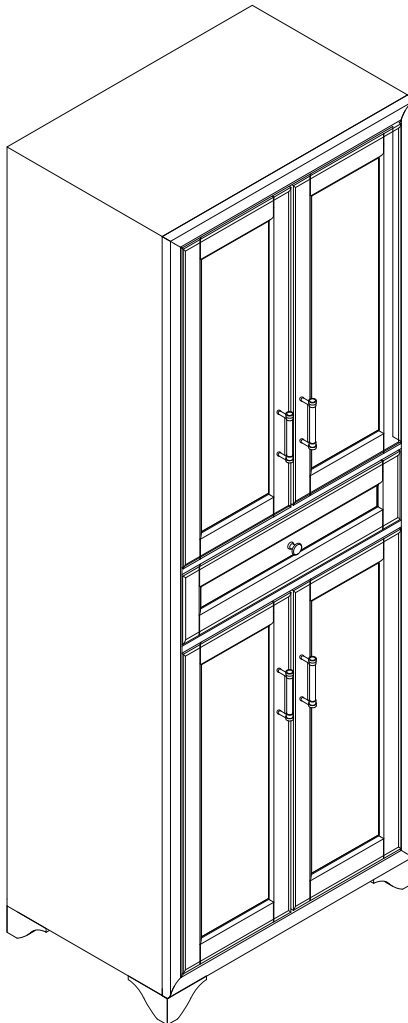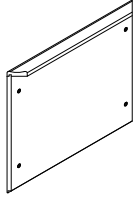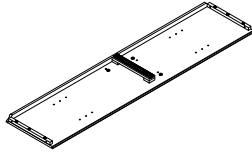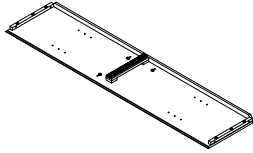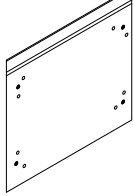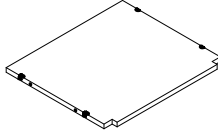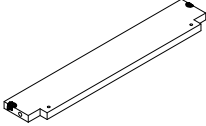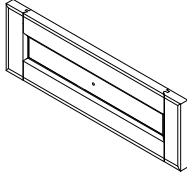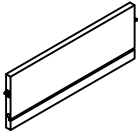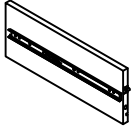

 
 
 
 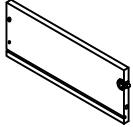


 
 
 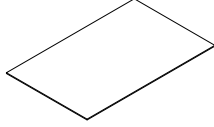


 

 
 
 
Pantry
CF3111

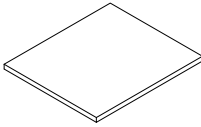

PART LIST

 
A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Fixed Shelf 1 PC
F 	G 	H 	I 	J 
Rail 1 PC	Door Panel 2 PCS	Door Panel 2 PCS	Drawer Front Panel 1 PC	Drawer Back Panel 1 PC
K 	L 	M 	N 	O 
Drawer Left Panel 1 PC	Drawer Right Panel 1 PC	Drawer Bottom Panel 1 PC	Adjustable Shelf 2 PCS	Leg 4 PCS
P 				
Back Panel 1 PC				

HARDWARE LIST

<p>#1</p>  <p>Ø8*30mm</p>	<p>#2</p>  <p>Ø6*30mm</p>	<p>#3</p> 	<p>#4</p>  <p>12*Ø3*D6mm</p>	<p>#5</p> 
<p>Large Wood Dowel 14 PCS (Extra 1)</p>	<p>Small Wood Dowel 4 PCS (Extra 1)</p>	<p>Double Magnet 2 PCS</p>	<p>Round Head Screw 4 PCS (Extra 1)</p>	<p>Handle 4 PCS</p>
<p>#6</p> 	<p>#7</p>  <p>1/2"*Ø5/32"*D9mm</p>	<p>#8</p>  <p>3/4"*Ø5/32"*D9mm</p>	<p>#9</p>  <p>1-1/4"*Ø1/4"*D11mm</p>	<p>#10</p> 
<p>Knob 1 PC</p>	<p>Short Round Head Bolt 1 PC (Extra 1)</p>	<p>Long Round Head Bolt 8 PCS (Extra 1)</p>	<p>Bolt 12 PCS (Extra 1)</p>	<p>Flat Washer 4 PCS (Extra 1)</p>
<p>#11</p> 	<p>#12</p> 	<p>#13</p> 	<p>#14</p> 	<p>#15</p> 
<p>Spring Washer 4 PCS (Extra 1)</p>	<p>Shelf Holder 8 PCS (Extra 1)</p>	<p>Screw 22 PCS (Extra 1)</p>	<p>Adjustable Leveler 4 PCS</p>	<p>Allen Wrench 1 PC</p>
<p>#16</p>  <p>Safety Strap Kit 1 SET</p>				

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Please do not use tools to assemble this unit unless specifically indicated.

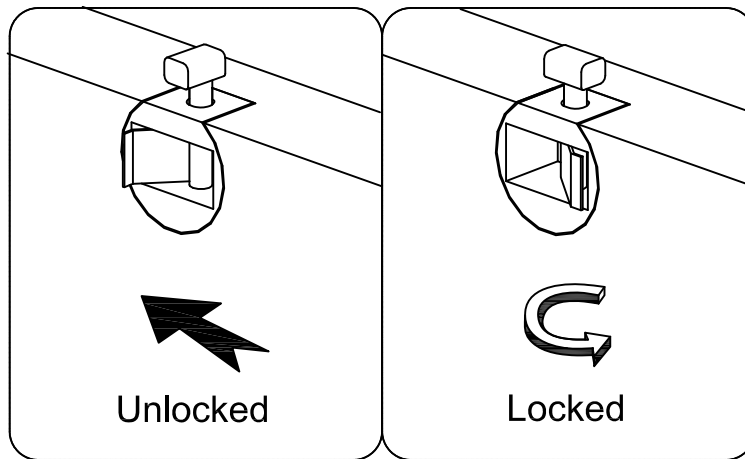


Reference the images above any time the instructions state "lock the hardware".
 Note: Be sure to check all hardware is locked when completed.


Step 1. Attach double magnets (part #3) to fixed shelf (part E) and rail (part F) using round head screws (part #4) and phillips head screwdriver. Attach knob (part #6) to drawer front panel (part I) using short round head bolt (part #7) and phillips head screwdriver. Attach handles (part #5) to door panels (parts G & H) using long round head bolts (part #8) and phillips head screwdriver. Attach adjustable levelers (part #14) into legs (part O).

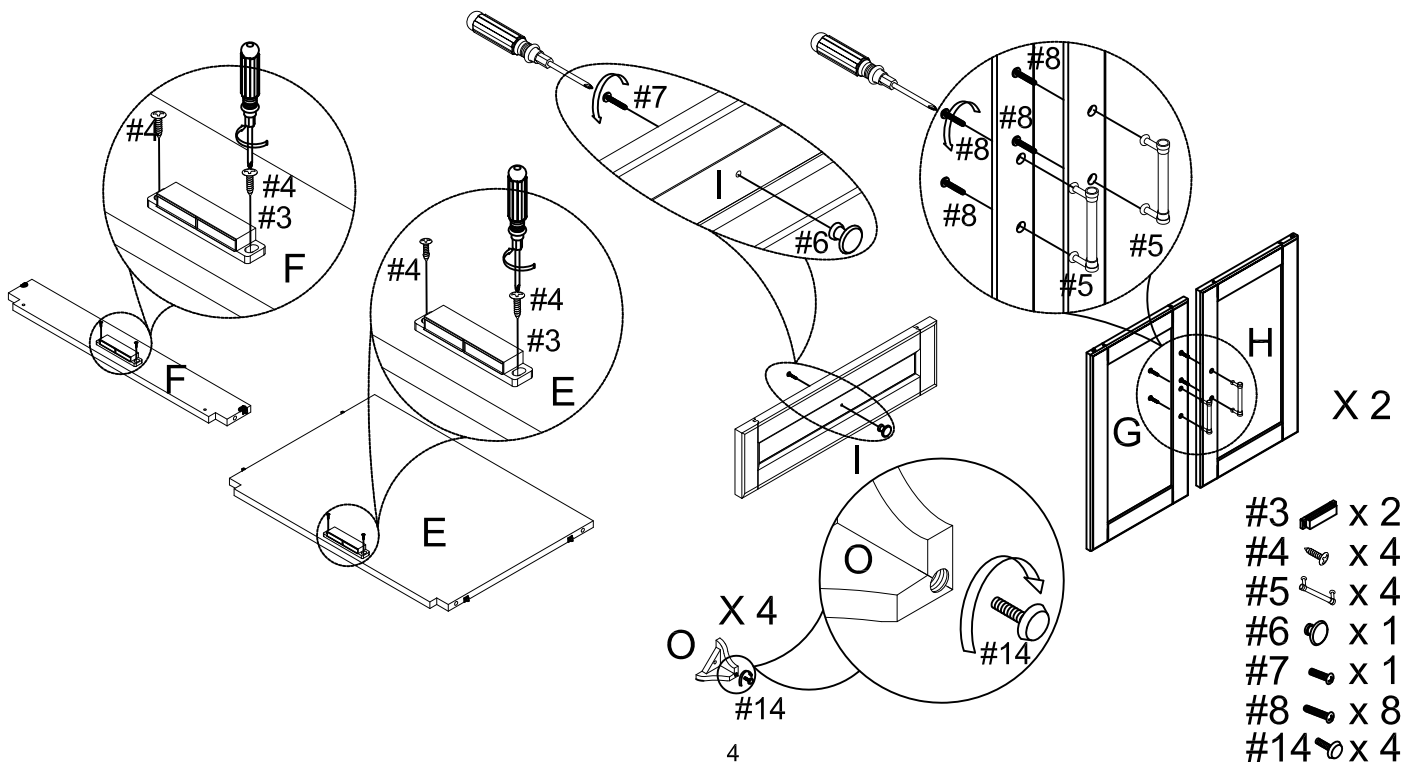


Step 2. Attach drawer left panel (part K) and drawer right panel (part L) to drawer back panel (part J) using small wood dowels (part #2) and lock the hardware. Slide drawer bottom panel (part M) into grooves of assembled unit (parts J, K & L). Attach drawer front panel (part I) to assembled unit (parts K, L & M) using small wood dowels (part #2) and lock the hardware.

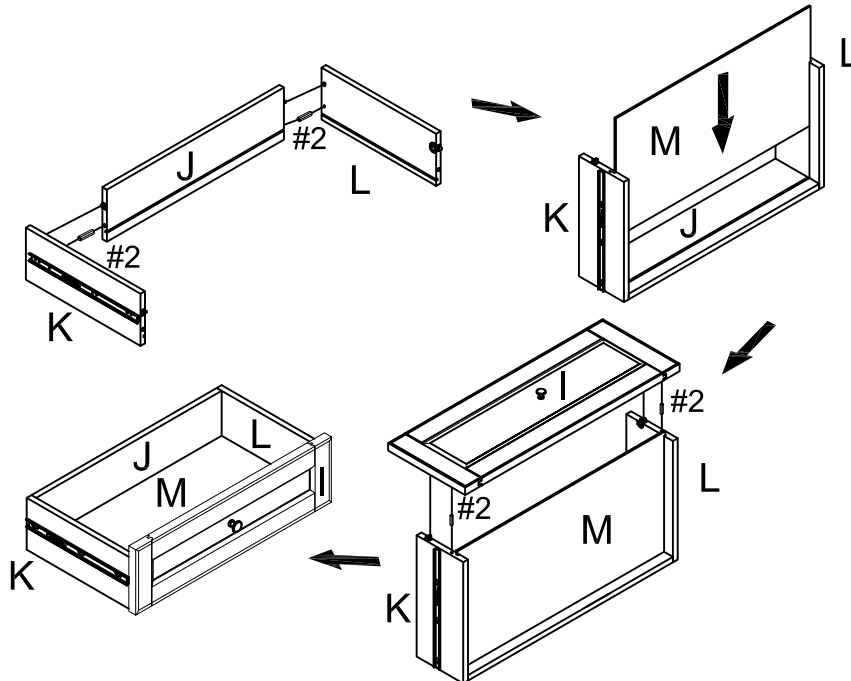

Step 3. Lay right panel (part C) upside down on a soft flat surface, such as carpet. Attach fixed shelf (part E) and rail (part F) to right panel (part C) using large wood dowels (part #1) and lock the hardware.

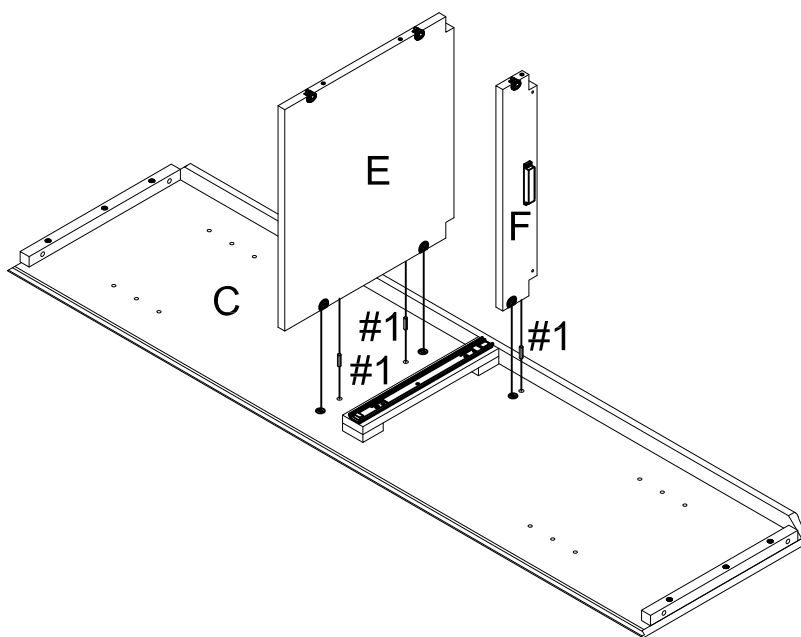


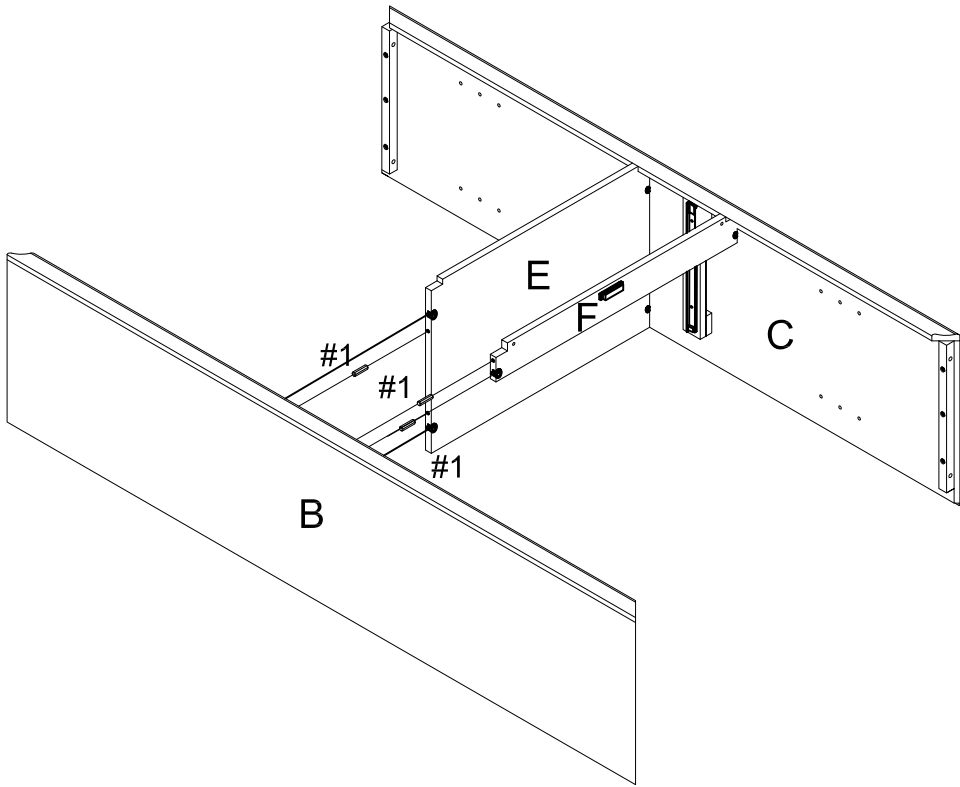

Step 4. Attach left panel (part B) to fixed shelf (part E) and rail (part F) using large wood dowels (part #1) and lock the hardware.




#1  x 3

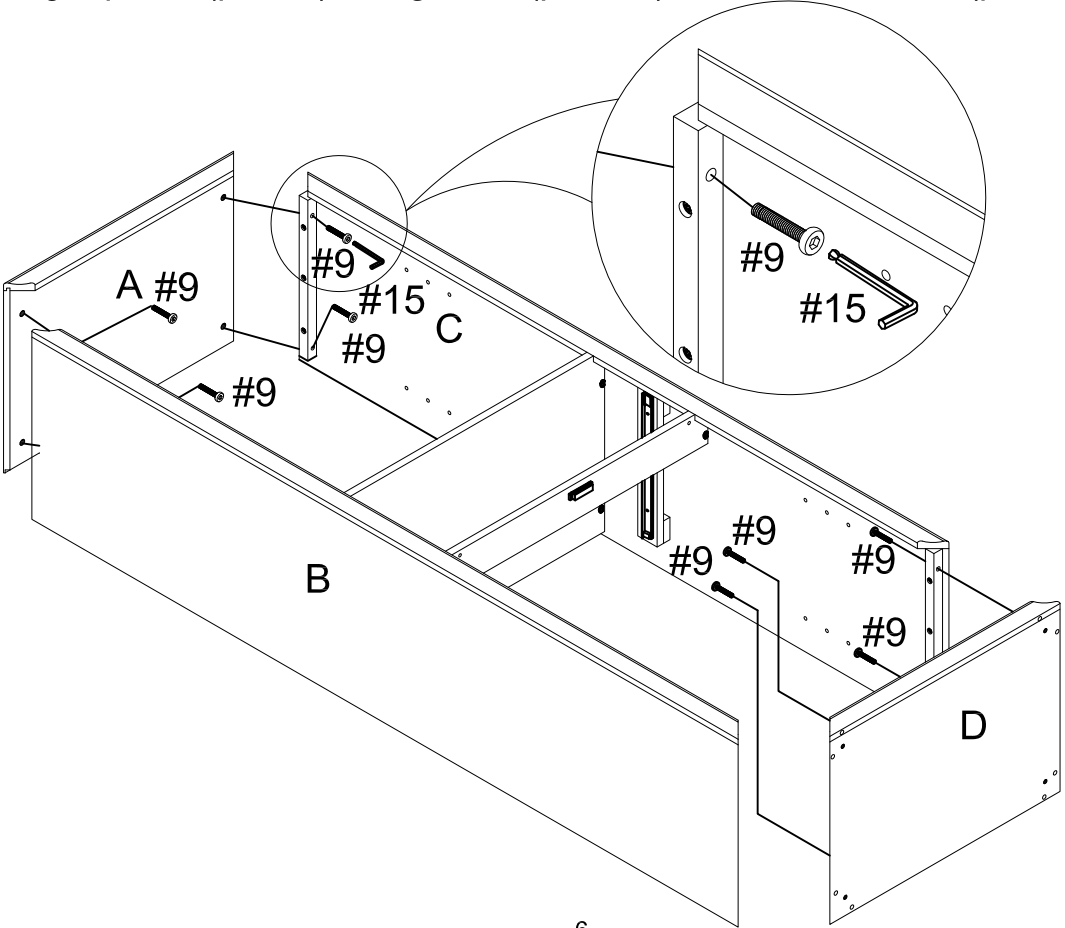Step 5. Attach top panel (part A) and bottom panel (part D) to left panel (part B) and right panel (part C) using bolts (part #9) and allen wrench (part #15).




#9  x 8
#15  x 1

Step 6. Attach legs (part O) to bottom panel (part D) using large wood dowels (part #1), flat washers (part #10), spring washers (part #11), bolts (part #9) and allen wrench (part #15).

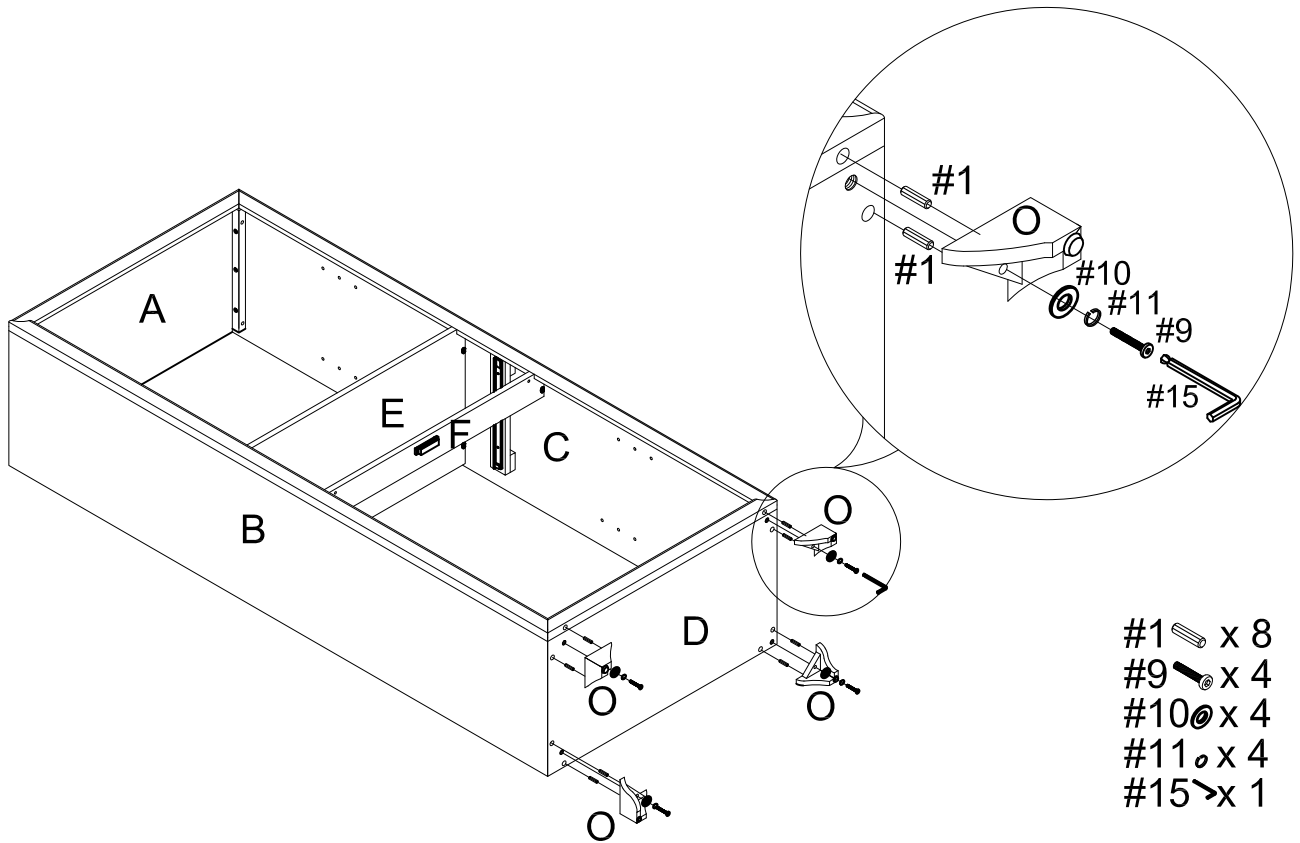


Step 7. Carefully turn unit upright. Attach back panel (part P) to assembled unit (parts A, B, C, D & E) using screws (part #13) and phillips head screwdriver.

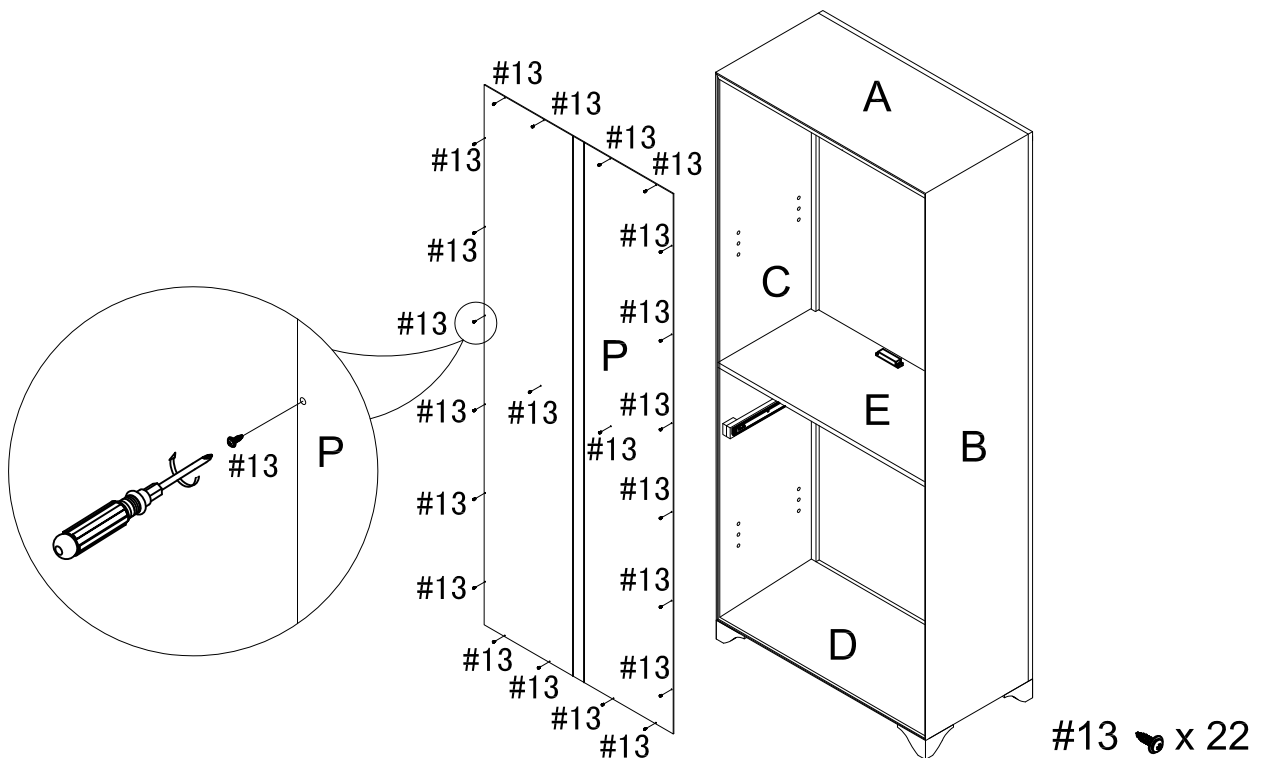

Step 8. Slide assembled drawer into place. Attach door panels (parts G & H) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D) and fixed shelf (part E). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of rail (part F) and top panel (part A).


NOTE: Be sure top and bottom pin hinges are fully extended to secure door in place.

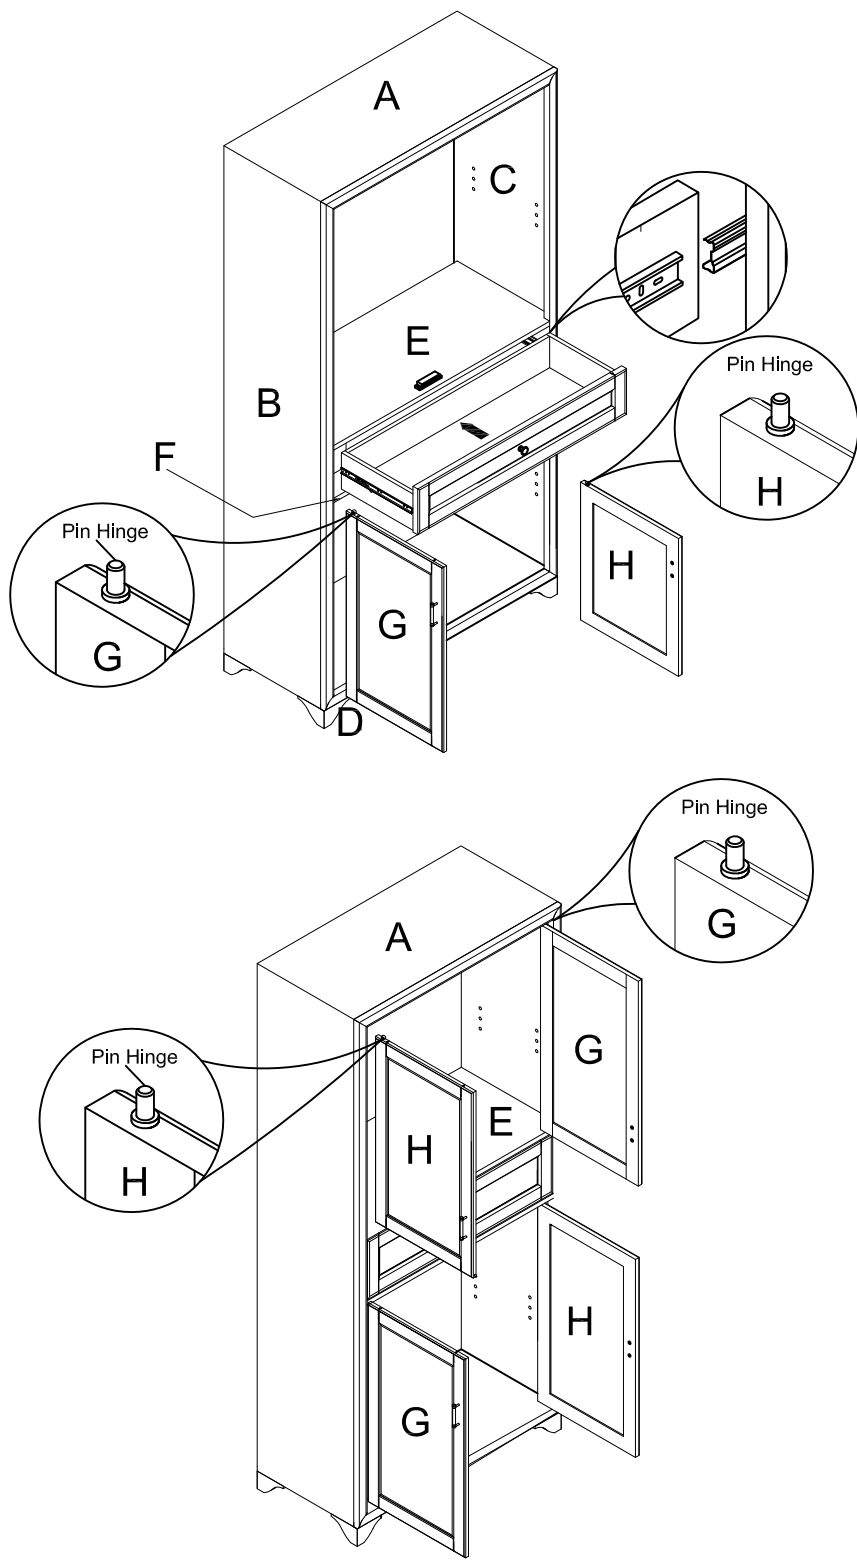


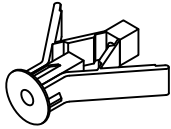



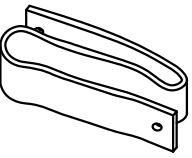
Step 9. Place shelf holders (part #12) into desired position and then slide adjustable shelves (part N) into place.

Important: Safety strap kit (part #16) must be installed to prevent tipping, damage and/or injury.

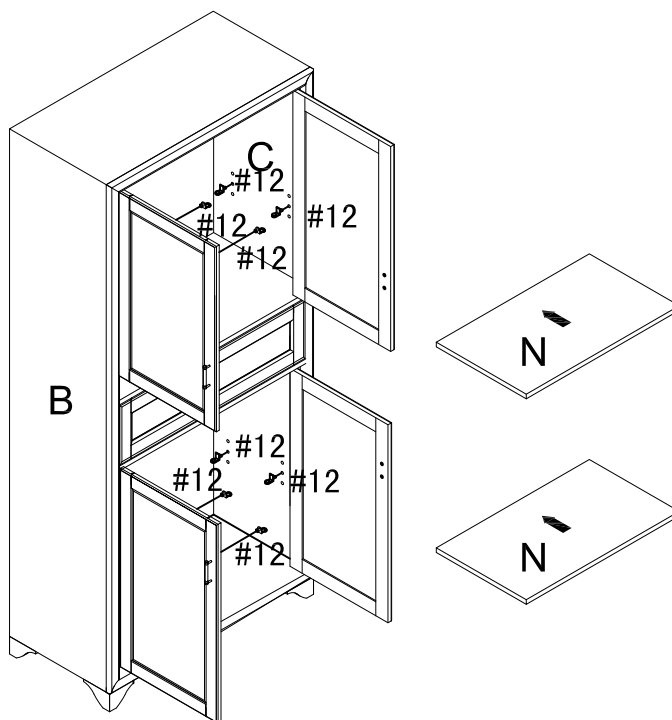NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



#12 🪪 x 8


#16	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washers (B) and safety wall strap (E) and attach to back panel (part P) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in back panel (part P) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washers (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

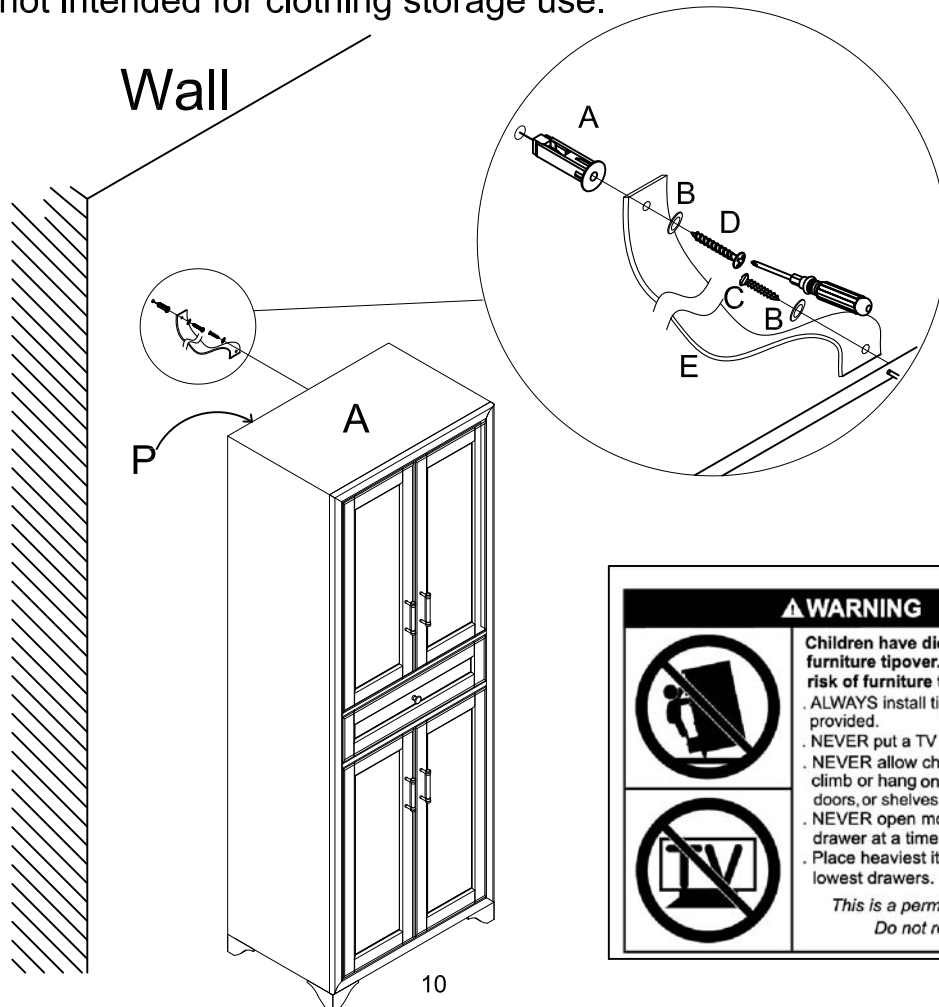

▲ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover:
	<ul style="list-style-type: none"> ALWAYS install tipover restraint provided. NEVER put a TV on this product. NEVER allow children to stand, climb or hang on drawers, doors, or shelves. NEVER open more than one drawer at a time. Place heaviest items in the lowest drawers.
<p><i>This is a permanent label. Do not remove!</i></p>	