




## Dining Bench CF501118

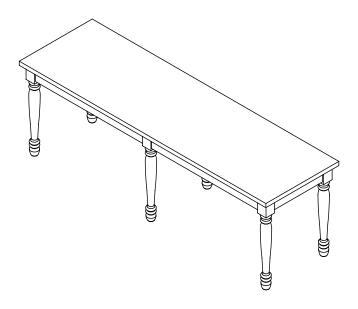

## **PART LIST**

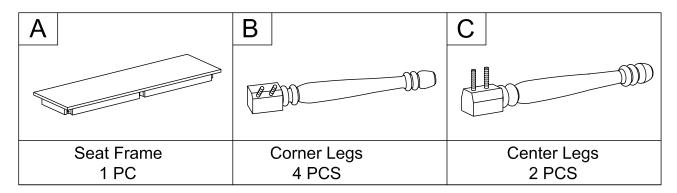


## HARDWARE LIST

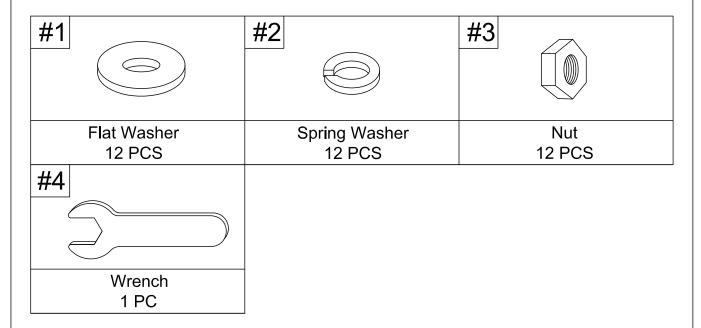

Step 1. Carefully turn seat frame (part #A) upside down on a soft flat surface, such as carpet, as shown below. Attach corner legs (part #B) to seat frame (part #A) using flat washers (part #1), spring washers (part #2), nuts (part #3) and wrench (part #4).

Note: Please do not fully tighten bolts until unit is fully assembled.

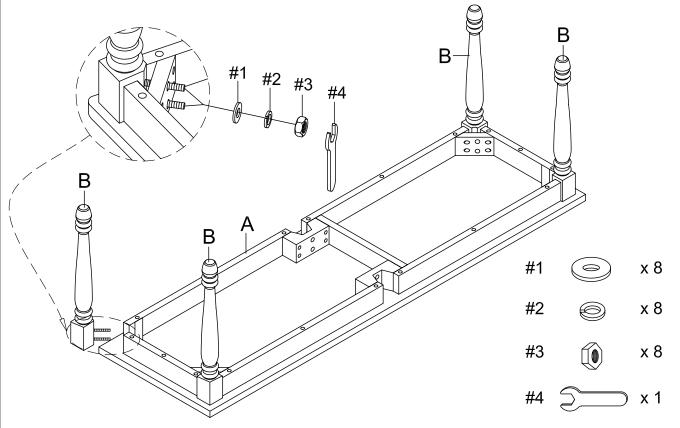

Step 2. Attach center legs (part #C) to seat frame (part #A) using flat washers (part #1), spring washers (part #2), nuts (part #3) and wrench (part #4).

