
 
 
 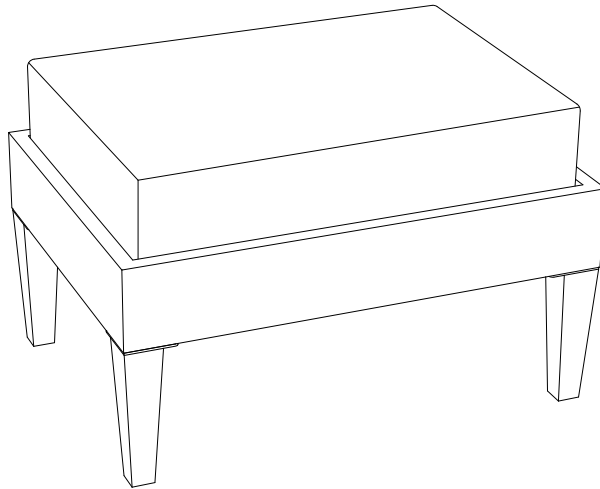




 


Outdoor Wicker Ottoman
CO6335



PART LIST


A 	B 	C 
<p>Leg 8 PCS</p>	<p>Top Panel 2 PCS</p>	<p>Cushion 2 PCS</p>




HARDWARE LIST

#1 	#2 	#3 
<p>M6*20mm</p> <p>Bolt 24 PCS (Extra 1)</p>	<p>M6mm</p> <p>Flat Washer 24 PCS (Extra 1)</p>	<p>Allen Wrench 1 PC</p>

Step 1. Lay top panel (part B) upside down on a soft flat surface, such as carpet, as shown below. Attach legs (part A) to top panel (part B) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

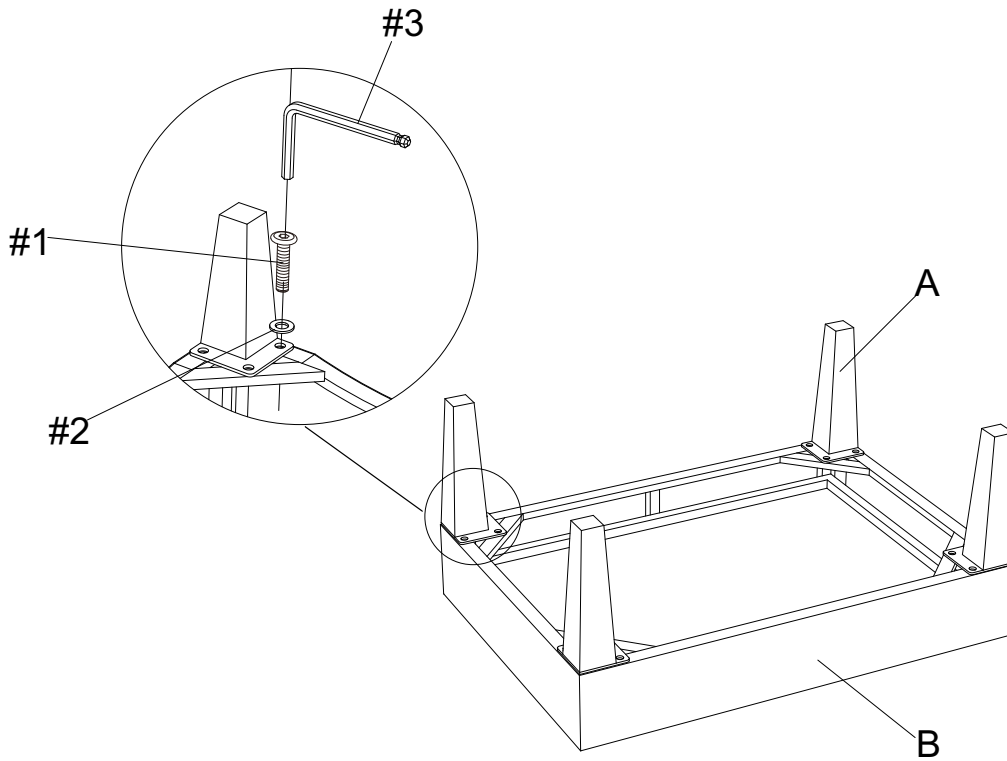NOTE: Please fully tighten all bolts at this time.



#1		x12
#2		x12
#3		x1

Step 2. Carefully turn unit upright. Place cushion (part C) on top panel (part B) as shown below. Repeat steps 1-2 to assemble remaining ottoman.

