

COASTER[®]
FINE FURNITURE

950306

SWIVEL STOOL

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



[www.COASTERFURNITURE.COM](http://www.coasterfurniture.com)


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Warning!






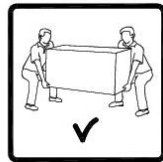


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.





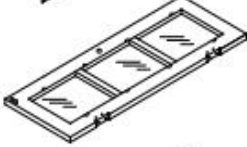
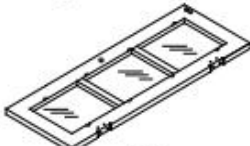
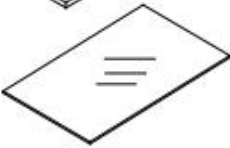


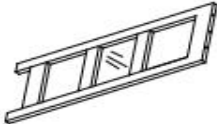

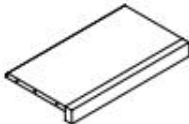ASSEMBLY TIME

15 MINUTES

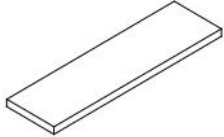PARTS IDENTIFICATION

	PARTNAME	FIGURE	QTY
A	LEFT SIDE FRAME		1
B	MIDDLE FRAME		1
C	RIGHT SIDE FRAME		1
D	BOTTOM PANEL		2
E	FRONT RAIL		2
F	BACK RAIL		2

	PARTNAME	FIGURE	QTY
G	TOP PANEL		1
H	MIRROR PANEL		4
I	UPPER & LOWER BACK PANEL		2
J	MIDDLE BACK PANEL		1
K	RIGHT DOOR		2
L	LEFT DOOR		2
M	SHELF		4
N	GLASS CLAMP		2

HARDWARE IDENTIFICATION				
NO	HARDWARENAME		FIGURE	QTY
1	WOOD DOWEL	8*30mm		15
2	CAM BOLT	15*12mm		22
3	CAM LOCK	35*11mm		22
4	LONG BOLT	1/4*30mm		4
5	ROUND HEAD SHORT SCREW	6*3*12mm		39
6	SHORT BOLT	5/32*20mm		4
7	KNOB	28*24mm		4
8	HINGE	60*20*1.2		8
9	FLAT HEAD SCREW	5*3*12mm		56
10	SHELF HOLDER	25*15*12		16
11	MAGNET	45*15*18		4
12	ROUND HEAD LONG SCREW	6*3*14mm		8

