

### ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

### 902916 ACCENT TABLE

REVISION 0: 09/25/2017 REVISION 1: 08/20/2019

PAGE 1 OF 7

COASTERFURNITURE.COM



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 25 MINUTES

#### PARTS IDENTIFICATION

Α	TOP PANEL	1PC
В	BACK GLASS	1PC
С	SUPPORT GLASS	1PC
D	BOTTOM PANEL	1PC
E	ACRYLIC GLASS GROOVE	1PC




### HARDWARE IDENTIFICATION

1	LONG BOLT (1/4" x 1-1/2" SR)	4PCS
2	SHORT BOLT (1/4" x 1-1/4" SR)	2PCS
3	NUT (1/4" x 5/8" SR)	2PCS
4	CYLINDER NUT (ø35mm)	4PCS
5	LARGE PLASTIC WASHER (ø32mm)	8PCS
6	SMALL PLASTIC WASHER (ø19mm)	2PCS
7	WASHER (ø16mm)	4PCS
8	NUT WASHER (5/16")	2PCS
9	FOOT PIN (Ø18 x 17mm)	4PCS
10	ALLEN WRENCH (4mm)	2PCS




STEP 1


Do not tighten until each step is completed or instructed.

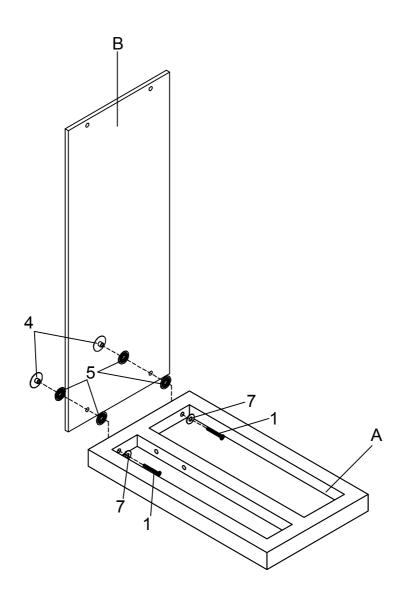



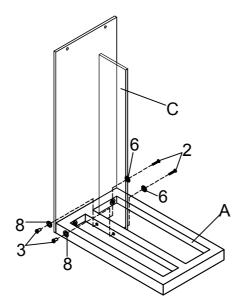


#### STEP 3

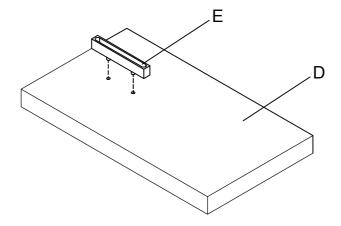


PAGE 5 OF 7

COASTERFURNITURE.COM



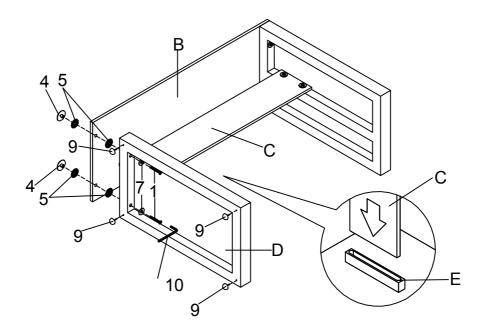

#### STEP 5 COMPLETE

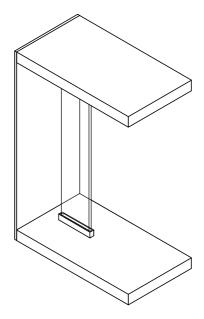

How to clean Acrylic product:
Using a dry soft microfiber cloth, lightly brush off any dust.
For additional care, dampen the cloth with warm water.
For deepest cleaning, use an Acrylic cleaner.



Product Size: 254 X 470 X 629 H (MM)

Product Size : 10" X 18  $\frac{1}{2}$ " X 24  $\frac{3}{4}$ "

