

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



www.coastercompany.com

 
ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A. NIGHT STAND

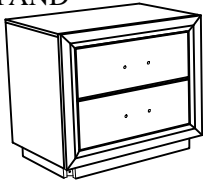





1 PC

B. LEG



 
4 PCS

HARDWARE IDENTIFICATION

- | | | | |
|---|---|--------------|------|
| 1 |  | BOLT | 4PCS |
| 2 |  | LOCK WASHER | 4PCS |
| 3 |  | FLAT WASHER | 4PCS |
| 4 |  | ALLEN WRENCH | 1PC |

NOTE: PHILLIPS HEAD SCREW DRIVER IS REQUIRED IN THE ASSEMBLY PROCESS; HOWEVER, MANUFACTURER DOES NOT PROVIDE THIS ITEM.

STEP 1

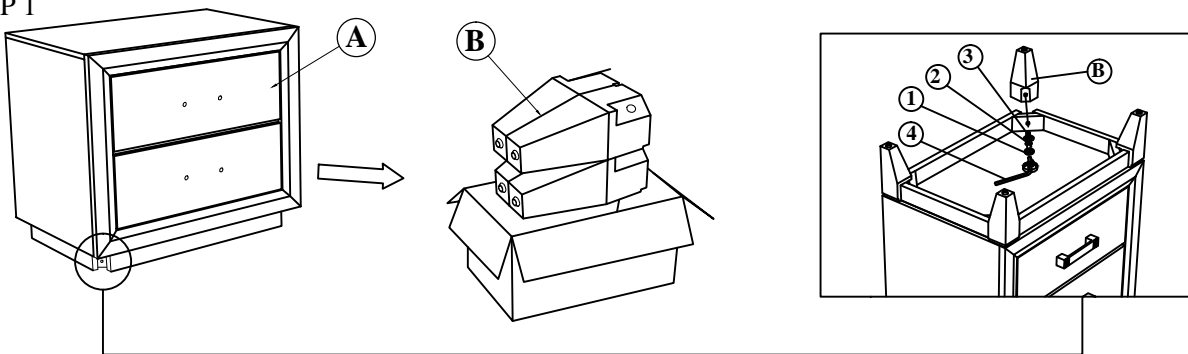

STEP 2

