



*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

**506551
SOFA**

REVISION 1:06/20/2018
REVISION 2:05/08/2019

COASTERFURNITURE.COM

PAGE 1 OF 3

ITEM: 506551

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.








WARNING!

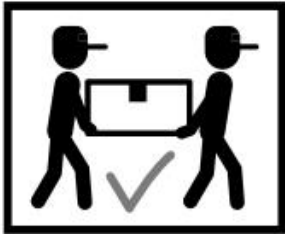1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME 15 MINUTES

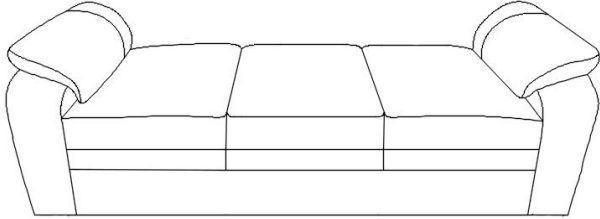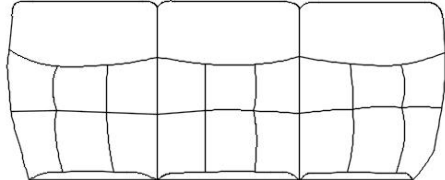PARTS IDENTIFICATION


| | | | |
|----------|---|------------------|-------------|
| A |  | BASE | 1PC |
| B |  | BACK | 1PC |
| C |  | LEFT EAR | 1PC |
| D |  | RIGHT EAR | 1PC |
| E |  | LEG | 4PCS |

ITEM: 506551




ASSEMBLY INSTRUCTIONS


STEP 1

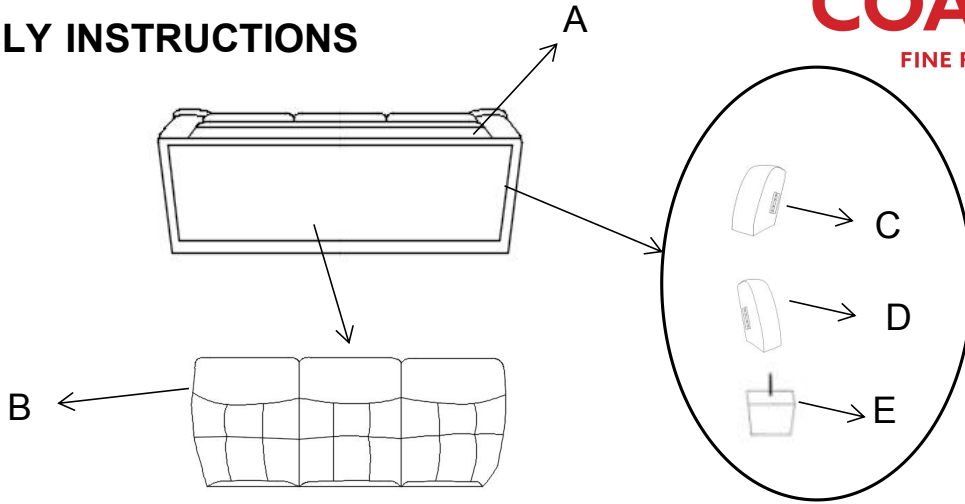

STEP 2

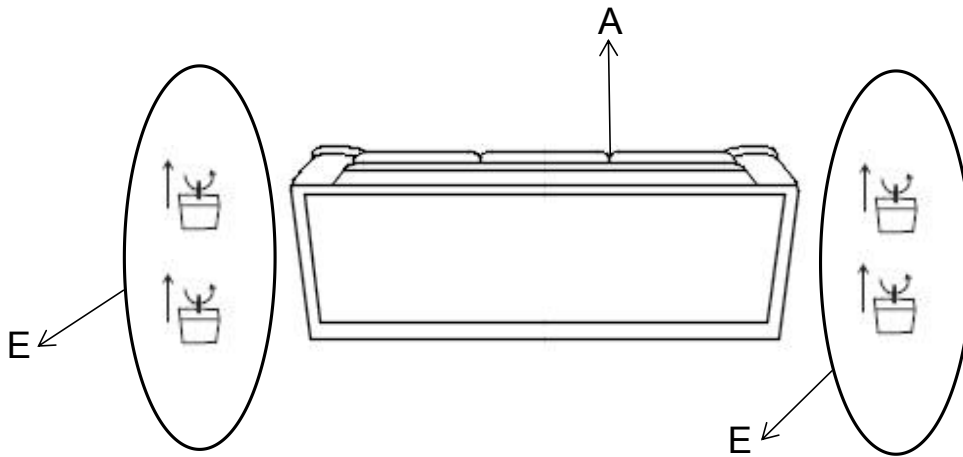

STEP 3

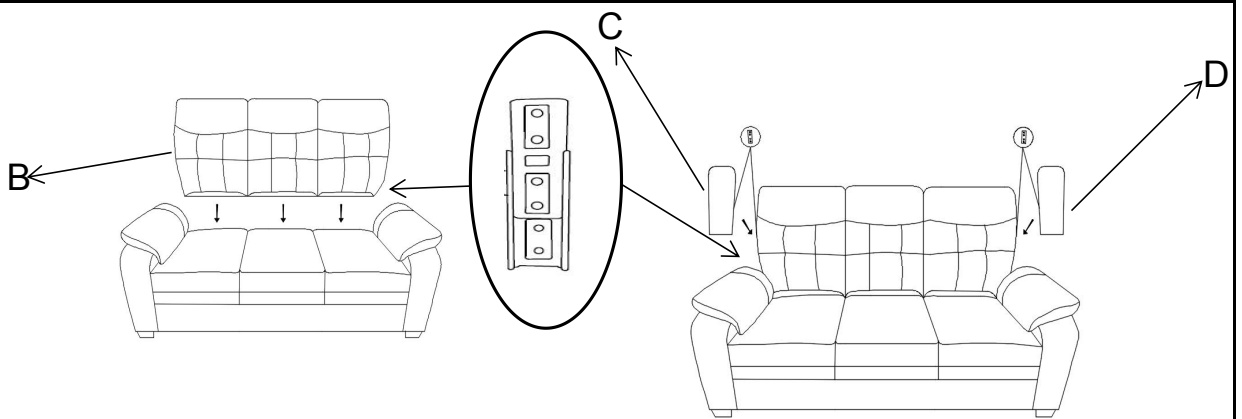

STEP 4

