

721891

TV CONSOLE

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



www.coastercompany.com

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.





ASSEMBLY TIME | 60 MINUTES

PARTS IDENTIFICATION:

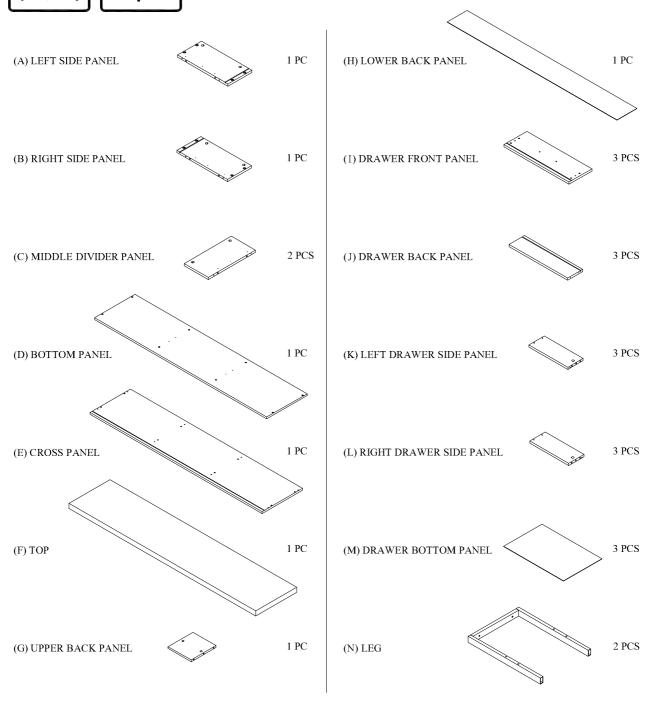

Z	HARDWARE IDENTIFICATION						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	10	HANDLE BOLT (Ø4x28mm BLK)		6 PCS
2	WOODEN DOWEL \$\phi 8x30\text{mm}\$		32 PCS	11	SQUARE FOOT	0	2 PCS
3	CAM BOLT (Ø7x35.5mm SR)		16 PCS	12	SCREW (Ø4x17mm RBW)		4 PCS
4	CAM LOCK (Ø15x12mm SR)		16 PCS	13	LONG BOLT (M6x38mm BLK)		12 PCS
5	LONG SCREW (Ø4.5x42mm SR)	attituti (1)	8 PCS	14	ALLEN WRENCH (4mm SR)		1PC
6	SCREW (Ø4.3x35mm SR)	**************************************	12 PCS	15	FLOOR PROTECTOR 40x20mm		4 PCS
7	GLIDES (L = 300mm WHT)	CL 62 0 0 0 0 0 0 0 CR CR DD DR	3 SET	16	FLOOR PROTECTOR 18x18mm		2 PCS
8	GLIDES SCREW (Ø3x10mm SR)		36 PCS	17	STICKER Ø20mm		4 PCS
9	HANDLE L=137.5mm		3 PCS				

Z7,Z9,Z11 not included in blister packaging.



