


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

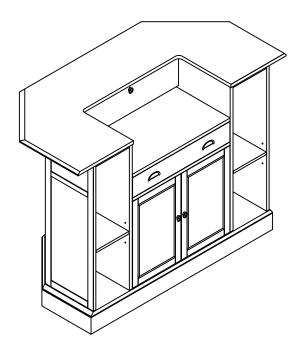

Fine Furniture for every stage of life

100175(B1-B2) *Bar unit*

PAGE 1 OF 5

ITEM: 100175



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!




- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



Assembly time

15 minutes

PARTS IDENTIFICATION

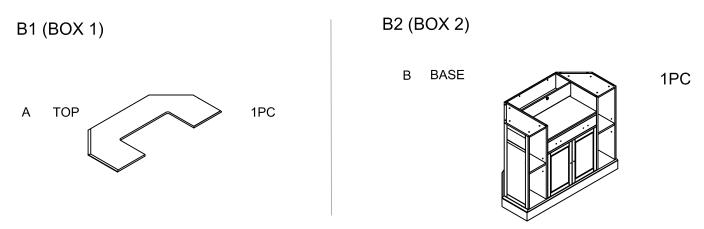

HARDWARE IDENTIFICATION


Z-B2(BOX 2)-Hardware pack is located in 100175B2

1	ALLEN WRENCH	4mm BLACK	1PC	4	FLAT WASHER	0	Ø19mmxØ6.5mm BLACK	12PCS
2	SHORT BOLT	Ø1/4"x1/2" BLACK	4PCS	5	LONG BOLT [Ø1/4"x1-1/8" BLACK	8PCS
3	LOCK WASHER	1/4" BLACK	12PCS	6	ANGLE IRON		23x19x2mm BLACK	2PCS

ITEM: 100175


STEP 3



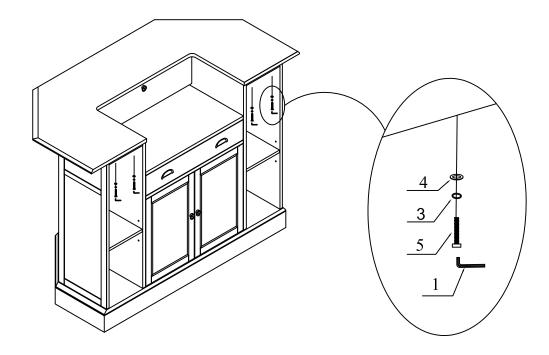

STEP 4

COMPLETE

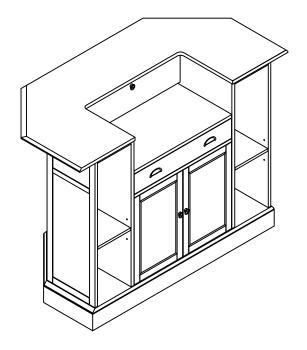




ITEM: 100175

COASTER

ASSEMBLY INSTRUCTIONS PRODUCT DIMENSION

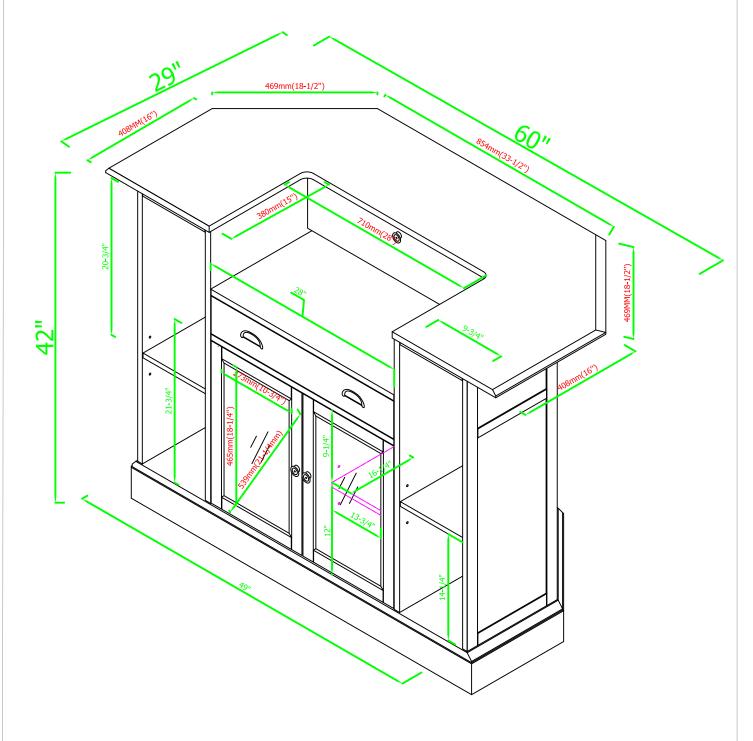

Note: Dimension tolerance ±5%