

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**192492**  
**DINING CHAIR**

ITEM: 192492

## ASSEMBLY INSTRUCTIONS




### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





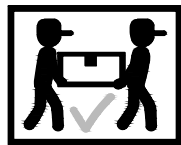


### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.






ASSEMBLY TIME 15 MINUTES

## PARTS IDENTIFICATION

A. FRONT LEFT LEG		2PCS	D. BACK LEFT LEG		2PCS
B. FRONT RIGHT LEG		2PCS	E. SEAT AND BACK		2PCS
C. BACK RIGHT LEG		2PCS			

## HARDWARE PACKAGE

1. ALLEN WRENCH (Ø1/4"*57mm-GOLD)		2PCS	3. FLAT WASHER (Ø16mm-GOLD)		24PCS
2. ALLEN BOLT (Ø1/4"*15mm-GOLD)		24PCS			


NOTE:QUANTITIES SHOWN ARE FOR TWO CHAIRS

ITEM: 192492

ASSEMBLY INSTRUCTIONS



STEP 1

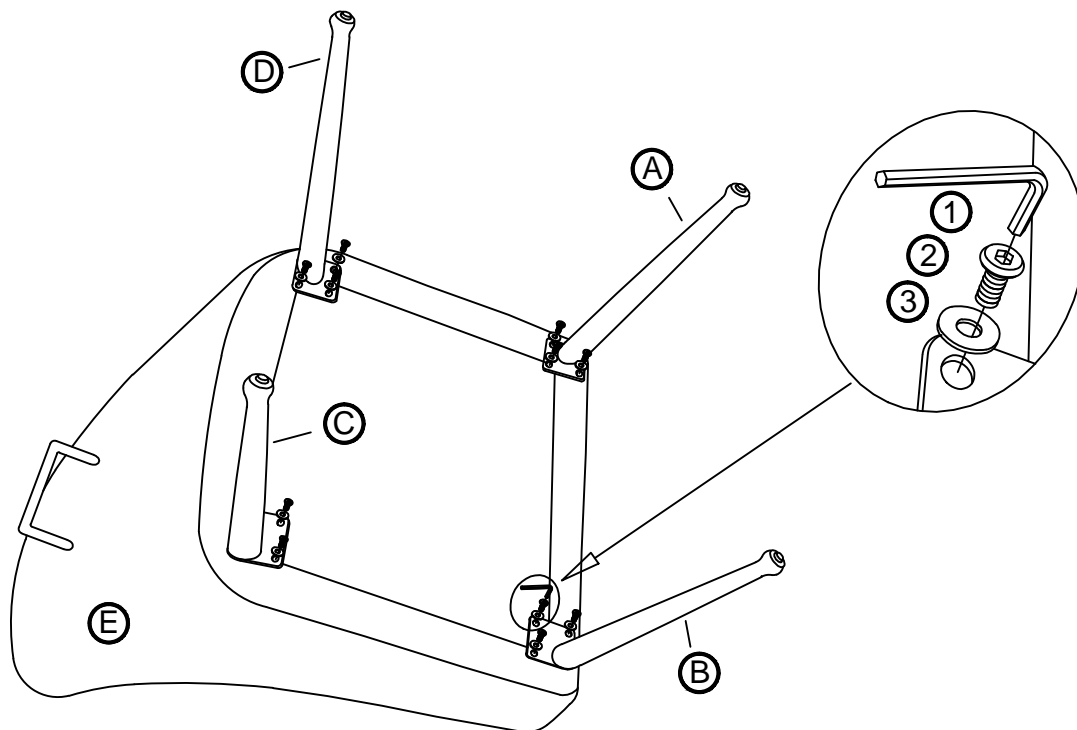

STEP 2  
COMPLETE

