



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

722898

Coffee Table

REVISION 1: 11/26/2019

ITEM:722898

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intend for commercial establishments.



ASSEMBLY TIME

20 MINUTES


PARTS IDENTIFICATION

A TABLE TOP




1PC

B LOWER LEG FRAME

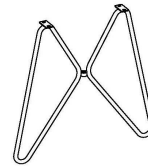

1PC

 C UPPER LEG FRAME



1PC

HARDWARE IDENTIFICATION

1 BOLT

1/4"x7/8"



9PCS

2 SPRING WASHER

1/4"



9PCS

3 WASHER

1/4"



9PCS

4 ALLEN KEY

4mm




1PC

ITEM:722898

ASSEMBLY INSTRUCTIONS




STEP 1

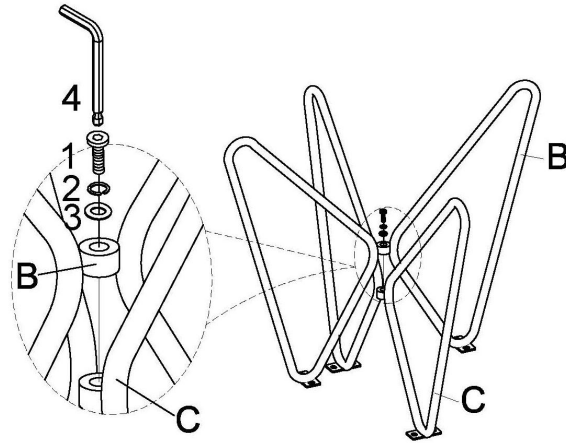

1		1PC
2		1PC
3		1PC
4		1PC

STEP 2

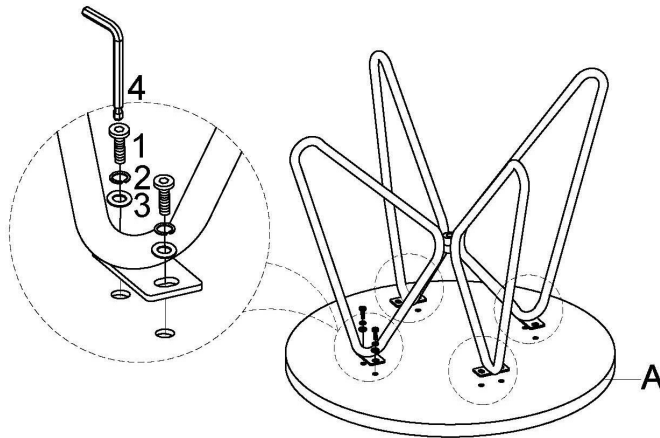


1		8PCS
2		8PCS
3		8PCS
4		1PC

STEP 3

COMPLETE



ITEM:722898

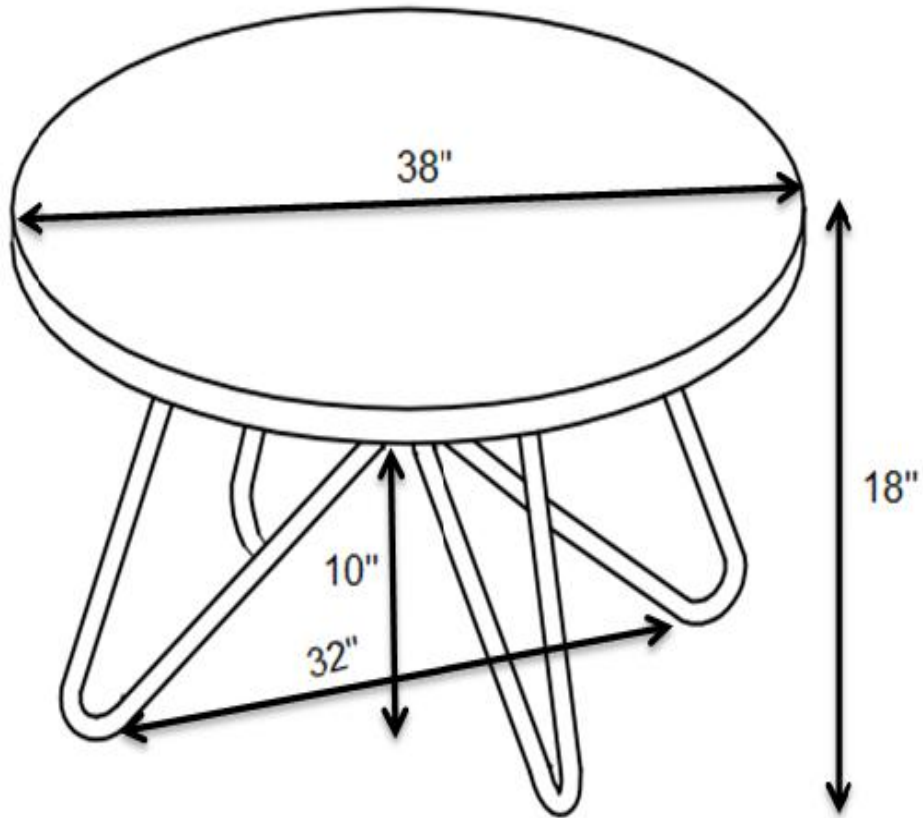

Note: Dimension tolerance $\pm 5\%$