

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

## 950724 TALL CABINET

REVISION 0 : 04/20/2017 REVISION 1 : 07/16/2019 REVISION 2 : 12/16/2019

**PAGE 1 OF 13** 

COASTERFURNITURE.COM

#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!


Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
 This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

**50 MINUTES** 

### PARTS IDENTIFICATION

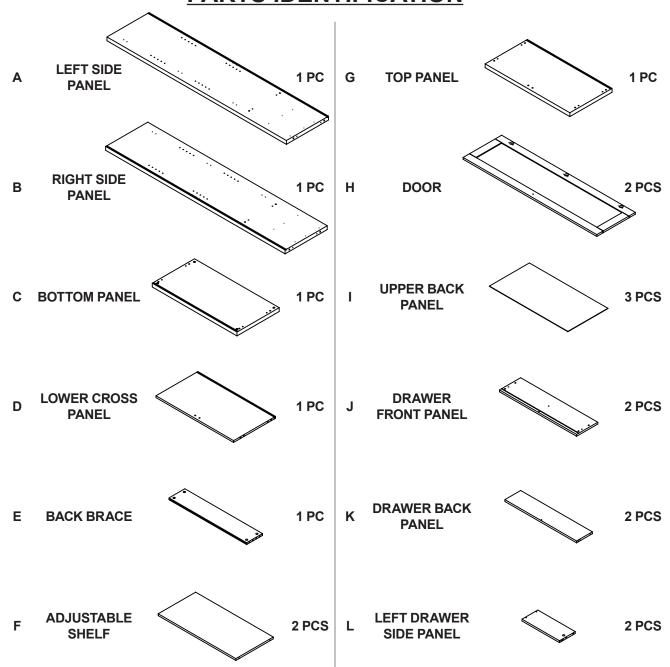

#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



M RIGHT DRAWER SIDE PANEL	2 PCS	O DRAWER 2 PCS
N DRAWER SUPPORT	2 PCS	P DOWN BACK PANEL 1 PC


Z	Z HARDWARE IDENTIFICATION										
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY				
1	GLUE 40g		1 PC	11	HANDLE		4 PCS				
2	WOODEN DOWEL Ø 8x30mm		24 PCS	12	HANDLE BOLT	and the same of th	4 PCS				
3	CAM BOLT Ø 7x35.5mm		14 PCS	13	HINGE		6 PCS				
4	CAM LOCK Ø 15x12mm		14 PCS	14	HINGE SCREW Ø 4x15mm	ALLILIA (M. A.	24 PCS				
5	BOLT Ø 9.5x55mm	and the second	8 PCS	15	FOOT	<b>(</b>	4 PCS				
6	DRAWER SCREW Ø 4.3x35mm	ANTITUTE OF	10 PCS	16	FOOT BOLT M6x42mm		4 PCS				
7	PIN Ø 4.9x8mm		8 PCS	17	FIXER		6 PCS				
8	DOOR CATCH		2 PCS	18	FIXER SCREW Ø 3x19mm		6 PCS				
9	GLIDES L = 350mm	CL C	2 SET	19	PLASTIC BACK BRACE		1 PC				
10	GLIDES SCREW Ø 3x12mm	Dame	24 PCS	20	STICKER Ø 20mm		3 PCS				


Z9,Z11,Z12,Z13,Z15,Z19 not included in blister packaging.


#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM:950724 STEP 1 **B** 9(CR) 9(CL) INCORRECT ⊜, CORRECT 9 (CL) 10 Apply glue on all wooden dowels to ensure integrity of the structure.

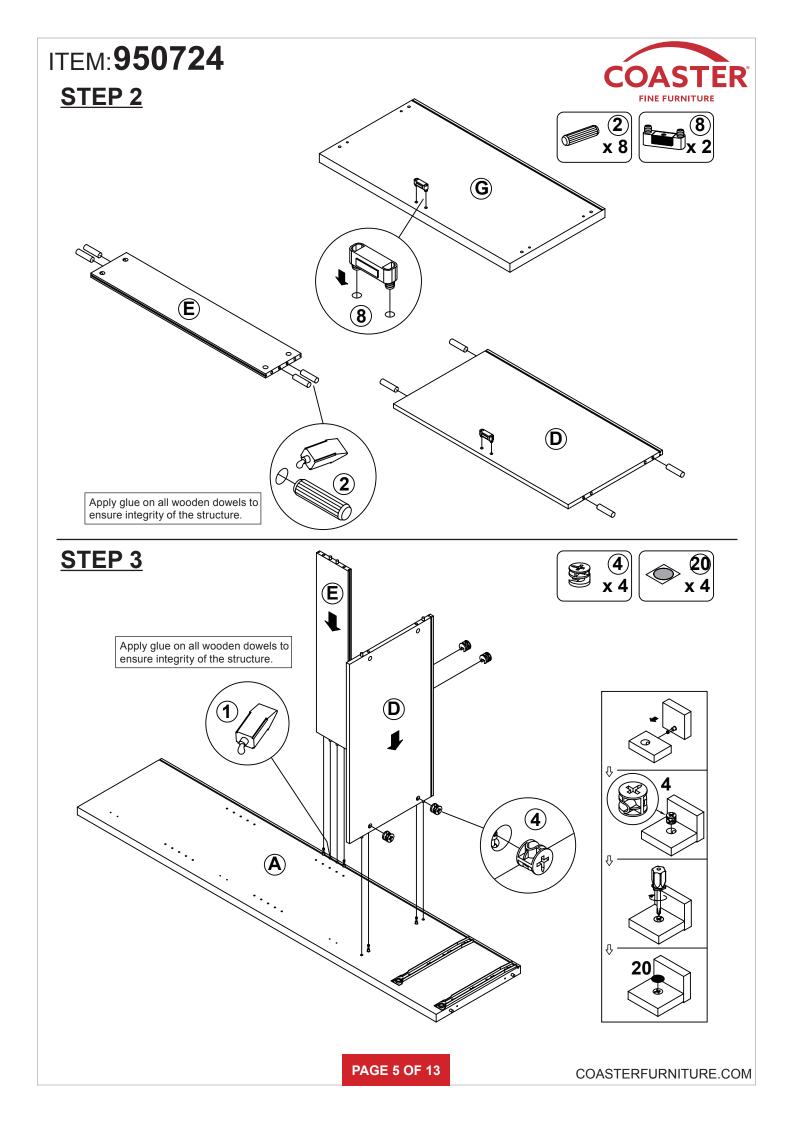

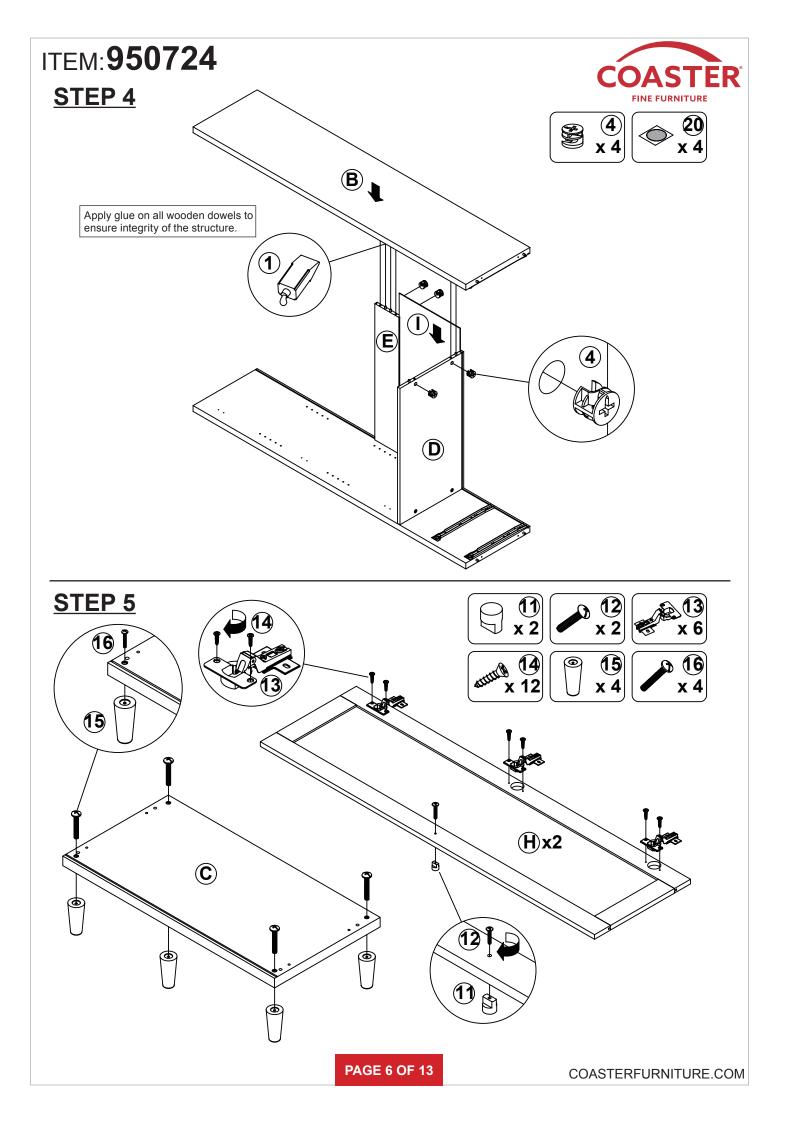


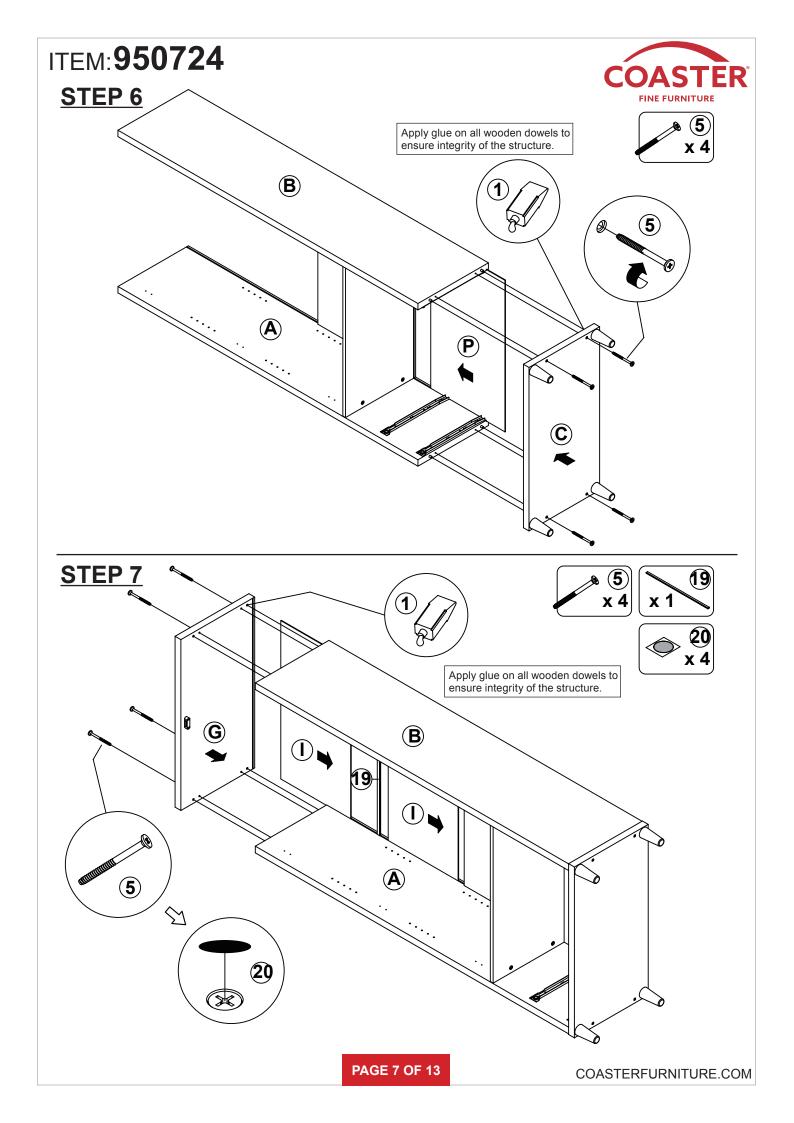


 








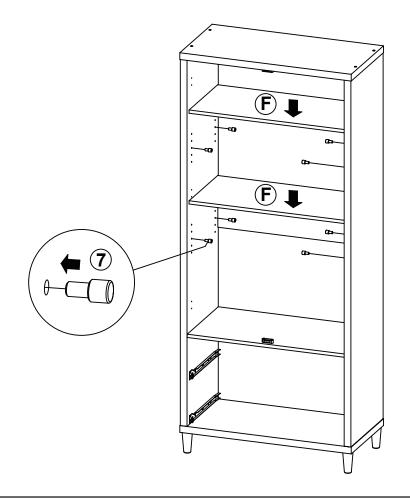

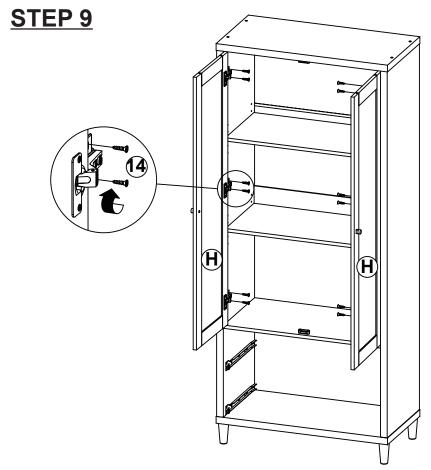




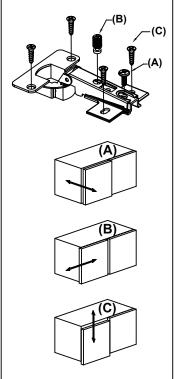


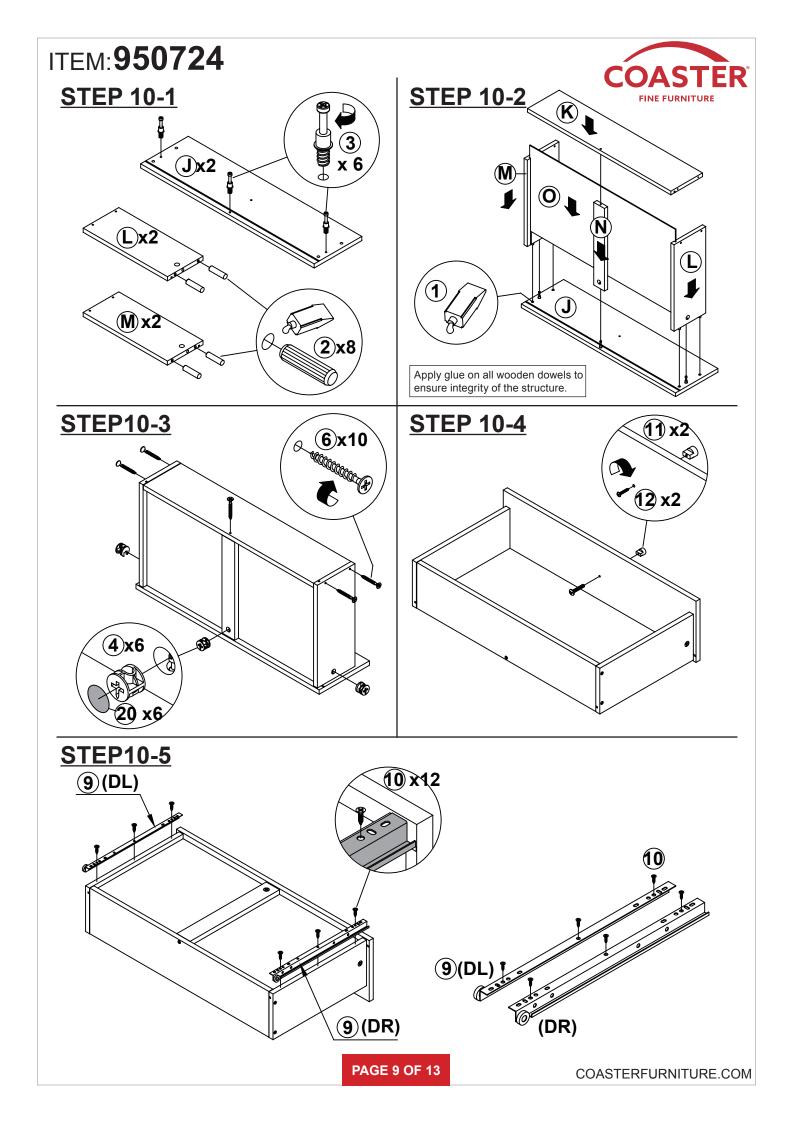


# ITEM: **950724 STEP 11**



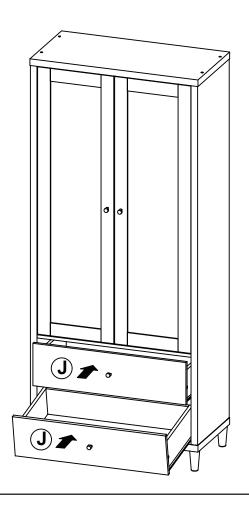

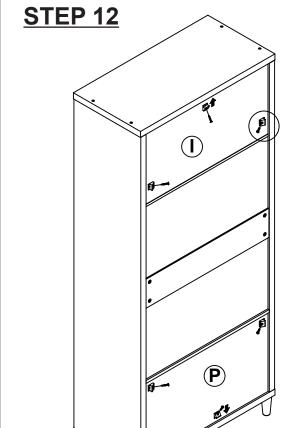



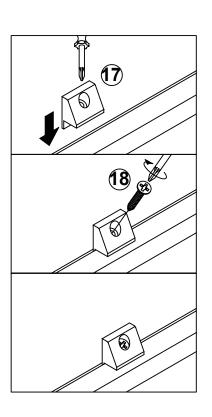


**PAGE 10 OF 13** 

COASTERFURNITURE.COM

## **STEP 13**

**COMPLETE** 




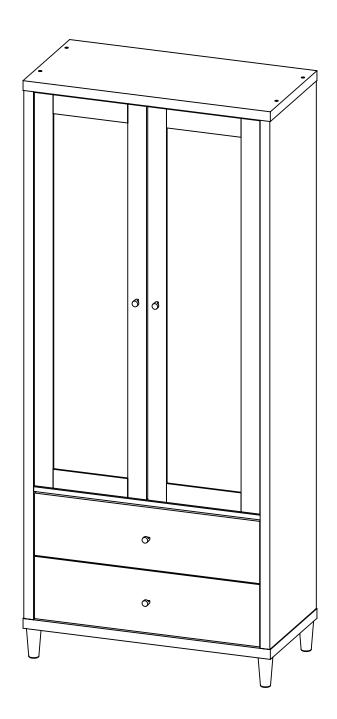








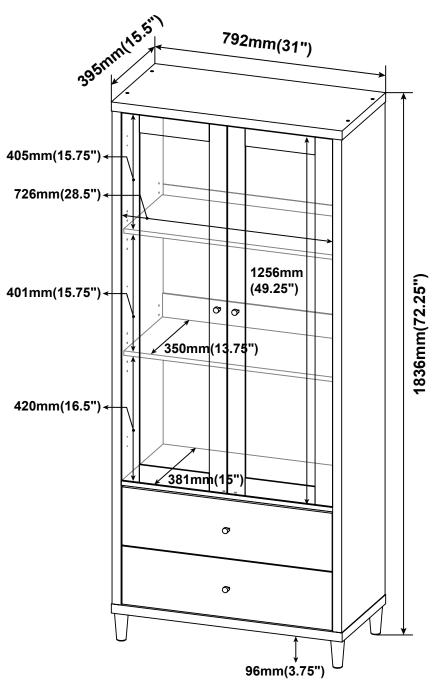

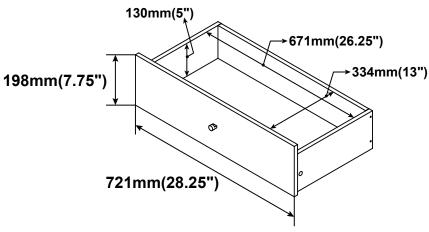

Note: Dimension tolerance ±5%

## **ANTI-TIPPING INSTALLMENT INSTRUCTIONS**

#### **FURNITURE TIPPING RESTRAINT**

#### **WARNING**

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
- 2. Position the case piece against the wall in the desired location.
- 3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
- 4. Drill a 1-1/4" hole in the spot you marked.
- 5. Tap in plastic wall plug.
- 6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tiping kit in the middle of the case piece if only have one set of anti-tipping kit.)

