

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



COASTERFURNITURE.COM

REVISION 0 : 04/24/2019 REVISION 1 : 05/28/2019 REVISION 2 : 12/03/2019

PAGE 1 OF 3

ITEM: 223142 **ASSEMBLY INSTRUCTIONS**



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

-5

2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME	10 MINUT

PARTS IDENTIFICATION

Α	NIGHTSTAND		1PC		
В	LEG (WITH 'B' LABEL)		2PCS		
С	LEG (WITH 'C' LABEL)		2PCS		
HARDWARE IDENTIFICATION					
1	WOOD DOWEL (M8Ø x 30MM)		4PCS		
2	BOLT (M6 x 40MM - RBW))	4PCS		
3	LOCK WASHER (1/4" x 12Ø - RBW)	Ø	4PCS		
4	FLAT WASHER (1/4" x 19Ø - RBW)	(0)	4PCS		
5	ALLEN WRENCH (M4 x 65MM - BLK)		1PC		
NOTE:					

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

PAGE 2 OF 3



