


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

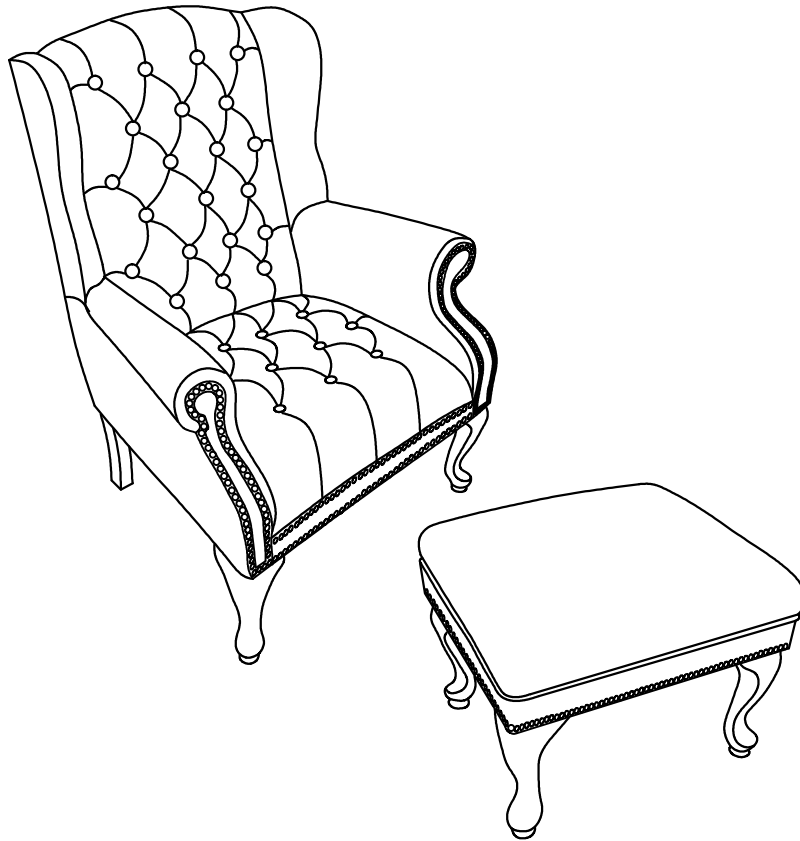

Fine Furniture for every stage of life

3932B
Accent Chair W/Ottoman

REVISION 0 : 11/30/2016
REVISION 1 : 01/03/2019
REVISION 2 : 06/08/2019
REVISION 3 : 09/23/2019

ITEM:3932B



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!




 


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.








ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

A	SEAT CUSHION		1PC
B	FRONT LEGS		2PCS
CL	LEFT BACK LEG		1PC
CR	RIGHT BACK LEG		1PC
D	OTTOMAN CUSHION		1PC
E	OTTOMAN LEG		4PCS


Z HARDWARE IDENTIFICATION

NO	DESCRIPTION	FIGURE	Q' TY
1	ØLOCK WASHER 5/16"		8PCS
2	ØFLAT WASHER 5/16"		8PCS
3	ØBOLT 5/16X1-1/4"		8PCS
4	ØALLEN KEY 5mm		1PC
5	ØSCREW 8X1-3/4"		16PCS


ITEM:3932B

ASSEMBLY INSTRUCTIONS

STEP: 1

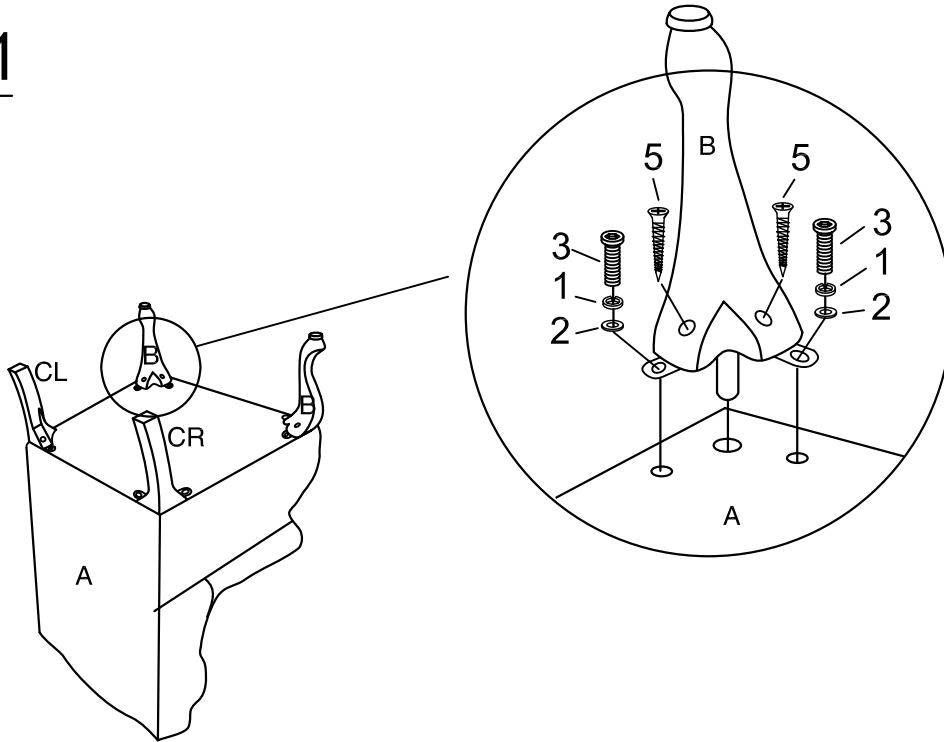

STEP: 2

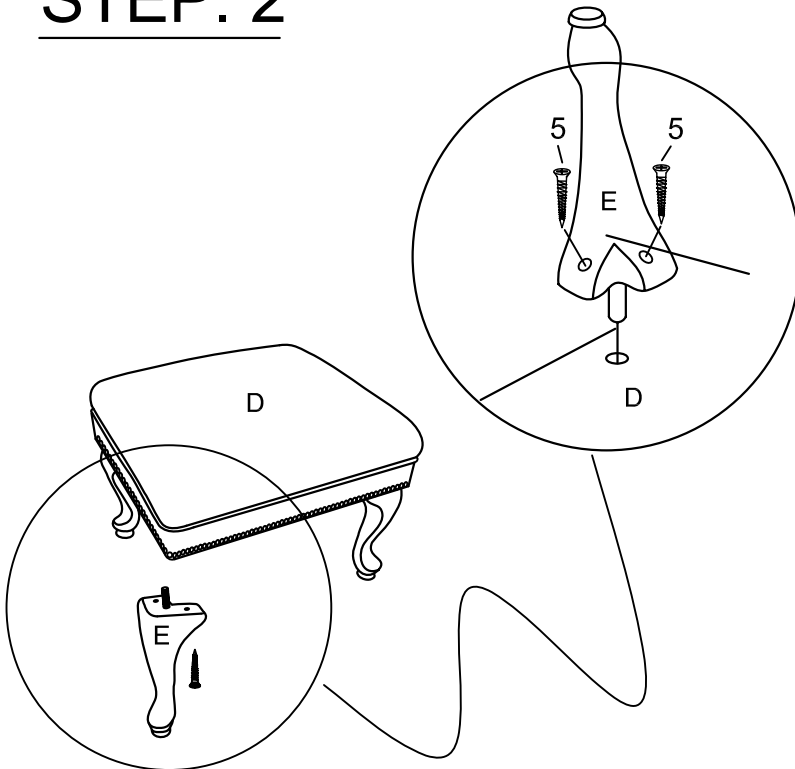

STEP: 3

