

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

551302

551301



Fine Furniture for every stage of life

551301
CORNER

ITEM: **551301**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

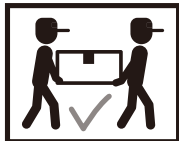


ASSEMBLY TIME

30 MINUTES


PARTS IDENTIFICATION

A	CORNER SOFA		1PC	B	LEG		4PCS
---	-------------	-----------------------------------------------------------------------------------	-----	---	-----	-------------------------------------------------------------------------------------	------



HARDWARE IDENTIFICATION

Z01	ALLEN WRENCH (D 5mm - RBW)		1PC	Z03	WASHER (10 x 25mm - RBW)		8PCS
Z02	BOLT (8 x 30mm - RBW)		8PCS				

STEP 1

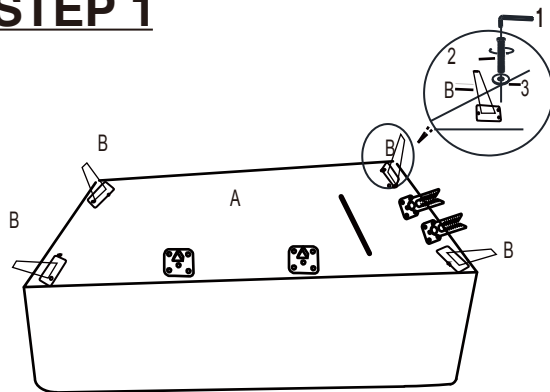

STEP 2

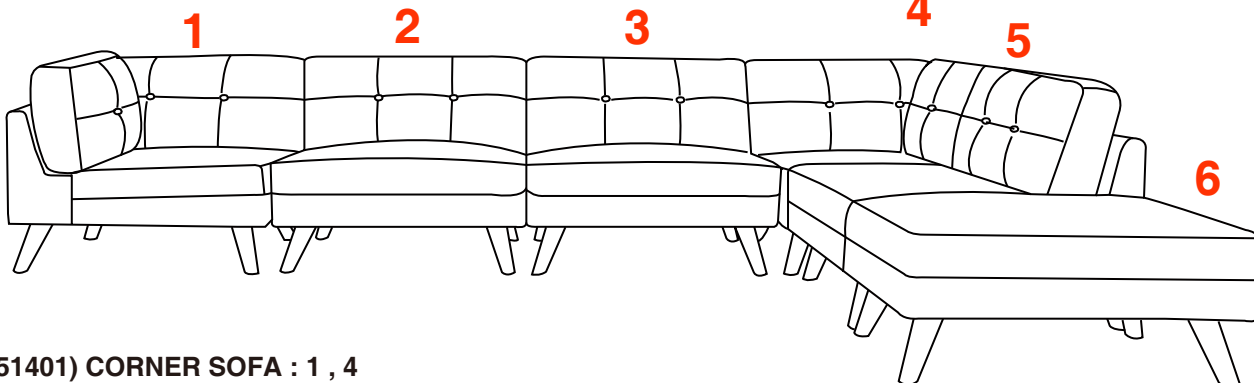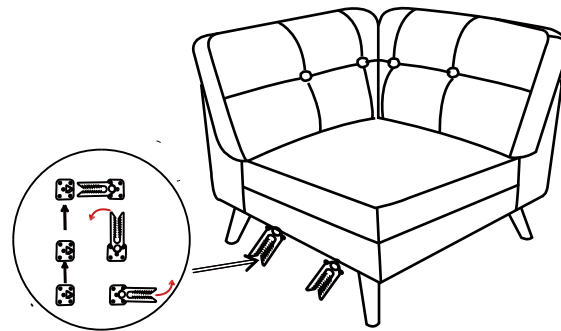

- (551401) CORNER SOFA : 1 , 4
(551402) ARMLESS CHAIR : 2 , 3 , 5
(551403) OTTOMAN : 6

ITEM: **551301**

ASSEMBLY INSTRUCTIONS

PRODUCT DIMENSION

