

**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**



*Fine Furniture for every stage of life*

**705707**  
*End Table*

# ITEM: 705707



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### Warning !!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.




**ASSEMBLY TIME**

**30 MINUTES**


## PARTS IDENTIFICATION

(A) TOP

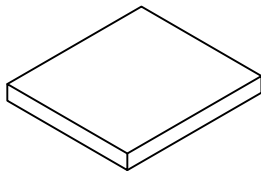


1 PC

(C) LEFT LEG FRAME

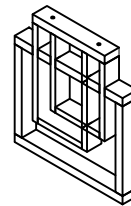


1 PC

(B) SHELF

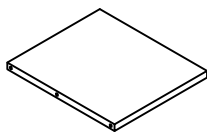

1 PC

(D) RIGHT LEG FRME

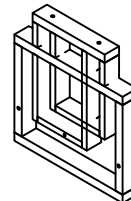







1 PC

ITEM: **705707**



HARDWARE IDENTIFICATION


1	CAMBOLT	L=29mm		6pcs
2	CAMLOCK	Ø15mm		6pcs
3	WRENCH	M5mm		1pc
4	LASTICKER	Ø22mm		10pcs
5	WASHER	Ø8X16X2mm		4pcs
6	INNER HEX SCREW	M8x35mm		4pcs

ITEM: **705707**


**ASSEMBLY INSTRUCTIONS**



STEP 1

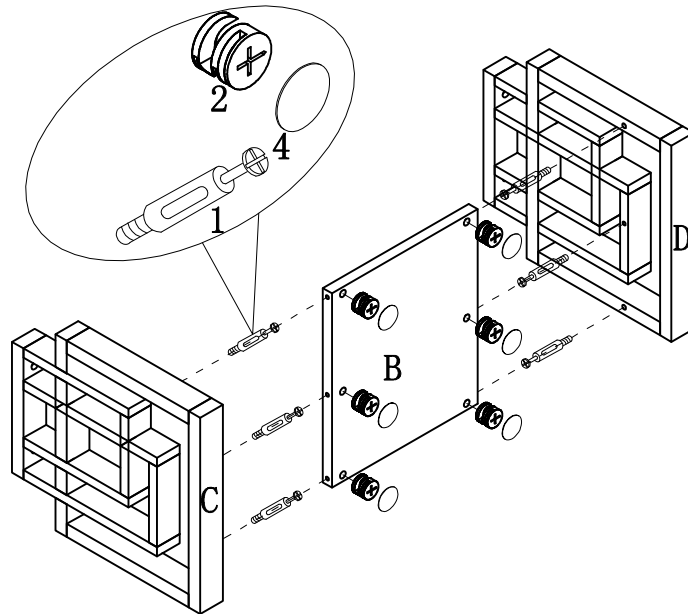

STEP 2

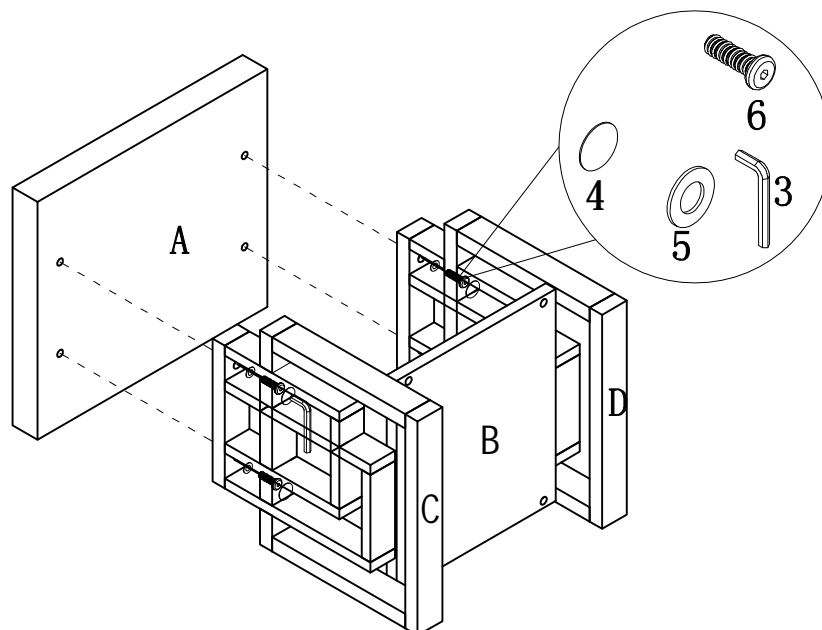

ITEM: **705707**

**DIMENSION**

