

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

102062 Dining Side Chair

REVISION 0: 10/16/2017 REVISION 1: 02/19/2020

ITEM: 102062



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PART IDENTIFICATION

AV	BACK FRAME	1PC
BV	SEAT CUSHION WITH FRAME	1PC
cv	LEFT FRONT LEG	1PC
DV	RIGHT FRONT LEG	1PC

HARDWARE IDENTIFICATION

1	LONG BOLT (Ø5/16" x 3-1/4" - RBW)		4PCS
2	MEDIUM BOLT (Ø5/16" x 2-1/4" - RBW)	(a)—)))))))))	4PCS
3	SHORT BOLT (Ø5/16" x 1-3/4" - RBW)	(1)	2PCS
4	LOCK WASHER (Ø5/16" - RBW)		10PCS
5	FLAT WASHER (Ø5/16" - RBW)		10PCS
6	ALLEN WRENCH (4MM - RBW)		1PC

NOTE:


Quantities shown are for one chair.

ITEM: **102062**


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

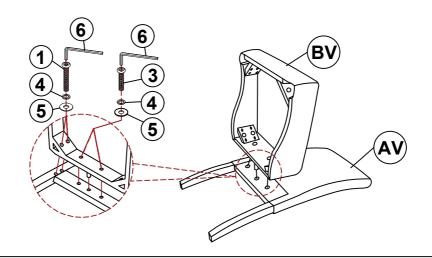

STEP 2

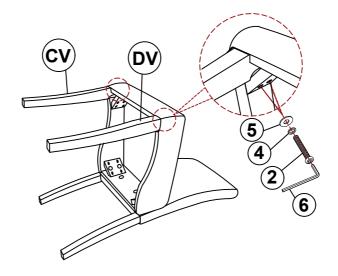

STEP 3 COMPLETE






PAGE 3 OF 3

COASTERFURNITURE.COM

ITEM: 102062



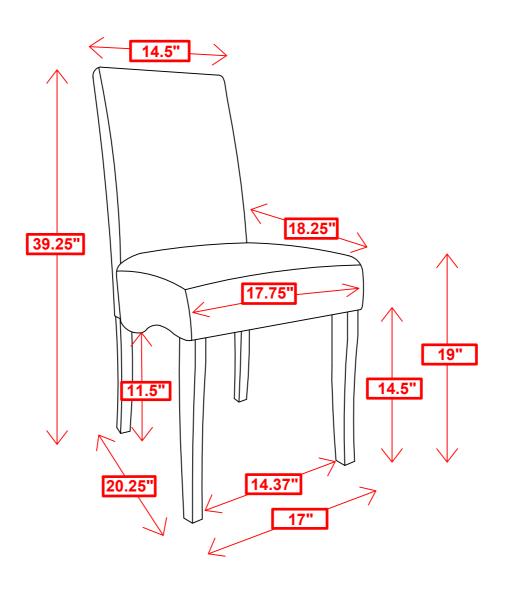

Note: Dimension tolerance ±5%