



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

601711 MOTION SOFA

REVISION 0: 12/12/2019
05/07/2020

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM : 601711



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

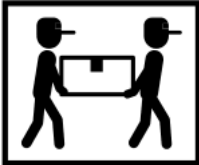

ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A LEFT BACK




1 PC

D BASE

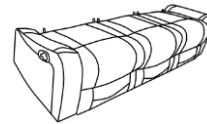

1 PC

B RIGHT BACK

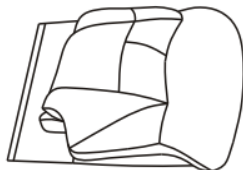


1 PC

E LEFT ARMREST



1 PC

C MIDDLE BACK

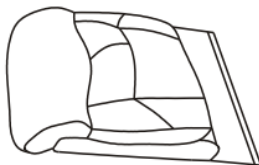


1 PC

F RIGHT ARMREST




1 PC


ITEM : 601711
ASSEMBLY INSTRUCTIONS
STEP 1

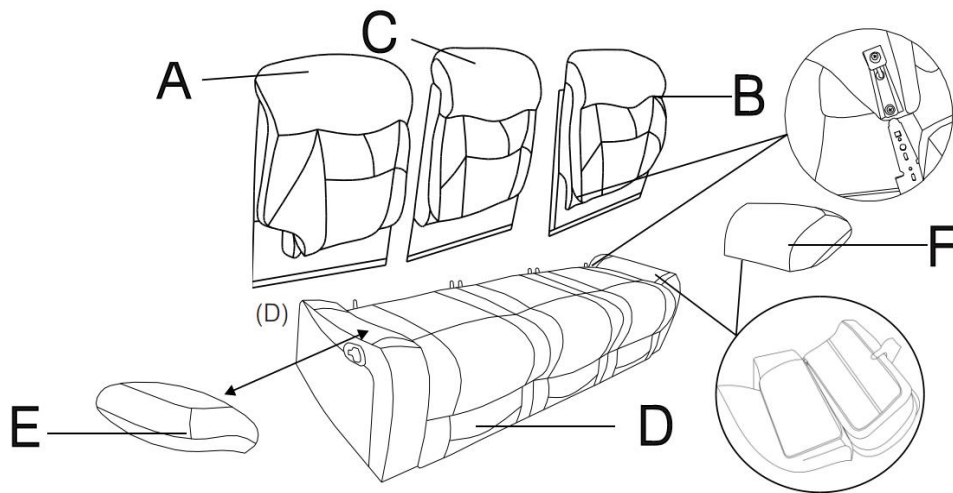




STEP 2

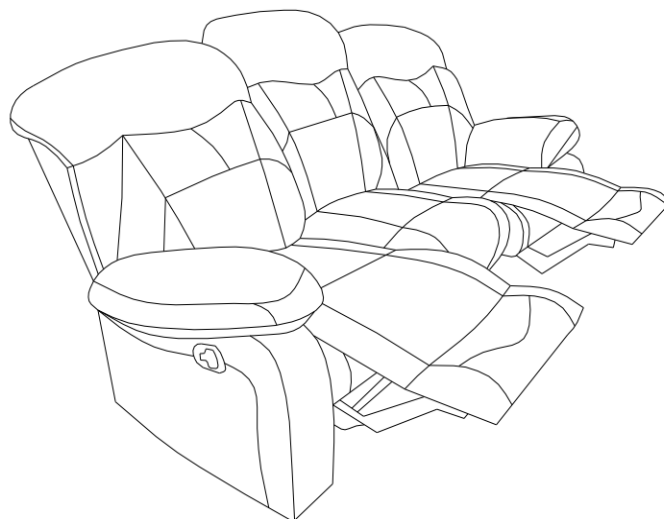

STEP 3

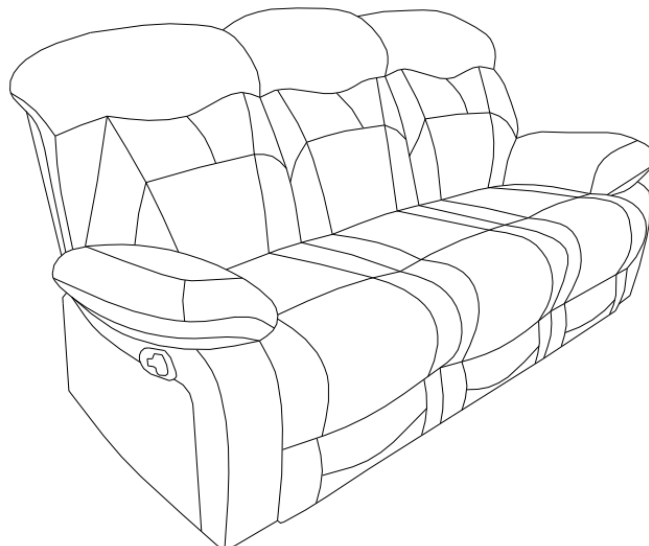

 STEP 4

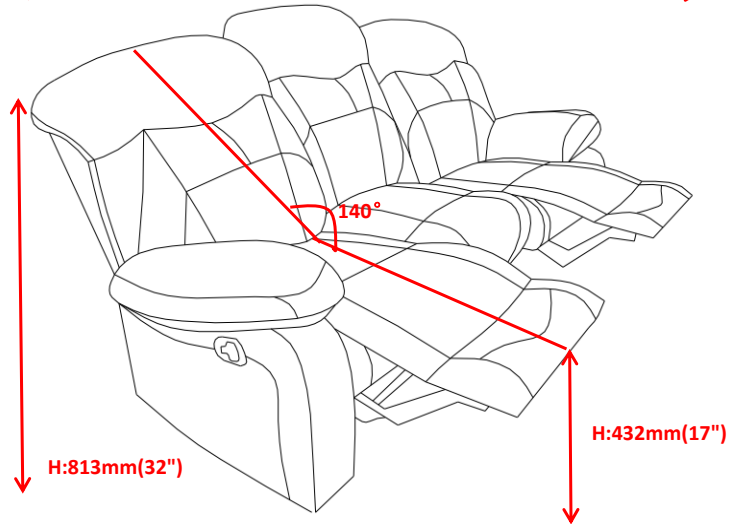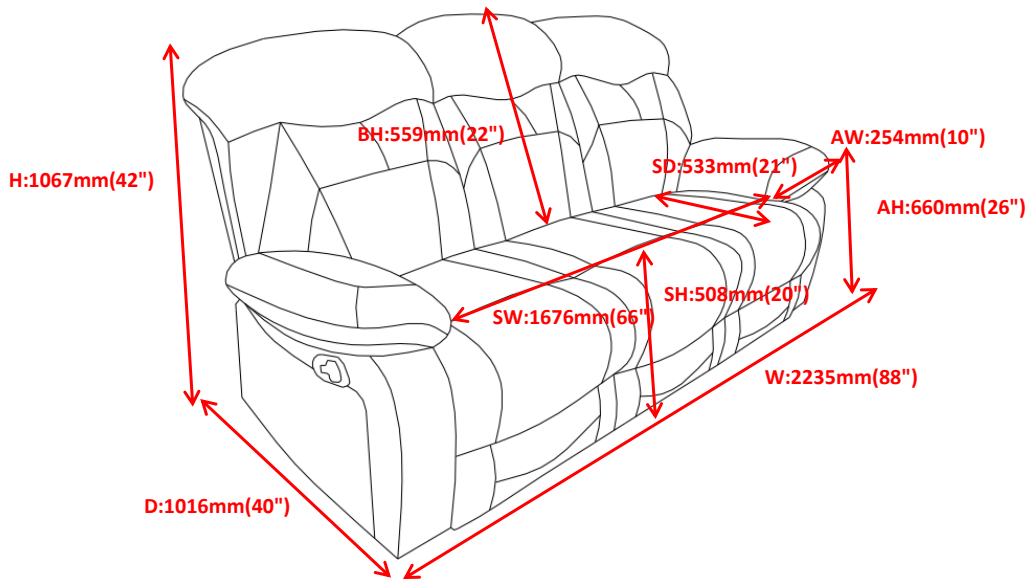

NOTE: Dimension tolerance $\pm 5\%$

