

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

708072  
**TV CONSOLE**

REVISION 0 : 11/20/2018  
REVISION 1 : 06/24/2020

ITEM: 708072



# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




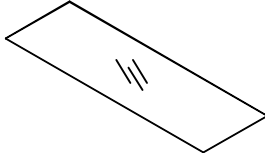 
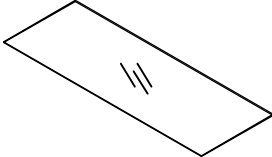 
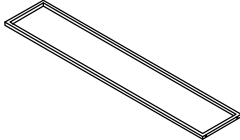 
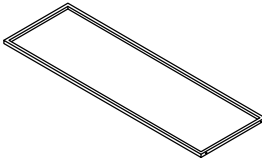 
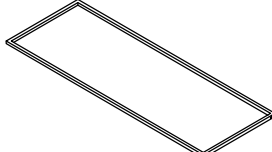 
ASSEMBLY TIME

45 MINUTES

MAX TV SIZE 66"

## PARTS IDENTIFICATION

### B1: GLASS FRAME

A	TOP GLASS		1PC
B	MIDDLE GLASS		1PC
C	BOTTOM GLASS		1PC
D	TOP FRAME		1PC
E	MIDDLE FRAME		1PC
F	BOTTOM FRAME		1PC

# ITEM: 708072

## ASSEMBLY INSTRUCTIONS



G BACK PANEL 1PC

 


H PLASTIC SLEEVE 2PCS



### B2: SIDE FRAME

I LEFT FRAME 1PC

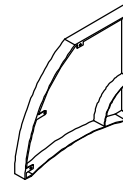

J RIGHT FRAME 1PC



## HARDWARE IDENTIFICATION

1 SHORT BOLT  
(1/4" x 12mm BLK) 4PCS



2 LONG BOLT  
(1/4" x 15mm BLK) 12PCS



3 SUCTION CUP  
( $\phi$ 12 x 2mm) 18PCS



4 CAP  
(20 x 50mm BLK) 4PCS



5 ALLEN WRENCH  
(4mm) 1PC

 


Hardware pack is located in 708072B1


ITEM: 708072

# ASSEMBLY INSTRUCTIONS

## STEP 1

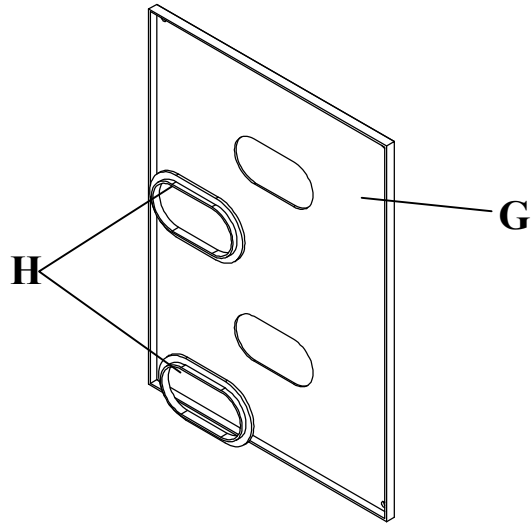


## STEP 2

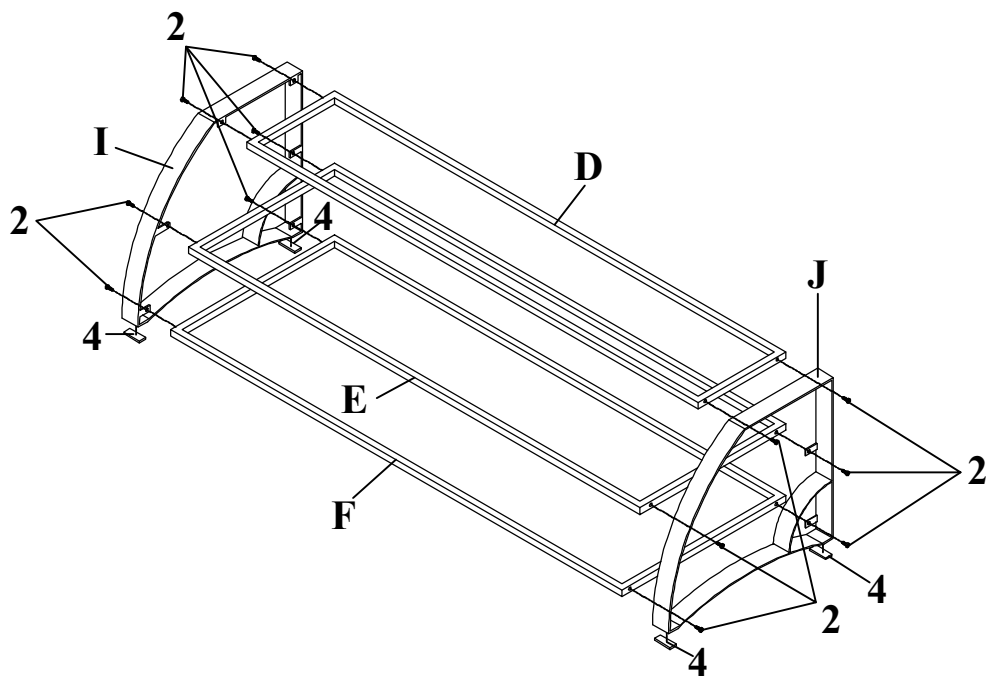 


ITEM: 708072

# ASSEMBLY INSTRUCTIONS


 
## STEP 3

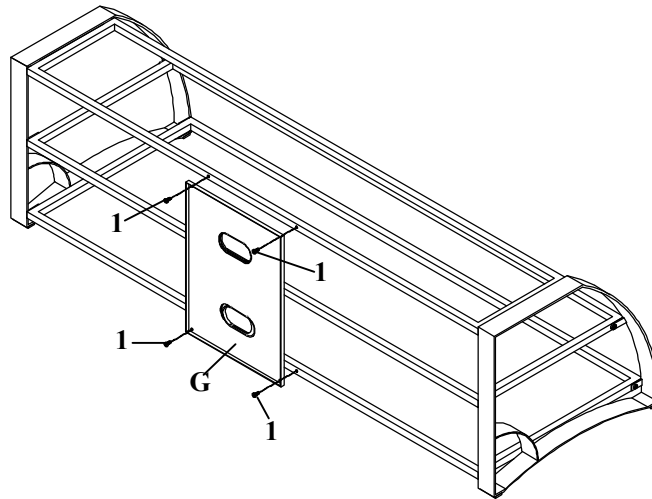

## STEP 4

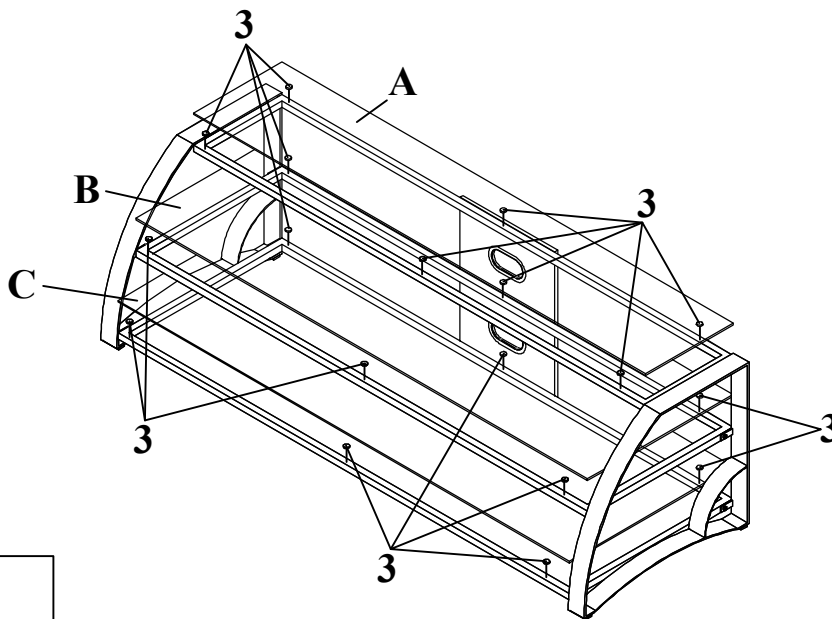 

COMPLETE

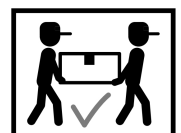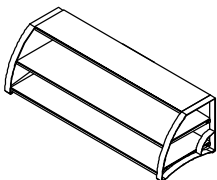  


# ITEM: 708072

## ASSEMBLY INSTRUCTIONS



 Product Size : 1524 X 521 X 438 H (MM)  
Product Size : 60" X 20.5" X 17.25"

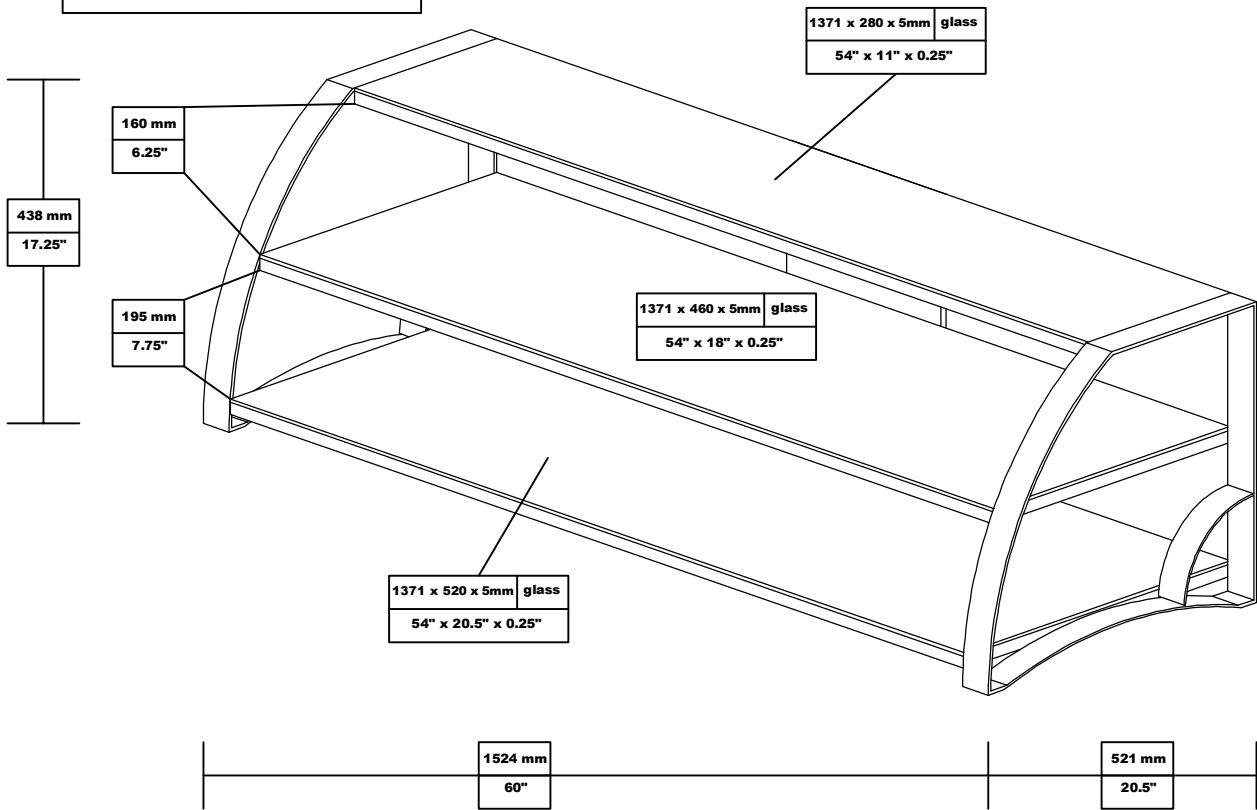

Note : Dimension tolerance  $\pm 5\%$