

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

123052
DINING CHAIR

REVISION 0:07/04/2019
REVISION 0:27/03/2020

ITEM : 123052



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



 


WARNING !

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.









ASSEMBLY TIME 20 MINUTES

PARTS IDENTIFICATION

- A  BACK FRAME 1PC
- B  SETA CUSHION 1PC
- C  FRONT LEG 2PCS

HARDWARE IDENTIFICATION


1	LARGE BOLT		M8x60 mm	1pc
2	LARGE BOLT		M8x60mm	4pcs
3	LARGEST BOLT		M8x75 mm	4pcs
4	ALLEN KEY		M8	1pc
5	LOCK WASHER			9pcs
6	FLAT WASHER			9pcs

ITEM: 123052




ASSEMBLY INSTRUCTIONS


STEP1

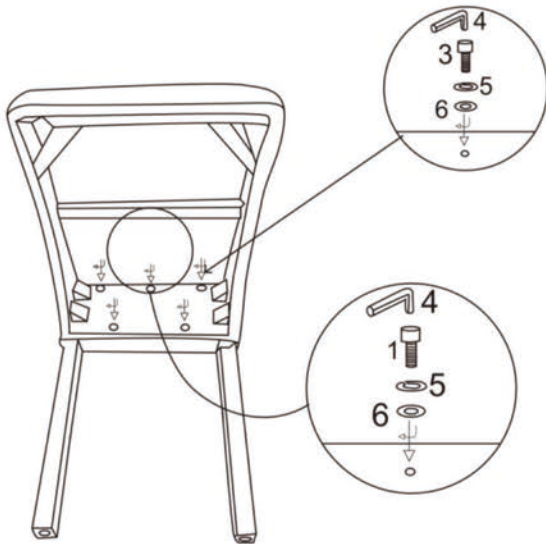


STEP2

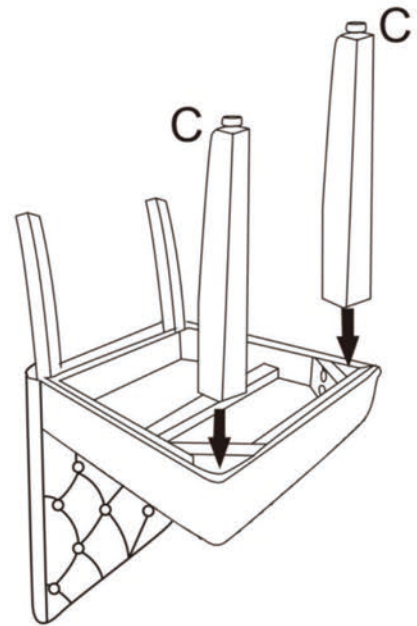

STEP3

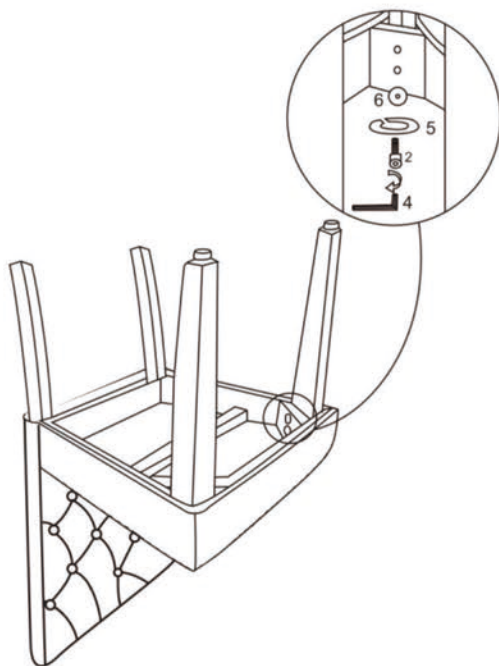


STEP4

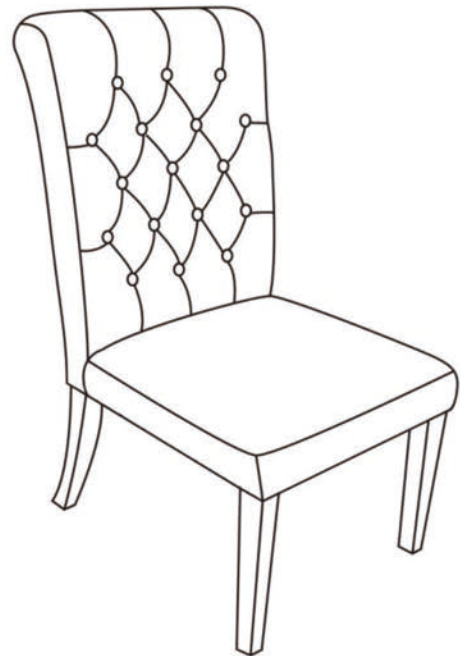

ITEM: 123052



ASSEMBLY INSTRUCTIONS

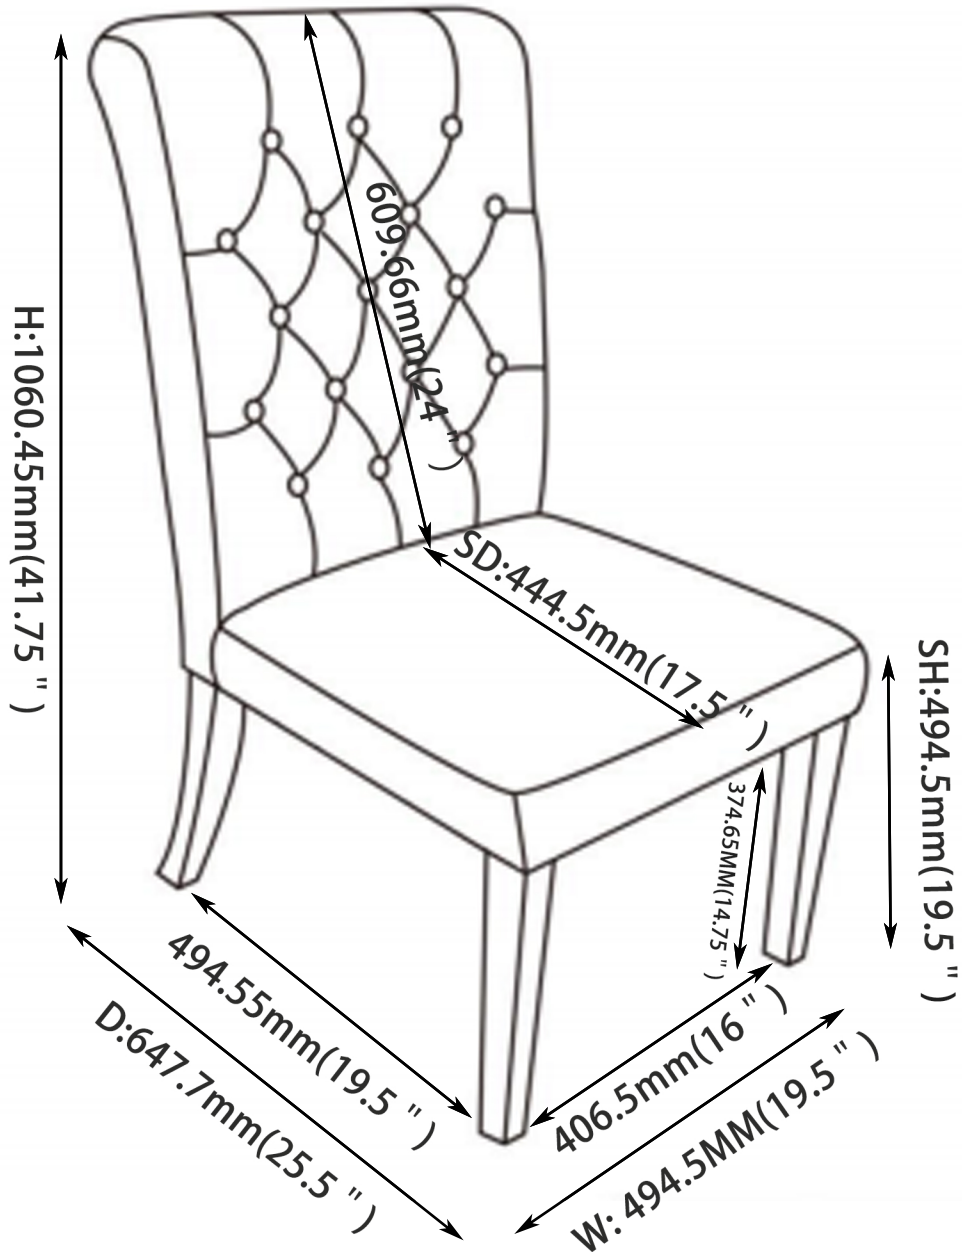

Note: Dimension tolerance $\pm 5\%$