


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

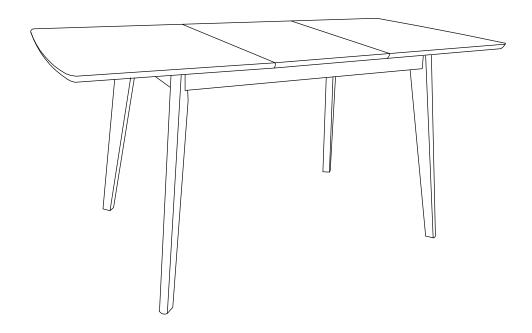

Fine Furniture for every stage of life

108080 Dining Table

PAGE 1 OF 5

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A TOP 1PC

B LEG 4PCS


HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M5 x 63mm - BLK)	1PC
2	BOLT (M6 x 60mm - RBW)	8PCS
3	LOCK WASHER (1/4" - BLK)	8PCS
4	FLAT WASHER (5/16" - RBW)	8PCS

ASSEMBLY INSTRUCTIONS



STEP 1

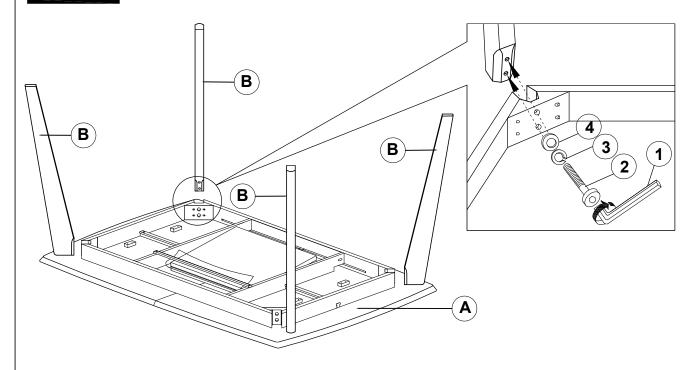


STEP 2




ASSEMBLY INSTRUCTIONS



STEP 3

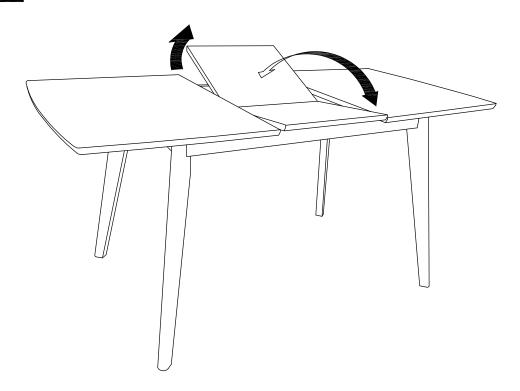


STEP 4

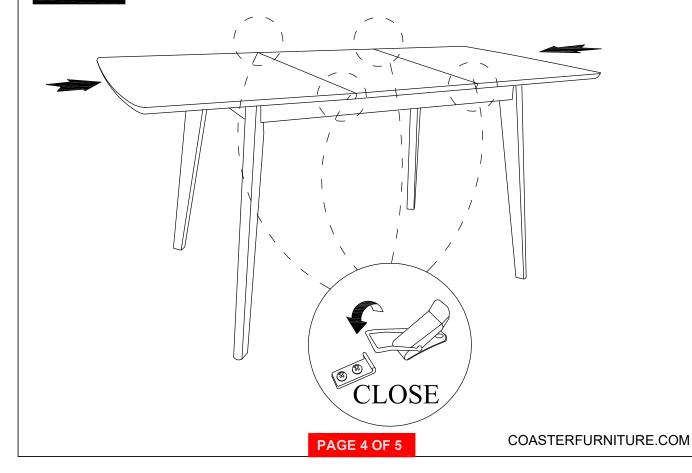

ASSEMBLY INSTRUCTIONS




STEP 5 COMPLETE

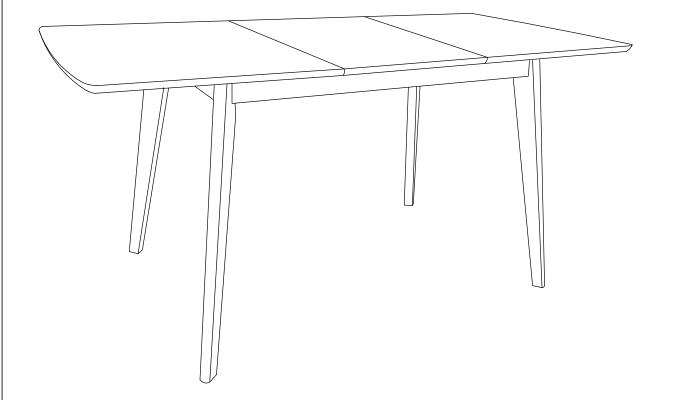





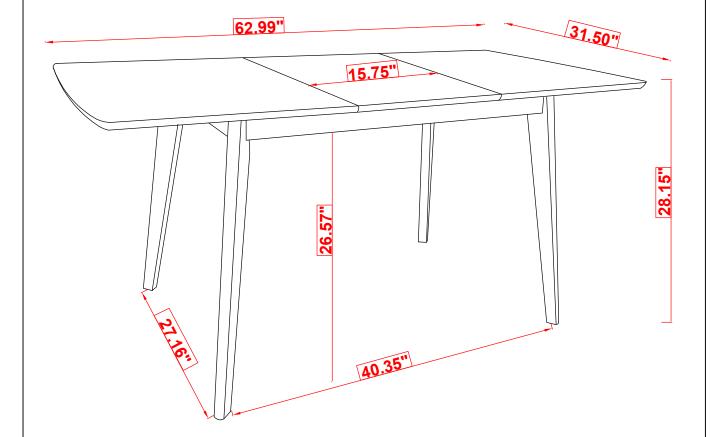

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM