

							D	C	В	Α	Ha	Мо	
							0	©		<u> </u>	Hardware list	Mode1:EEI-2894	
			16 pcs	16 pcs	16 pcs		3pcs for back up	2 pcs (1pcs for back up)	2 pcs (1pcs for back up)	3 pcs		894	
corrosivity. 6. Please install according to the installation manual.	Maintenance Maintenance Maintenance Maintenance I. Voltage/Frequency:110-130v 50-60Hz. 16MAX25W E12. 2. Please wear gloves to install. 3. Don't install it on the moist ceiling. 4. Turn off the power before cleanout. 5. Please wash with the sanitizer without corrosivity. 6. Please install according to the								Installing Sketch Map				
Please see the installing sketch map and install the parts in the right order.		Keep the lighting away from acidic chemical solvent, Or the galvanized surface of the	Precautions		RR							h Map	