








ASSEMBLY INSTRUCTIONS | WARNER BENCH

PARTS CHECKLIST		
A		Seat Base (1pc)
B		Back (2pcs)
C		Bolt (8pcs)
D		Flat Washer (8pcs)
E		Spring Washer (8pcs)
F		Allen Key (1pc)

Please do not begin assembly or discard any packaging until you have checked that all the parts and hardware are present. It is recommended that two people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.


Step 1

Open the box and remove the dust cover from bench. Take out the seat base (A).

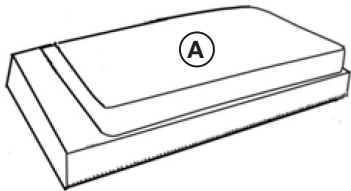


Step 2

Turn over seat base (A) and open the zipper pockets. Take out the backs (B) and hardware package.

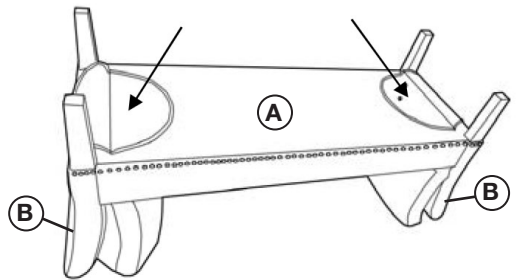

Step 3

Screw the backs (B) onto the threads inserts of the seat. Repeat the procedure with the other legs. Check that all legs are secure.

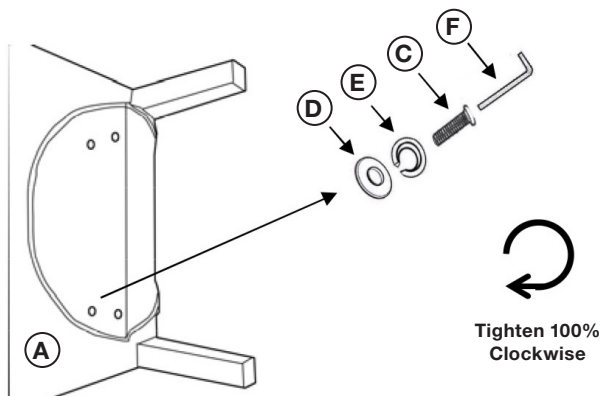

Step 4

Close zipper pockets underneath. Level the bench and place upright on a level surface. Assembly is complete.

