# **JOFRAN** INC.

## ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 1841-96

DINING TABLE


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

 
Key Parts					
No	Code	Qty	Description		
1	1841-96P24	1 pc	Table Top		
2	1841-96P02	4 pcs	Table Leg		
3	1841-96P02M	1 pc	Middle Leg		
4	1841P01F	4 pcs	Floor Glide		
5	1841-96P13	2 pcs	<b>Extension Mechanism</b>		
6	1841P13L	4 pcs	<b>Extension Lock</b>		
7	1841-96P26	4 pcs	Corner Block		
8	1841-96P01A	6 pcs	Apron Spacer		
9	1841-P01L	1 pc	Leveler		
10	1841-96P29	1 pc	<b>Mounting Board</b>		
		1	9		

Hardware kit 1841-96P01					
No	<b>Description</b> Qty				
A	9	Hexa Nut Ø7.8	8 pcs		
В	0	Lock Washer Ø8.5	8 pcs		
C	0	Flat Washer Ø8.5	8 pcs		
D	<b>~</b>	Key Wrench	1 pc		

**DETAIL A** 

## PLEASE NOTE: Assembly of this table requires two people

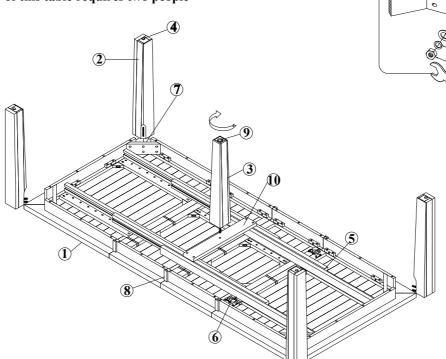



### STEP 1

- Carefully lay Table Top upside down on a smooth flat surface to prevent scratches.
- Affix each Leg to each corner of the Table Top as shown in illustration. Insert a Flat Washer, Lock Washer and Nut on the bolts of each Leg (See Detail A)
- Once all Legs are in place, fully tighten nuts by turning clokwise using provided Key Wrench until secure.
- Attach the middle leg by screwing tightly into place and adjusting the leg leveler to meet the floor.

#### **PLEASE NOTE:**

- Two persons are required when opening and closing the table.
- Table must be lifted when moving to prevent stress on the middle leg.

