



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

| Parts key | | | | | | | |
|-----------|------------|--------|---------------------------------------|----|------------|-------|---------------|
| No | Code | Qty | Description | No | Code | Qty | Description |
| 1 | 1856-70P51 | 1 pc | Storage Box | 5 | 1856-70P08 | 3 pcs | Shelf |
| 2 | 1856-70P07 | 2 pcs | Sliding Door | 6 | 1856P01F | 4 pcs | Floor Glide |
| 3 | 1856P04 | 2 sets | Pull w/Screws | 7 | 1856P01L | 1 pc | Floor Leveler |
| 4 | 1856P07S | 4 sets | Sliding Wheel & Lock w/Screws - 2 pcs | | | | |

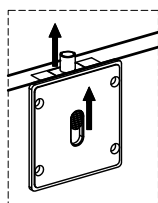

TO REACTIVATE DOOR PIN, PRESS THE BUTTON WHEN IN THE BOTTOM POSITION

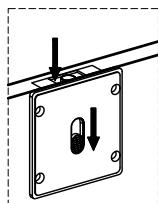

TO RELEASE DOOR PIN, MOVE THE BUTTON TO THE BOTTOM POSITION

