
## OFRAN INC.

## ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 705-BS410KD DINING CHAIR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Parts Key				Hardware kit (705-BS410KDP46)			
No	Code	Qty	Description	No		Description	Qty
1		1Pc	Chair Back	A	9	Hex nut M8	4 Pcs
2	705-BS410KDP41	1Pc	Complete Seat	В	0	Lock washer Ø8.5x13mm	11 Pcs
3	705-BS410KDP42	1Pc	Right Facing Front Leg	C	9	Flat washer Ø8.5x19mm	11 Pcs
4	705-BS410KDP43	1Pc	Left Facing Front Leg	D	0	Long bolt Ø6 x 80mm	4 Pcs
5	705-BS410KDP44	1Pc	Right facing side stretcher	E	0	Short bolt Ø6 x 40mm	3 Pcs
6	705-BS410KDP45	1Pc	Left facing side stretcher	F		Allen key	1 Pc
7	705-BS410KDP49	1Pc	Front Stretcher	G	$\sim$	Key wrench	1 Pc
8	705-BS410KDP01F	4Pcs	Floor Glide	Ι		Screw M4x40	6 Pcs

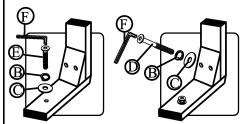


## STEP 1

- Carefully lay Chair Back flat on a smooth flat surface to prevent scratches.
- Attach Complete Seat (2) to Chair Back (1) by inserting a Flat Washer, Lock Washer and Short Bolt (E) into each of the hole on the back of the seat. Tighten screws with provided Allen Key by turning clockwise until secure. (See Detail A).

**DETAIL C** 

- Insert a Flat Washer, Lock Washer and Long Bolt (D) into each of 2 holes in the Complete Seat corners. Tighten screws with provided Key Wrench. (See Detail B).

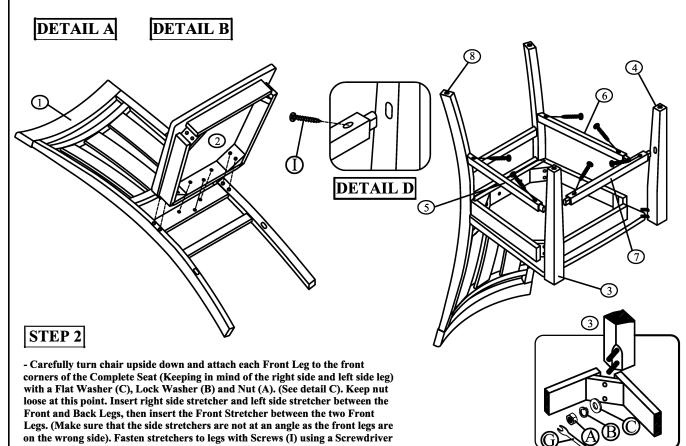

provided (G).

- Be sure to level the chair prior to tightening front leg nuts with wrench