


ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION LACROIX-CH-GRAPHITE

PARTS LIST

Object	Code	Description	Quantity
Α	LACROIXP41GRAPHITE	Cushion	1pcs
В	LACROIXP42	Front Leg	2pcs
С	LACROIXP42R	Rear Leg	2pcs
D	LACROIXP01F	Floor Glide	4pcs
Е	LACROIXP01W	Plastic Washer	4pcs

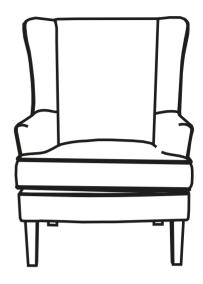



A: Seat cushion



B Front leg M10 bolt & floor glides (D)



C: Rear Leg M10 bolt & floor glide D



E. Plastic washer

B:Front leg B:C:Rear leg

Zippered Pocket (Chair legs)

Assembly Steps

Step 1. Turn chair over on a clean flat surface

Step 2 Remove chair legs (item B & C) from zippered pocket at chair bottom

Step 3. Place plastic washer (item E) onto the bolt on each leg

Step 4. Install the leg (item B & C) to the chair Step 5. Turn chair to its upright position

*** Please note : To level chair you may need to add or remove washers from the particular legs

FABRIC CARE INSTRUCTIONS REGULAR CARE - CLEANING CODE W

- Spot clean only with water based shampoo or foam upholstery cleaner. Pretest a small, inconspicuous area. Do not over wet. Do not use solvents. Pile fabrics may require brushing with a non-metallic, stiff bristle brush to restore appearance. Hot water extraction or steam cleaning is not recommended. Cushion covers should not be removed and laundered.
- To prevent overall soiling, frequent vacuuming or light brushing with a non-metallic, stiff bristle brush to remove dust and grime is recommended. When cleaning a spill, blot immediately. Clean spots or stains from the outside to the middle of the affected area to prevent circling. Use a professional furniture cleaning service when an overall soiled condition has been reached.

FABRIC CONTENT:

83% POLYESTER,10% ACRYLIC,7% LINEN