


ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION LILY ACCENT CHAIR ASH / BLUE / SAGE / SPICE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Parts List			
No.	Code	Description	Q'TY
1 2 3	LILY-CHP42 LILY-CH-P01W	Chair Leg Plastic Washers	1 PC 4 PCS 4 PCS

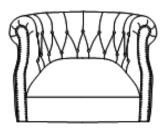

 
A. Chair body



B. Leg



C. Plastic washer




<u>Step 2</u>. Remove Legs (B) and Plastic washer (C) from zippered pocket at the bottom of the chair (A).

<u>Step 3</u>. Put Plastic washer (C) on the Legs (B). Install the Leg (B) to bottom of Chair (A).

Step 4. Turn chair to its upright position .

<u>Level chair</u>: Remove plastic washer if leg is too high.

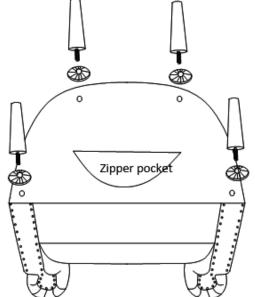

Fabric maintenance:

Avoid direct sunlight, water, oil, acid, sharp object etc. Use vacuum cleaner to clean. Clean only with water-based shampoo or foam upholstery cleaner. Do not over wet. Do not use solvents to spot clean. Pile fabrics may require brushing to restore appearance.

Fabric content: 100% polyester.

Cleaning code: W