ASSEMBLY INSTRUCTIONS ITEM # 30000-C DINING CHAIR

Please read instructions carefully

Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from being scratched.

- CAUTIONS:
- 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
- 2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
- 3) KEEP ALL HARDWARE PARTS OUT OF REACH CHILDREN.

PARTS LIST (FOR 2 NOS. OF CHAIR)

	PARTS	QTY.
P1	SEAT	2
P2	FRONT LEG LEFT	2
Р3	FRONT LEG RIGHT with sticker	2
P4	BACK LEG FRAME	2
P5	SIDE STRETCHER LEFT	2
P6	SIDE STRETCHER RIGHT with sticker	2




HARDWARE LIST (FOR 2 NOS. OF CHAIR)


	DESCRIPTION		QTY.
H1	M6 x 35mm JCBC SCREW		4
H2	M6 x 80mm JCBC SCREW	Commission (16
Н3	SPRING WASHER		20
H4	FLAT WASHER	0	20
Н5	M4 x 38mm C SK SCREW	■	8
Н6	ALLEN KEY		1
H7	NAIL LEG	0	8


COMPLETE ASSEMBLY


STEP 1

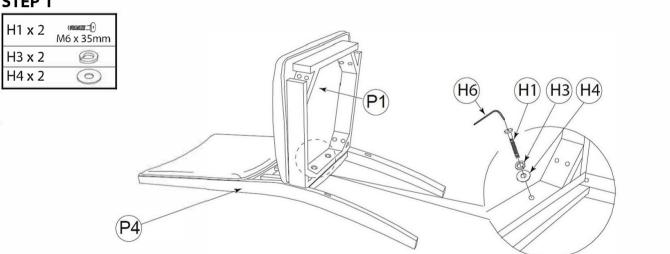

STEP 2

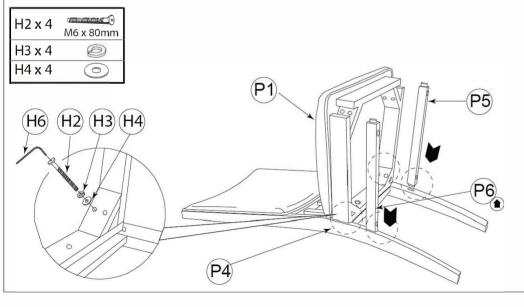

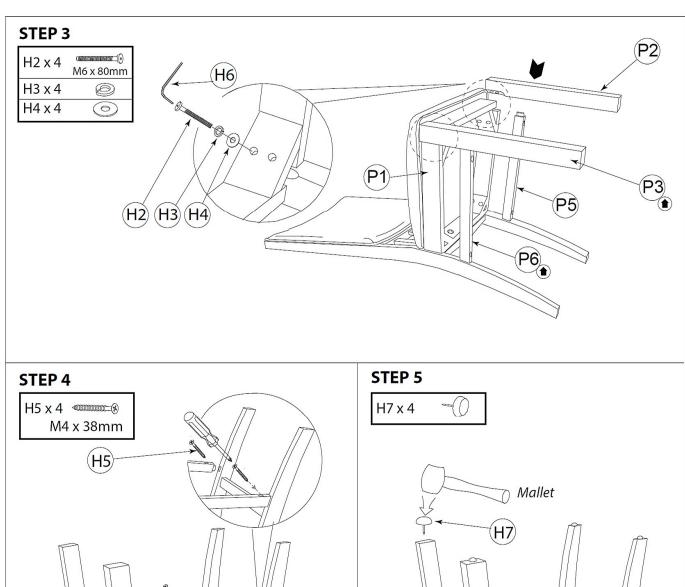

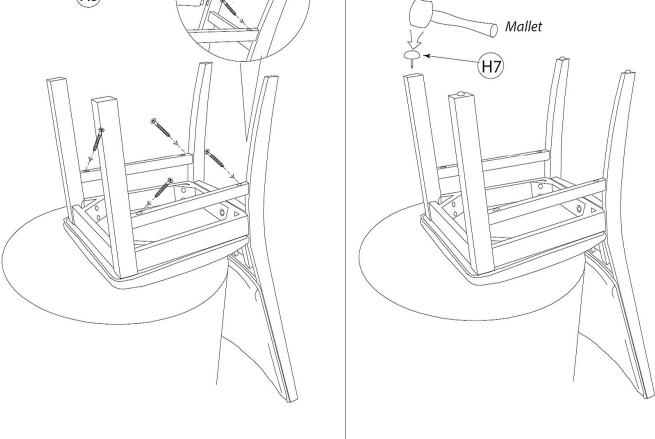

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children and animals, dispose off plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

FITTINGS - tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.