

ASSEMBLY INSTRUCTIONS




MODEL # 88862 BUTTON TUFTED WING CHAIR

Please read instructions carefully


Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.


- CAUTIONS:** 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
 2) DO NOT OVER-TIGHTEN BOLTS AND NUTS AS IT MAY DAMAGE THE SCREW RHREAD.
 3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

Parts List

Item	Description		QTY
P1	WOOD FRONT LEGS		2 PCS
P2	WOOD BACK LEGS		2 PCS
P3	CHAIR		1 PC

Hardware List


Item	Description		QTY
H1	PVC BLACK WASHER		8 PCS

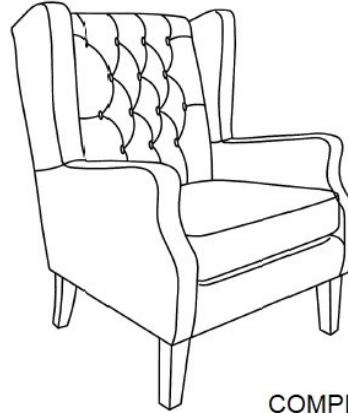

COMPLETE ASSEMBLY


STEP 1

Open the seat cushion, and take out the legs underneath the seat cushion

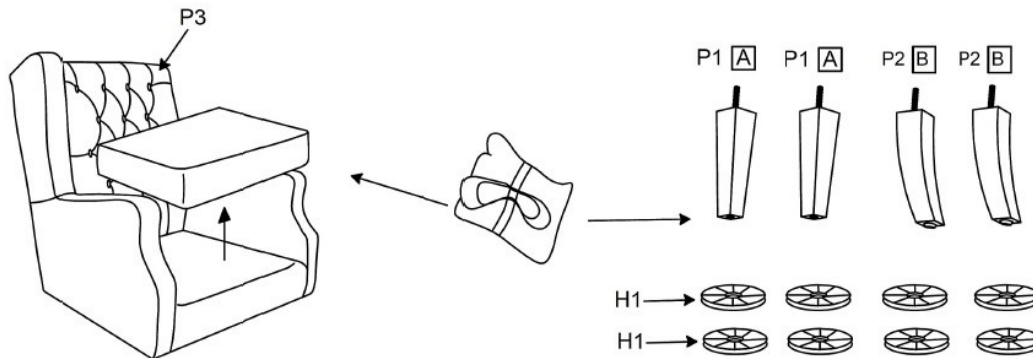


STEP 2

Attach the chair legs to seat frame,insert the pvc balck washer (H1)

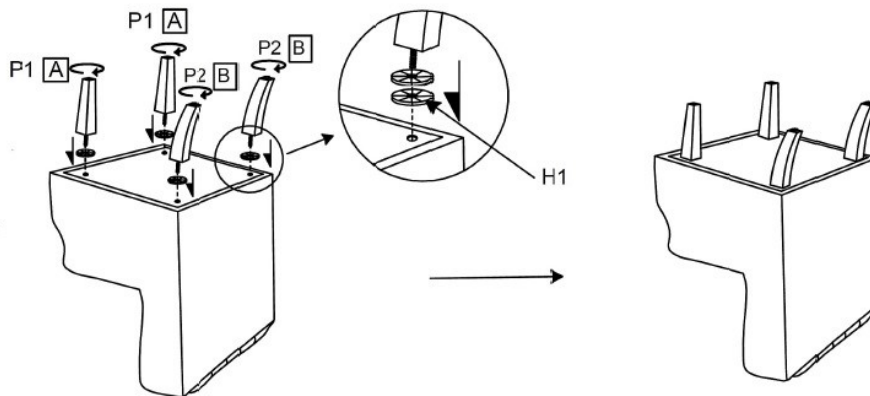

Step 3. Turn the chair over.

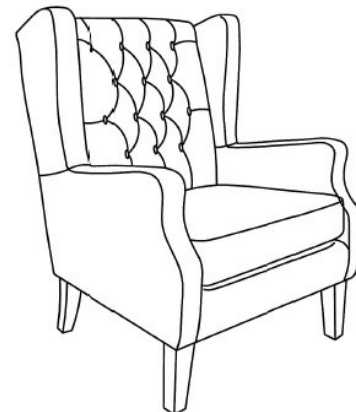

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children and animals, dispose off plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.

If any of the components are damaged or broken they should be removed from service.

Not for commercial use.