
ASSEMBLY INSTRUCTIONS

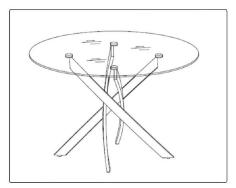

SKU/ITEM# 984/985/986-T 48" Round Dining Table



+ Do Not Use Power Tools



+ Suggested Adults



+ Parts Included

1 Table Top(1PC)

2 Join Box(1PC)





3 Leg(4PCS)



NOTE: For questions about parts or assembly please email support@meridianfurnitureusa.com or call us at 718-758-4455.

- 1 Read instructions cover to cover.
- 2 Save all packaging until assembly is completed.

1 IMPORTANT SAFETY INFORMATION

Do not assemble the product if any of the following parts arrived damaged:

Part # (1) - Table Top

Part # (2) - Join Box

Part # (3) - Leg

Do not assemble if any of the following Hardware parts are missing:

Part # A - Bolt Part # B - Bolt

Part # C - Flat washer Part # D - Spring washer

Part # E - Spring Part # F - Adjustable washer footer

Part # G - Flat washer Part # H - Allen Kev

2 IMPORTANT ASSEMBLY INFORMATION

Assembly Step If loosening persists, please make sure to tighten all the bolts periodically, or use a thread locker adhesive.

+ Hardware Included

A Bolt (4PCS)

B Bolt (8PCS)

8*12mm

6*16mm

C Flat Washer(8PCS)

D Spring Washer(4PCS)



6*16mm

8*12mm

ESpring Washer(8PCS) **F** Adjustable

F Adjustable (4PCS)



6*10mm



G Flat Washer(4PCS)

H Allen Key(1PC)




8*20mm




ASSEMBLY INSTRUCTIONS





SKU/ITEM# 984/985/986-T 48" Round Dining Table

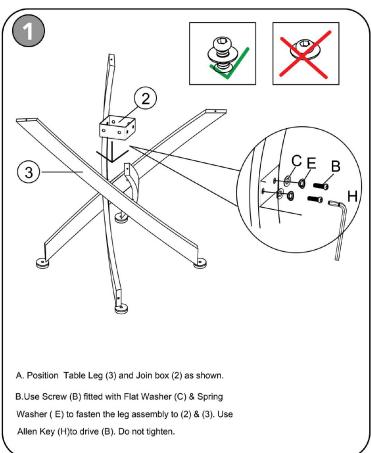

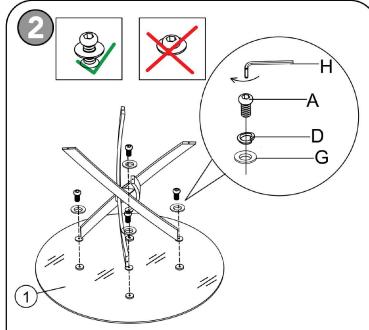

- A.Lay Table Top (1) that does not scratch the part and position leg assembly from STEP 1 as shown.
- B.Align the bolt hole Rail to the respective bolt hole on the bottom of the top.
- C.Use Screw (A) fitted with Flat Washer (G) Spring Washer (D) to fasten the leg assembly to (1). Use Allen Key (H) to drive (A). Do not tighten.

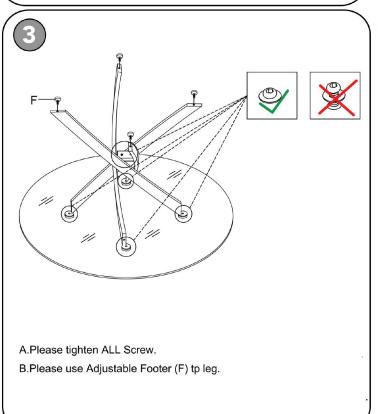

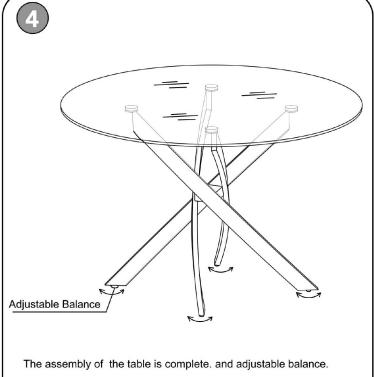

NOTE: For questions about parts or assembly please email support@meridianfurnitureusa.com or call us at 718-758-4455.