

PARTS INCLUDED

ASSEMBLY INSTRUCTIONS

1. WOODEN TOP
2. 4 WOODEN LEGS
3. 16 SCREWS
4. 1 ALLEN KEY
5. 16 WASHERS
6. 1 IRON CONNECTOR



1. Place the wooden top upside down (on a protective matt).
2. Attach the wooden legs to the top 1 by 1 as per the picture & tighten the screws with the help of allen key,



3. After attaching all legs make sure they are fixed firmly and not shaking then we connect iron connector with all four legs with the help of allen key .



4. Overturn the round dining table carefully.

