



Simple Assembly Instructions—Please keep for future reference




A: Before use product, first connect the lines.

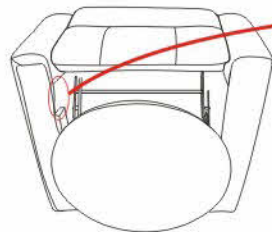

1. Reverse the chair.

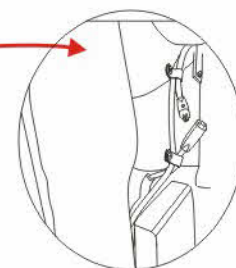

2. Find connector in the inside front of arm.

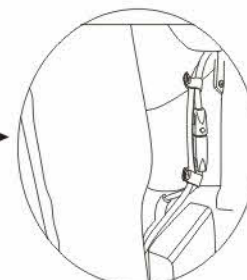


3. Connect the wire for power connection




4. Reverse the chair as normal.

B: Product charging and battery maintenance.

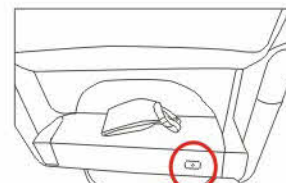


inlet



1. Find inlet and accessories pack at the bottom back of the chair.

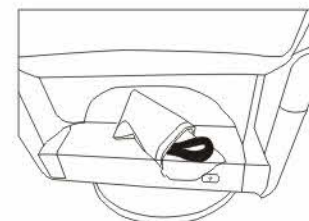



2. Open the bag.

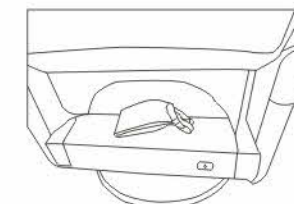

3. Get the charging accessories.

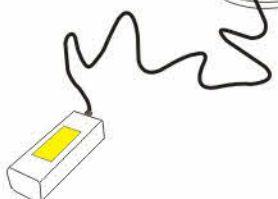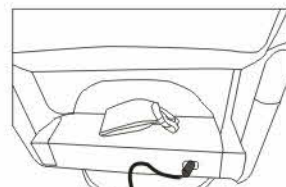

4. One end plug inlet.

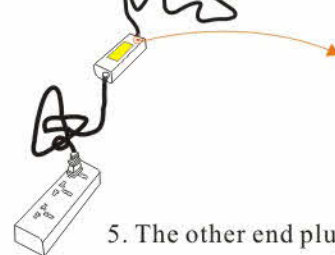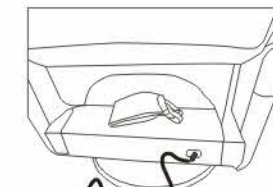


5. The other end plug in socket.

(NOTE: The power light flashes red as charging and green as full charged.)

★ ★ ★ Instruction remarks:





1. If an alarm occurs when the product switches on that indicates battery low need to be recharged. when start charging alarm sounds 3 to 5 minutes as normal and will stop.
2. To avoid battery damage, please use original charging accessories.
3. Please unplug the power when charging is completed.
4. Please do not use the product when charging.
5. The product has to be complete recharged for 3 to 6 hours when it stored for six-months.

Chair parts List	
① 	transformer
② 	wire




IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.
FOR RESIDENTIAL USE.

MAINTENANCE AND CARE:

-  Never expose your Power Pack to wet or damp conditions.
-  Should you replace the Power Pack, dispose of the old Power Pack properly; do not dispose with normal household waste.
-  Do not open the Power Pack, this will void all warranties and can result in the battery leaking, which can cause burns to the skin and eyes.
-  Keep the Power Pack out of the reach of children.

INSTRUCTIONS FOR YOUR RECHARGEABLE POWER PACK

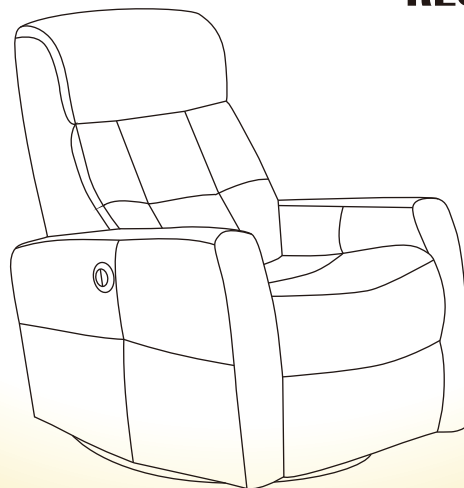

WHEN TO CHARGE YOUR POWER PACK:

1. The Power Pack will emit an audible low-voltage warning, it will beep for 30 seconds once the charge in the Power Pack has dropped to a level that it needs charging.
2. When you hear the low-voltage warning, charge your Power Pack as instructed in "CHARGING YOUR POWER PACK".
3. It is possible that after long periods of storage or non-use, several cycles of charging and recharging may be required to restore the performance of the battery.
4. A fully charged Power Pack is capable of being stored for up to 6 months.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.
FOR RESIDENTIAL USE.

1. Prior to its first use, it is important to fully charge the Power pack.
2. Connect the Power Pack to the charger that came with your chair, never use another charging device.
3. Once connected the LED light on the charger will turn on and show RED. The light may initially flash for the first few minutes then become solid RED.
4. Once fully charged, the LED light will turn GREEN; typically the charging time is 3 to 6 hours.
5. To prevent damage to the Power Pack and to prolong the life of the battery, disconnect the charger once the Power Pack is fully charged.
6. Do not swivel the chair while charging, this may cause the charging cord to become entangled and damaged.

CHARGING YOUR POWER PACK:

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.
FOR RESIDENTIAL USE.