
 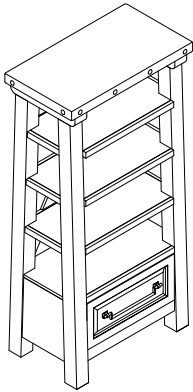



Assembly Instruction




Item No: LOD#330

Description: LODGE BOOKCASE




HARDWARE LIST			
1		Hanging folders	2pcs
A	Bracket		2 PCS
B	Tie wrap		1 PC
C	Long screw		1 PC
D	Short screw		1 PC

HARDWARE

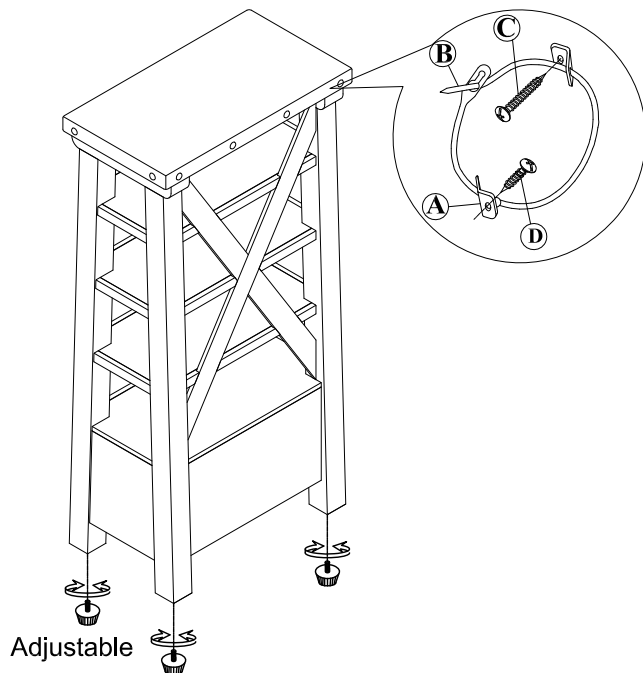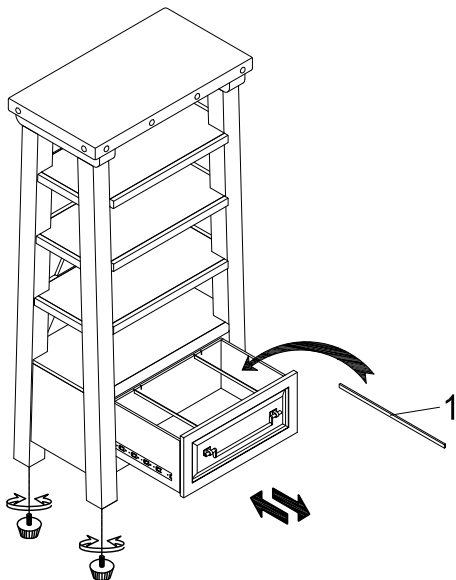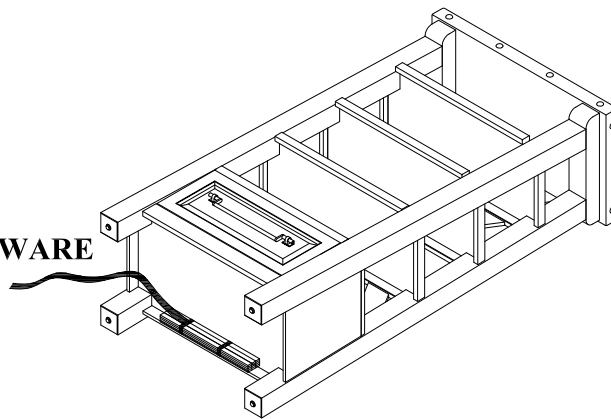

Anti-Tip Hardware Installation Instructions

Notice: In homes where small children may be present, Parker House. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Parker House. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

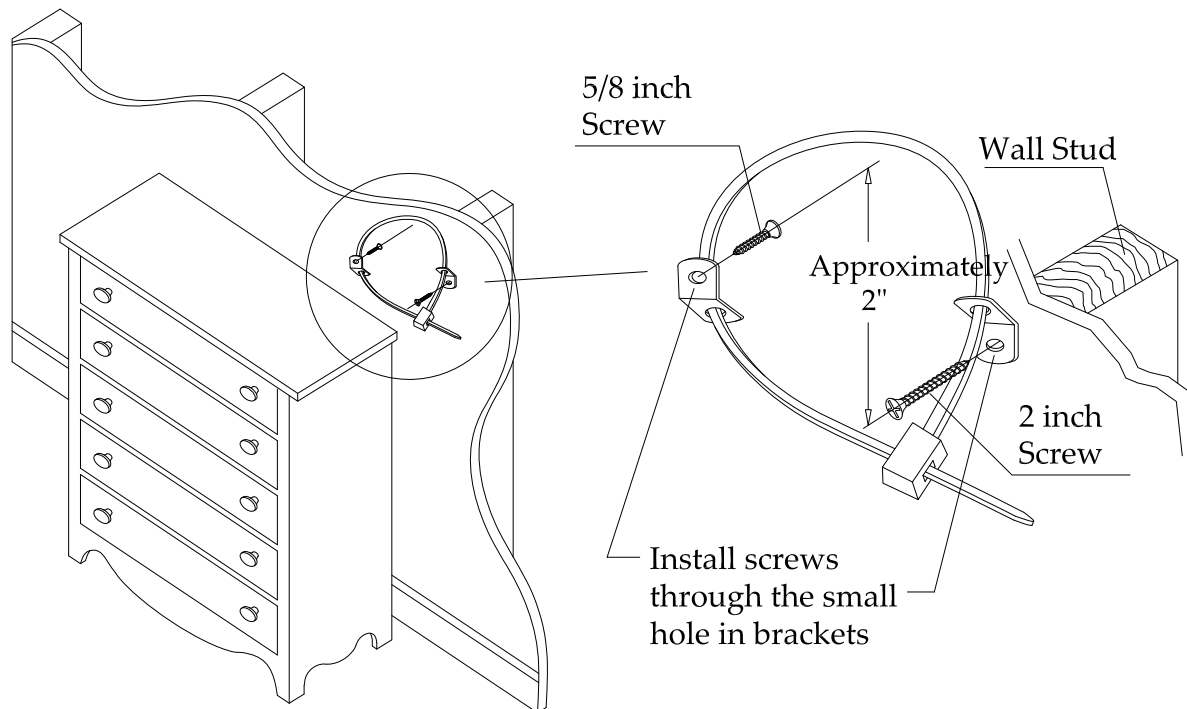

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Parker House. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.

Assembly Instruction

Item No: LOD#330 LODGE BOOKCASE

File Cabinet Set-Up

FILE CABINET SET-UP

This file cabinet has safety hardware installed to prevent both drawers from being opened at the same time, which minimizes the risk of the file cabinet accidentally tipping forward, possibly causing damage or personal injury. To properly set-up and use this file cabinet there are a few things that must be checked or steps performed before loading drawers with files and using. It is imperative that a file cabinet be level for the drawers and anti-tip interlock system to work properly. Please read this entire document before loading files into drawers. After the file cabinet has been set-up and being used, if it becomes necessary to move the file cabinet to another location, to prevent excessive stress on the cabinet, all files must be removed from the drawers and the drawers locked, if so equipped.

Never attempt to open both drawers at the same time because damage to the file cabinet or drawer interlock mechanism can occur and cause the file cabinet to be unsafe. The drawers must be fully closed for the anti-tip mechanism to be in a 'neutral' position and allow either drawer to be opened. Some file cabinet models are equipped with key-locks. If neither drawer will open easily, make sure the drawers are not key-locked.

LEVELING

All Parker House Furniture Corp. Lateral File Cabinets are equipped with levelers underneath the front corners which can be adjusted enough to level most cabinets. When we refer to 'level' we are not necessarily meaning exactly 'level to the world', but level within limits to allow proper function of the drawers. The preferred tool to use would be a small bubble-type level if available, or for an acceptable alternative see below. Various floor coverings also have differing effects on set-up and long-term operation. For instance, if the file cabinet is placed on carpet, the carpet probably has a tack strip underneath at the edge next to a wall, which will raise the back of the file cabinet, which can cause the drawers to automatically try to open. This must be corrected with the levelers under the front of the cabinet.


After moving the file cabinet to its final location in the room, check to see if the file cabinet is level. Place the level left-to-right along the front edge of the cabinet. Very few floors will be out-of-level enough in this direction to cause problems, but if necessary, tilt the file cabinet back slightly and locate the levelers underneath the front corners and adjust as necessary. Place the level on the top, near the middle of the cabinet, going front-to-back. Now, the front of the cabinet must actually be slightly out-of-level, approximately 1/8" to 1/4" higher in the front than the back of the cabinet, to help hold the drawers shut when closed.


 



If a bubble level is not available, a suitable alternative is to use a round pen or pencil. Place the pencil pointed front-to-back on the cabinet top. Push the pencil slightly one direction and then the other. The pencil should not continue to roll left-to-right across the cabinet. Place the pencil along the front edge, pushing the pencil slightly, it should continue to roll slowly towards the back of the cabinet. The cabinet is now properly leveled.

Assembly Instruction




Item No: LOD#390

 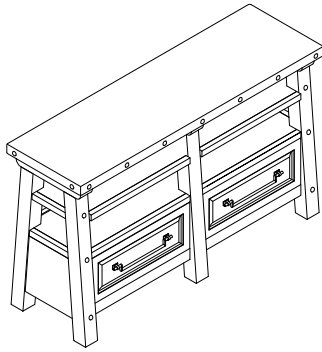Description: LODGE CREDENZA




HARDWARE LIST			
1		Hanging folders	4pcs
A	Bracket		2 PCS
B	Tie wrap		1 PC
C	Long screw		1 PC
D	Short screw		1 PC

HARDWARE

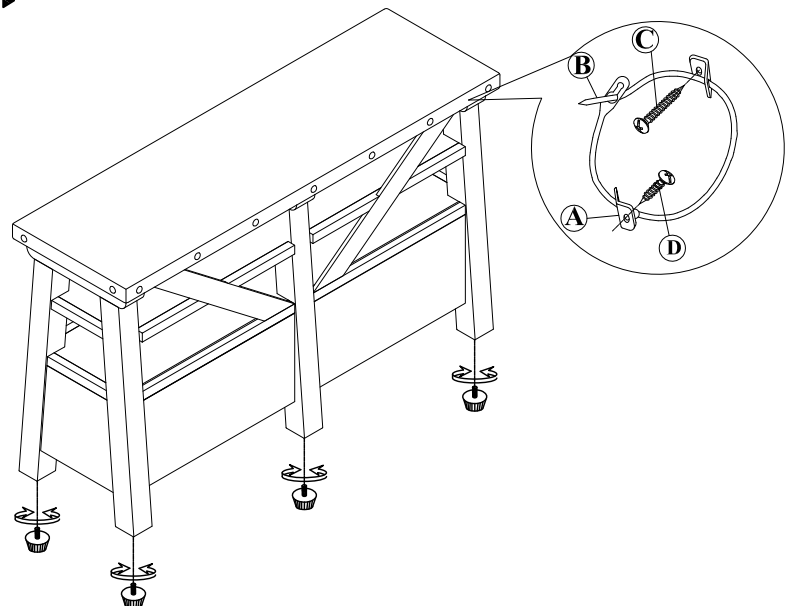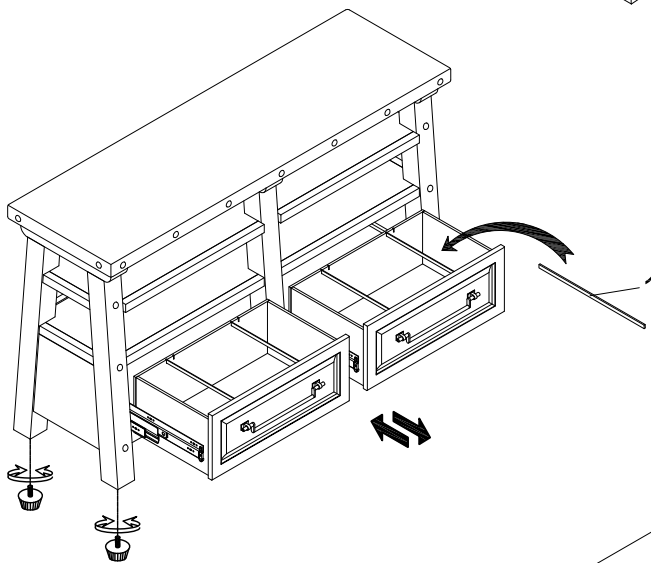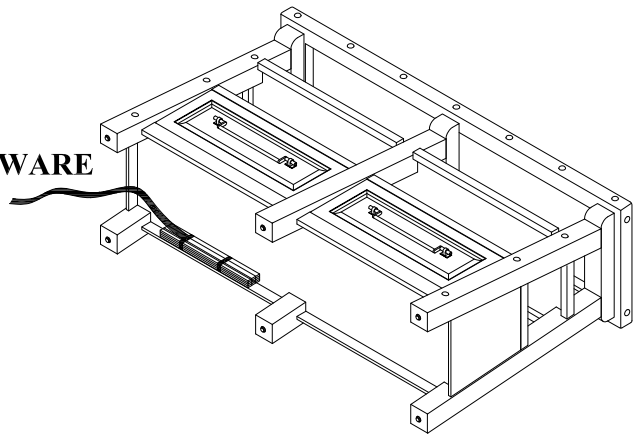

Anti-Tip Hardware Installation Instructions

Notice: In homes where small children may be present, Parker House. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Parker House. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

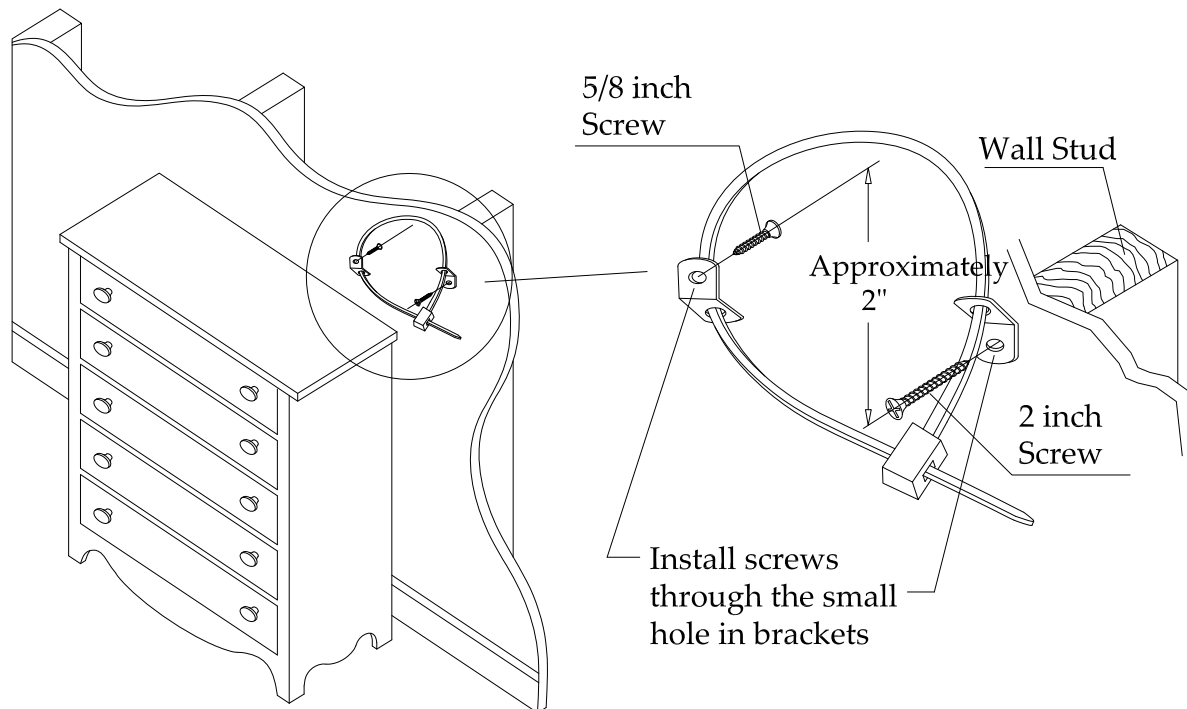

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Parker House. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.

Assembly Instruction

Item No: LOD#390 LODGE CREDENZA

File Cabinet Set-Up

FILE CABINET SET-UP

This file cabinet has safety hardware installed to prevent both drawers from being opened at the same time, which minimizes the risk of the file cabinet accidentally tipping forward, possibly causing damage or personal injury. To properly set-up and use this file cabinet there are a few things that must be checked or steps performed before loading drawers with files and using. It is imperative that a file cabinet be level for the drawers and anti-tip interlock system to work properly. Please read this entire document before loading files into drawers. After the file cabinet has been set-up and being used, if it becomes necessary to move the file cabinet to another location, to prevent excessive stress on the cabinet, all files must be removed from the drawers and the drawers locked, if so equipped.

Never attempt to open both drawers at the same time because damage to the file cabinet or drawer interlock mechanism can occur and cause the file cabinet to be unsafe. The drawers must be fully closed for the anti-tip mechanism to be in a 'neutral' position and allow either drawer to be opened. Some file cabinet models are equipped with key-locks. If neither drawer will open easily, make sure the drawers are not key-locked.

LEVELING

All Parker House Furniture Corp. Lateral File Cabinets are equipped with levelers underneath the front corners which can be adjusted enough to level most cabinets. When we refer to 'level' we are not necessarily meaning exactly 'level to the world', but level within limits to allow proper function of the drawers. The preferred tool to use would be a small bubble-type level if available, or for an acceptable alternative see below. Various floor coverings also have differing effects on set-up and long-term operation. For instance, if the file cabinet is placed on carpet, the carpet probably has a tack strip underneath at the edge next to a wall, which will raise the back of the file cabinet, which can cause the drawers to automatically try to open. This must be corrected with the levelers under the front of the cabinet.

After moving the file cabinet to its final location in the room, check to see if the file cabinet is level. Place the level left-to-right along the front edge of the cabinet. Very few floors will be out-of-level enough in this direction to cause problems, but if necessary, tilt the file cabinet back slightly and locate the levelers underneath the front corners and adjust as necessary. Place the level on the top, near the middle of the cabinet, going front-to-back. Now, the front of the cabinet must actually be slightly out-of-level, approximately 1/8" to 1/4" higher in the front than the back of the cabinet, to help hold the drawers shut when closed.

If a bubble level is not available, a suitable alternative is to use a round pen or pencil. Place the pencil pointed front-to-back on the cabinet top. Push the pencil slightly one direction and then the other. The pencil should not continue to roll left-to-right across the cabinet. Place the pencil along the front edge, pushing the pencil slightly, it should continue to roll slowly towards the back of the cabinet. The cabinet is now properly leveled.

Assembly Instruction

Item No: LOD#360










Description: LODGE DESK

PARTS LIST:

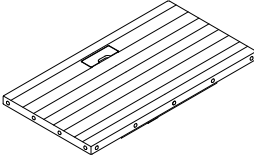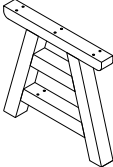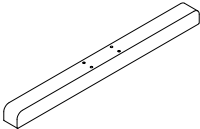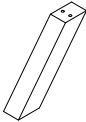


NOTE:


1. DO NOT FULLY TIGHTEN BOLT UNTIL ALL PARTS COMPLETE ASSEMBLY.

①		②	
TABLE TOP : 1PC		FRAME LEG: 2PCS	
③		④	
STRETCHER : 1PC		CENTER POST: 2PCS	
⑤	HARDWARE LIST		
NO.	Drawing	Description	
A		Bolt Ø5/16"x4"	8pcs
B		Bolt Ø5/16"x3-1/4"	16pcs
C		Spring washer (Ø5/16")	24pcs
D		Flat washer (Ø5/16"x19mm)	24pcs
E		Allen wrench (5mm)	1pc

STEP1

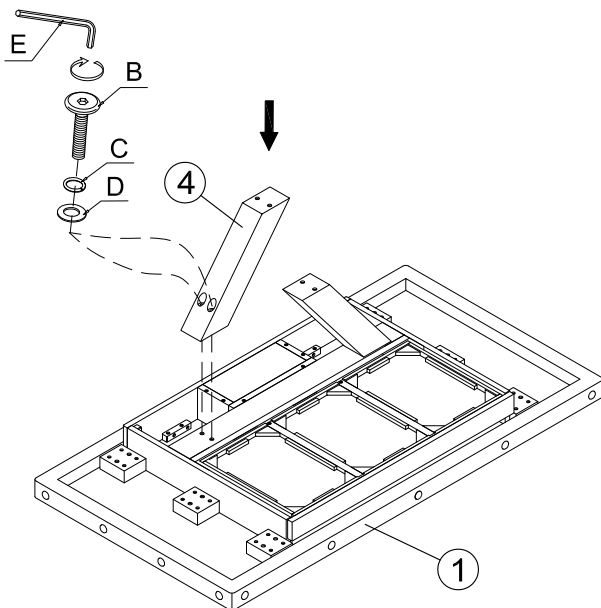


STEP2

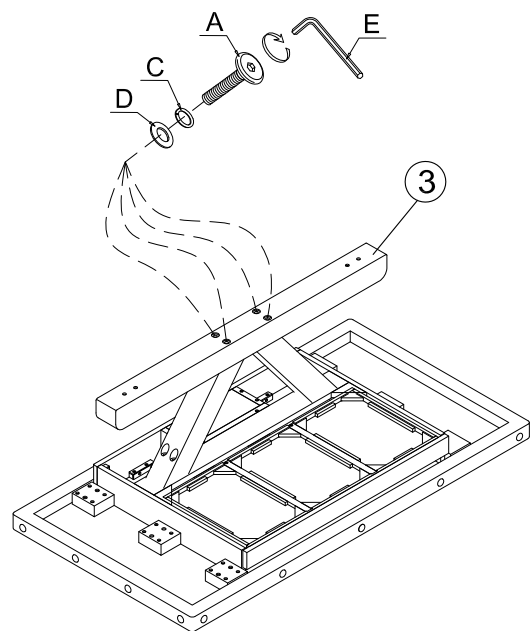

Item No: LOD#360
Description: LODGE DESK

STEP 3

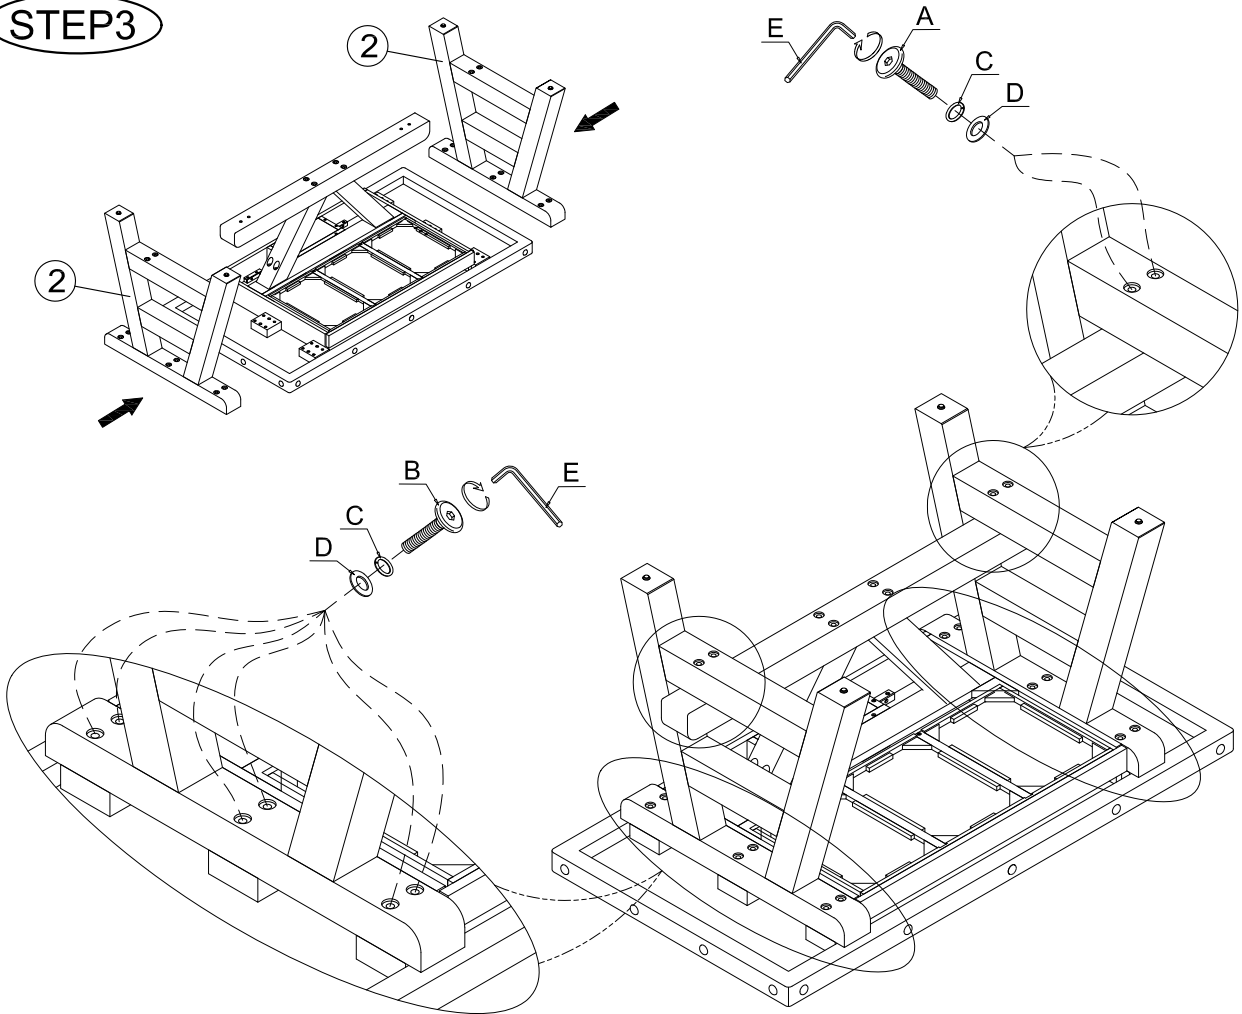

STEP 4

