



Parker House
FURNITURE

 
Assembly Instruction

Item NO. SH0#405-EFW/ SH0#405-MDR

SH0#412-EFW/ SH0#412-MDR

Part List

No.	Description	Q'ty
#1	Top Panel	1
#2	Left Side Panel	1
#3	Right Side Panel	1
#4	Front Crossbar	2
#5	Lower Back Crossbar	1
#6	Back Stretcher	3
#7	Back Panel	4
#8	Shelf	1

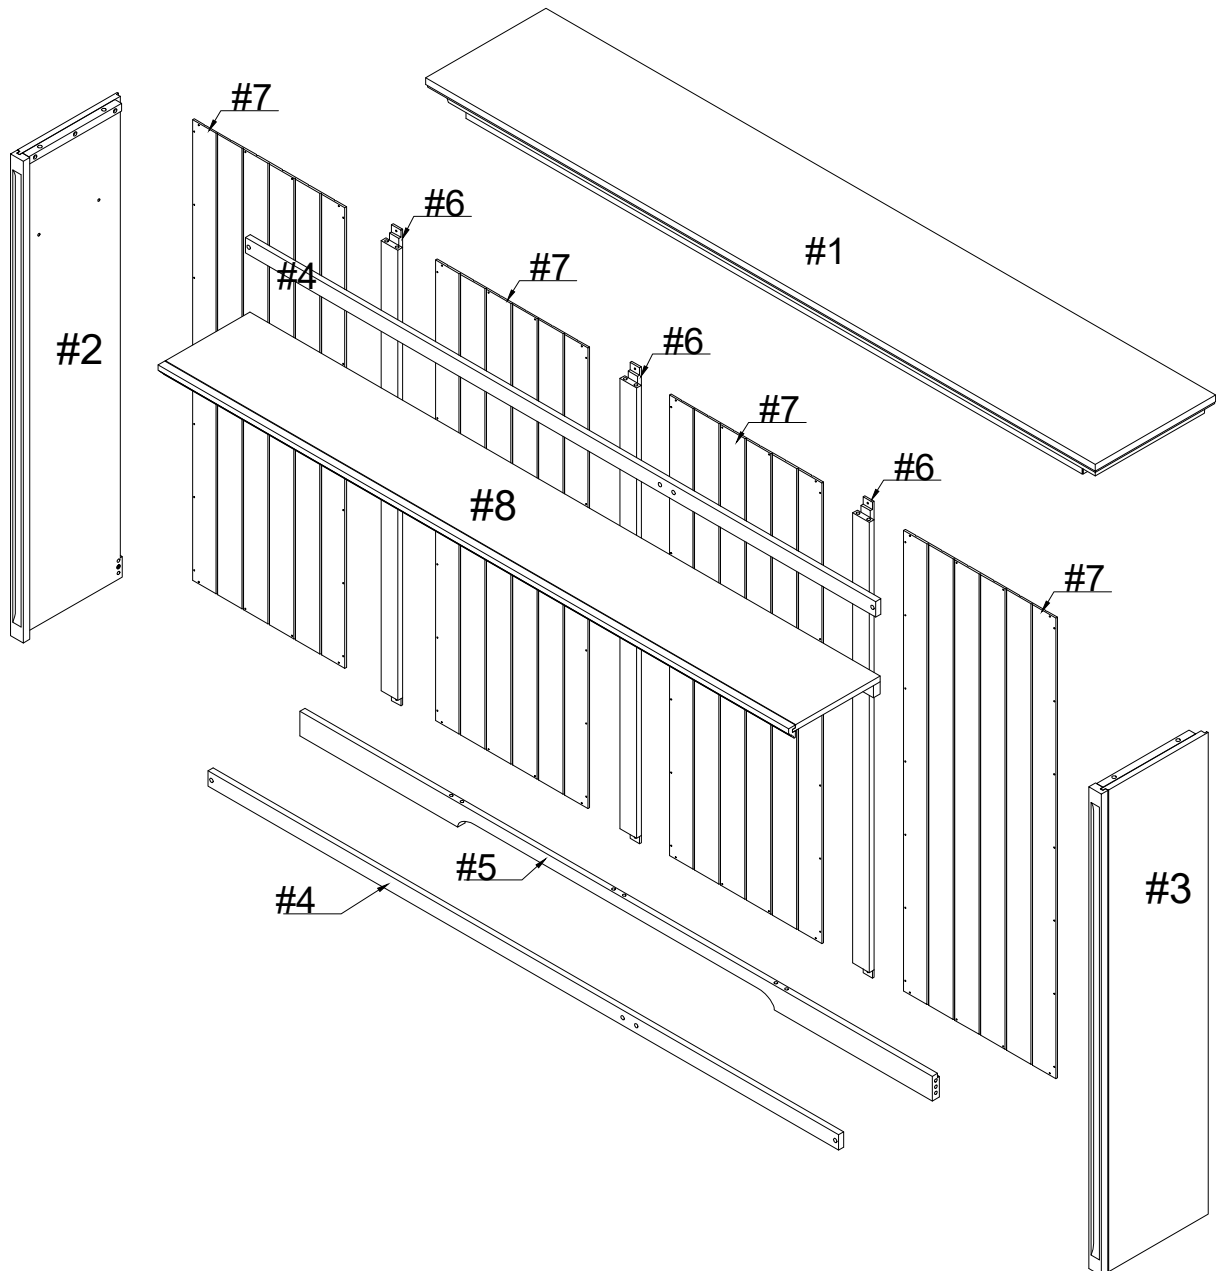








Parker House
FURNITURE

 
 

 



 
Assembly Instruction


Item NO. SH0#405-EFW/ SH0#405-MDR
SH0#412-EFW/ SH0#412-MDR

Anti-tip hardware kit  1SET


Hardware bag  1SET

A	Screw	 #3x15mmL	94PCS
B	Screw	 #8x25mmL	3PCS
C	Wood dowel	 Ø8x30mm	16PCS
D	Shelf Pin		4PCS
E	Screw	 #3.5x15mmL	4PCS

F	Cam Lock Fittings	 Ø15x12mm	2PCS
G	Dowel Screws	 Ø6x40mmL	2PCS
H	Bolt	 1/4"x32mmL	4PCS
I	Bolt	 1/4"x25mmL	6PCS
J	Lock washer	 1/4"xØ13mm	10PCS
K	Flat washer	 1/4"xØ16mm	10PCS
L	Allen Wrench	 4mm	1PC
M	Touch Up Pen		1PC

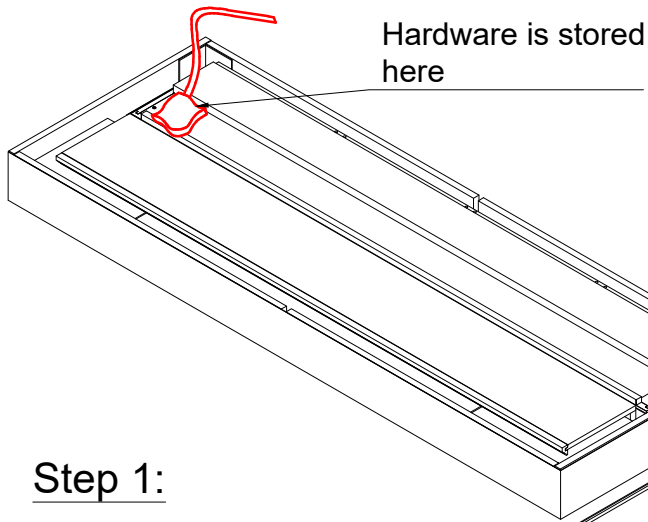 

 Step 1:

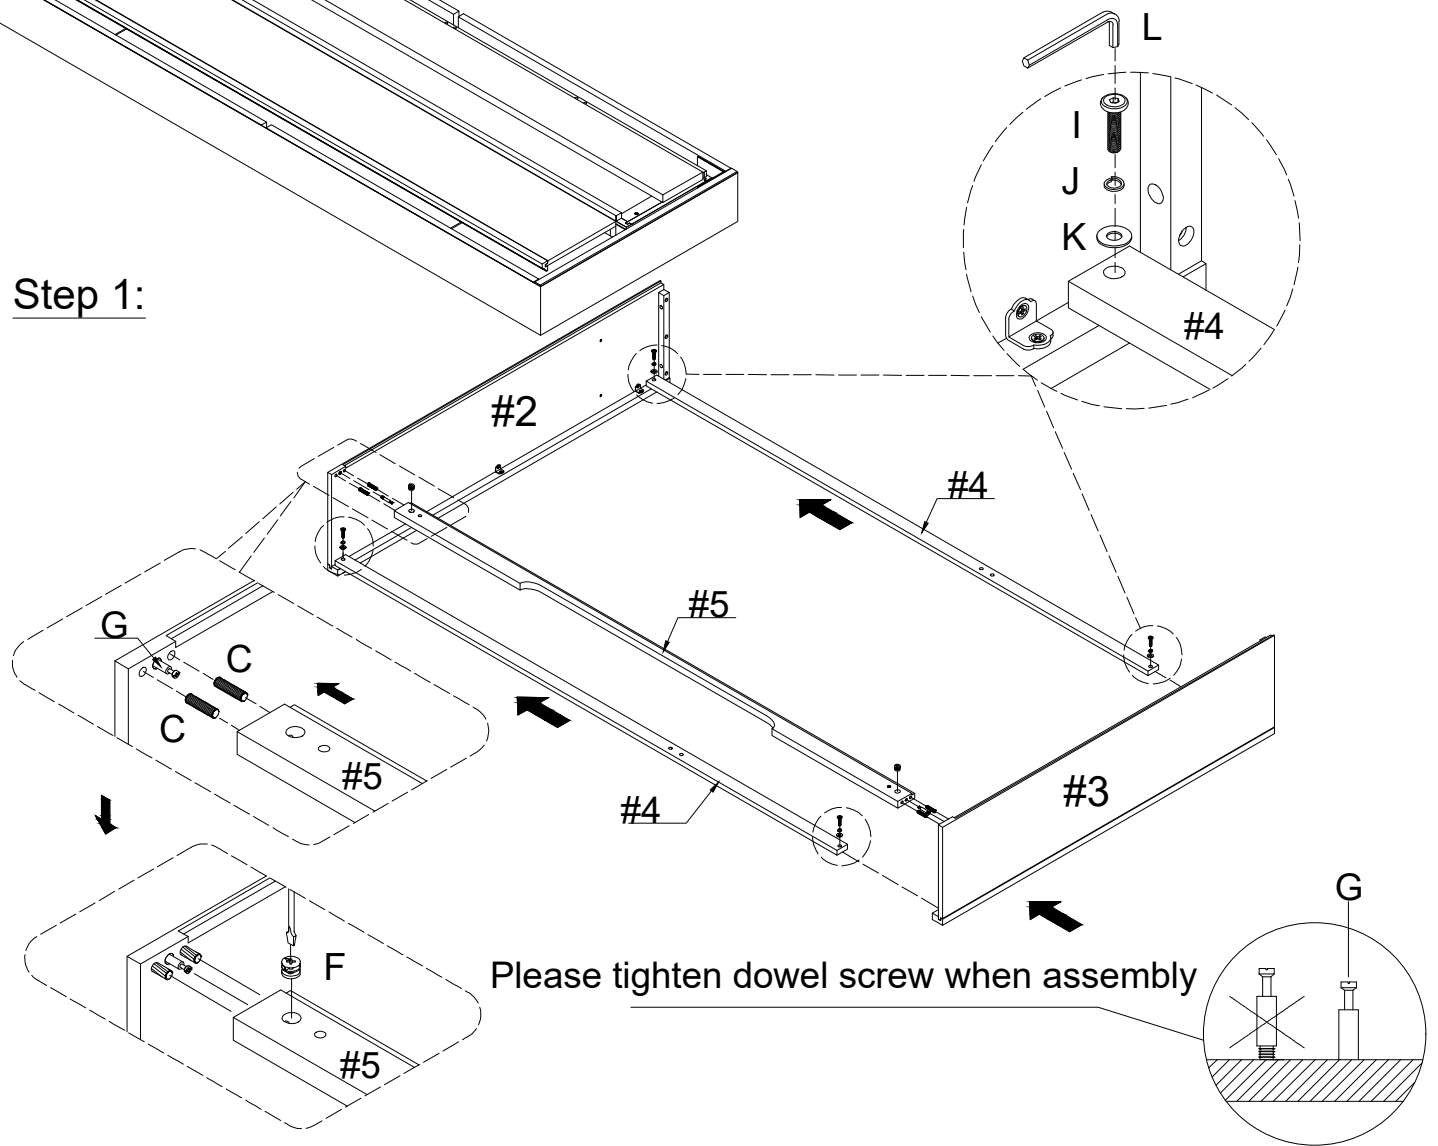

Please tighten dowel screw when assembly

 


Parker House
FURNITURE


Assembly Instruction

Item NO. SH0#405-EFW/ SH0#405-MDR
SH0#412-EFW/ SH0#412-MDR

Step 2:

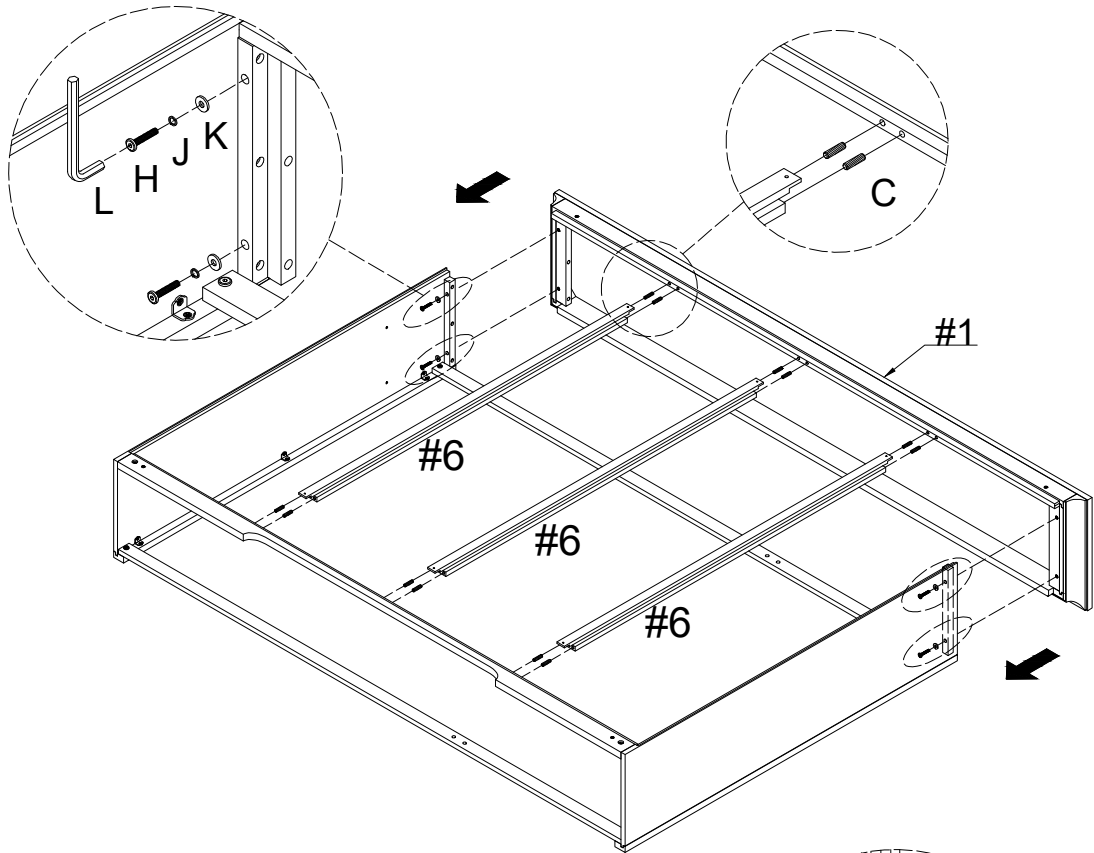

 Step 3:

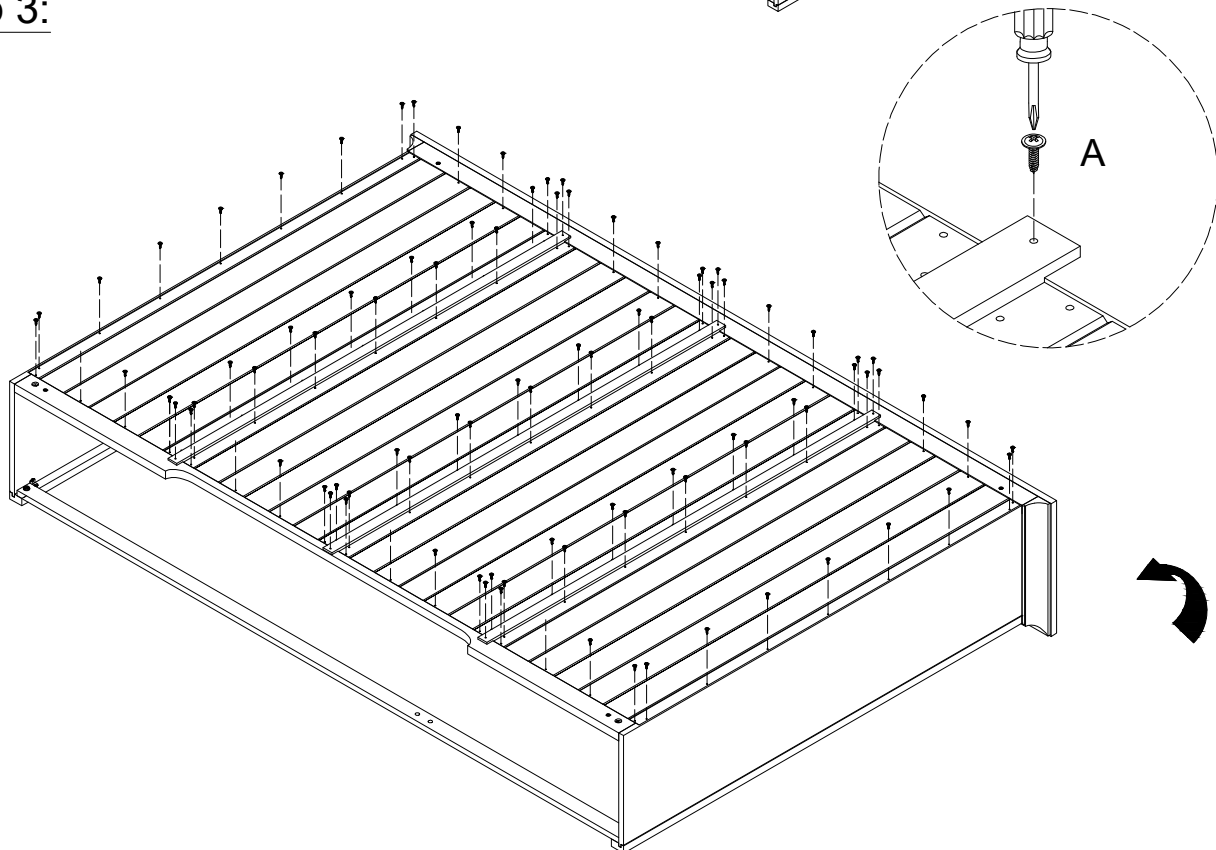




Parker House
FURNITURE

Assembly Instruction

Item NO. SH0#405-EFW/ SH0#405-MDR

SH0#412-EFW/ SH0#412-MDR

 Step 4:

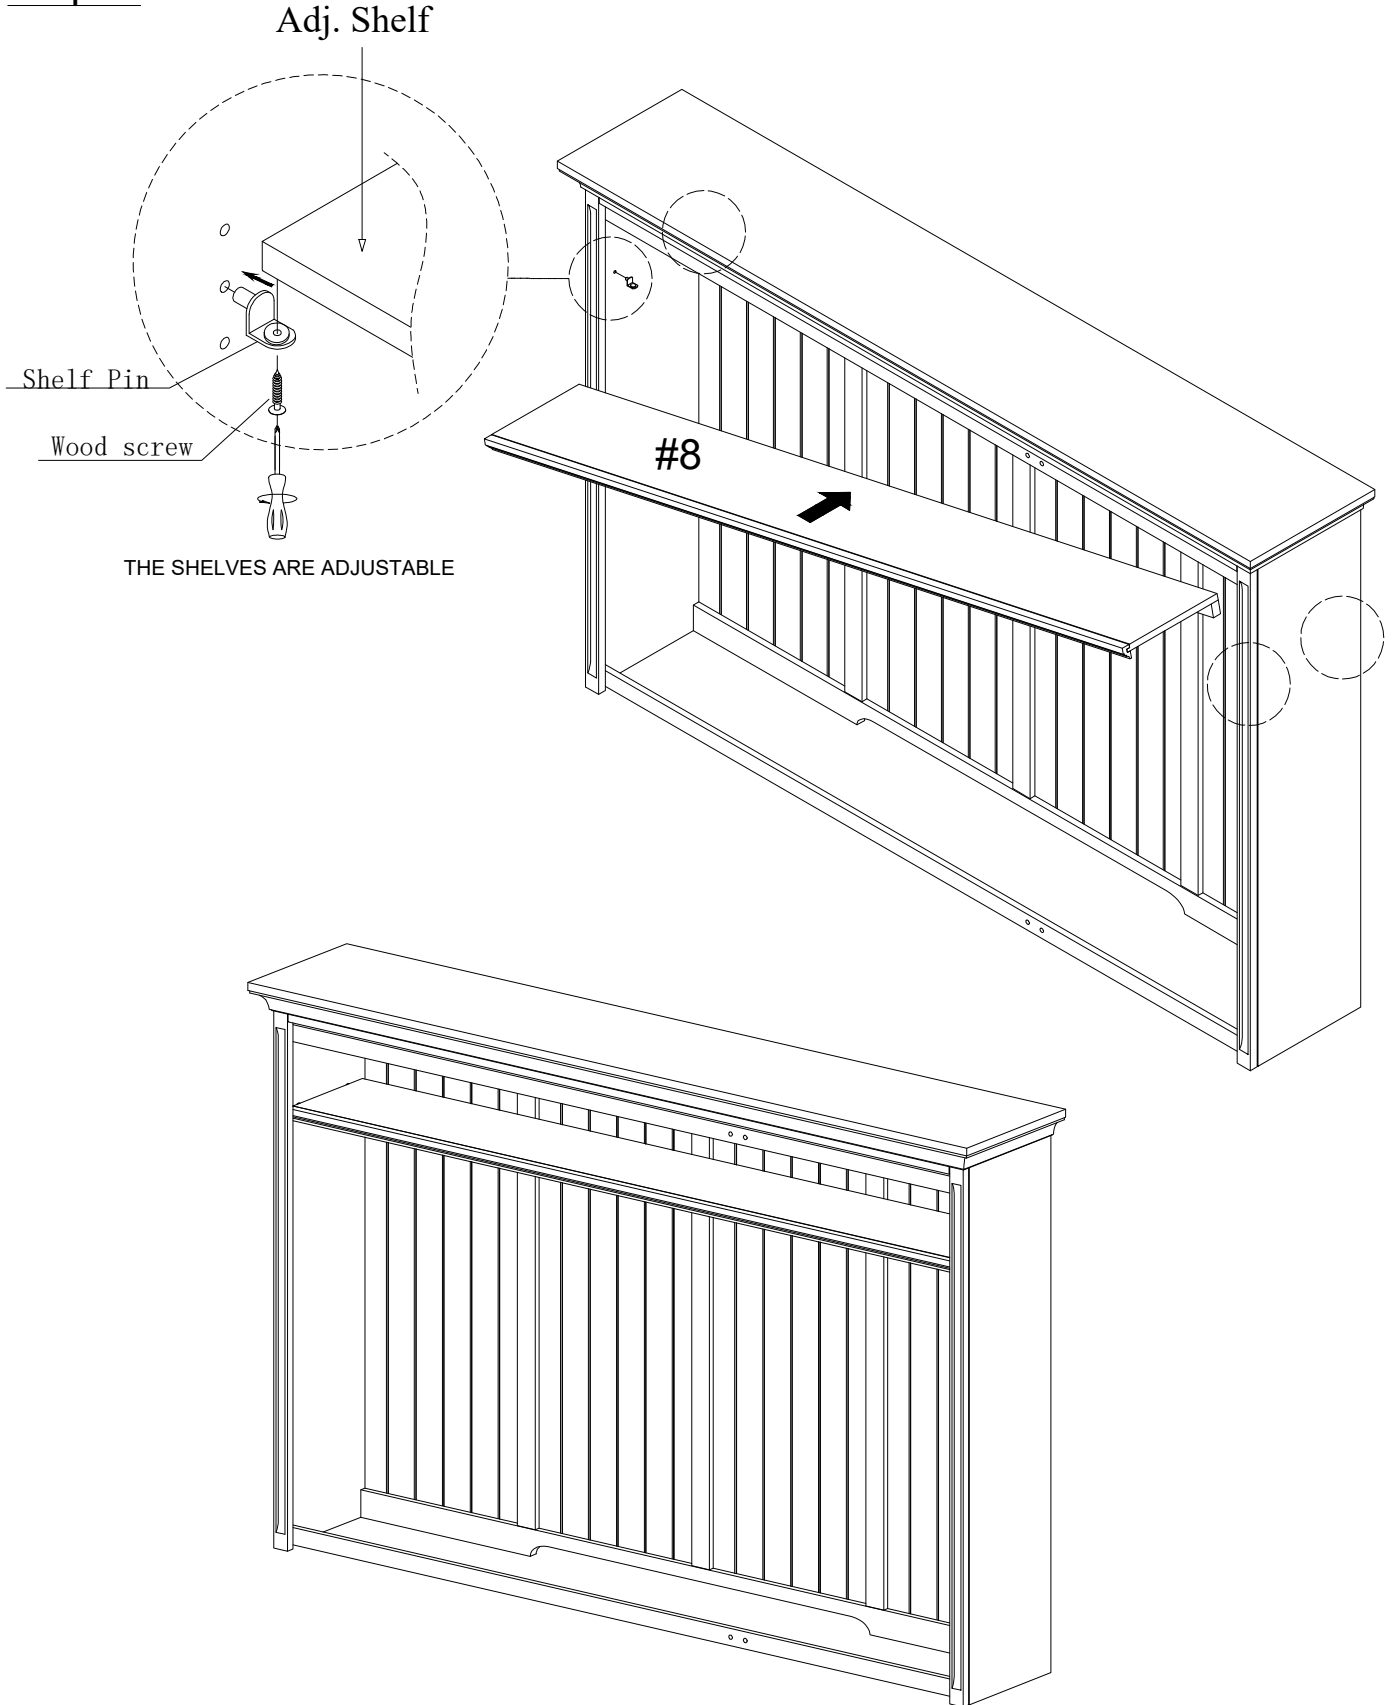




Parker House
FURNITURE

Assembly Instruction

Item NO. SH0#405-EFW/ SH0#405-MDR
SH0#412-EFW/ SH0#412-MDR

 Step 5:

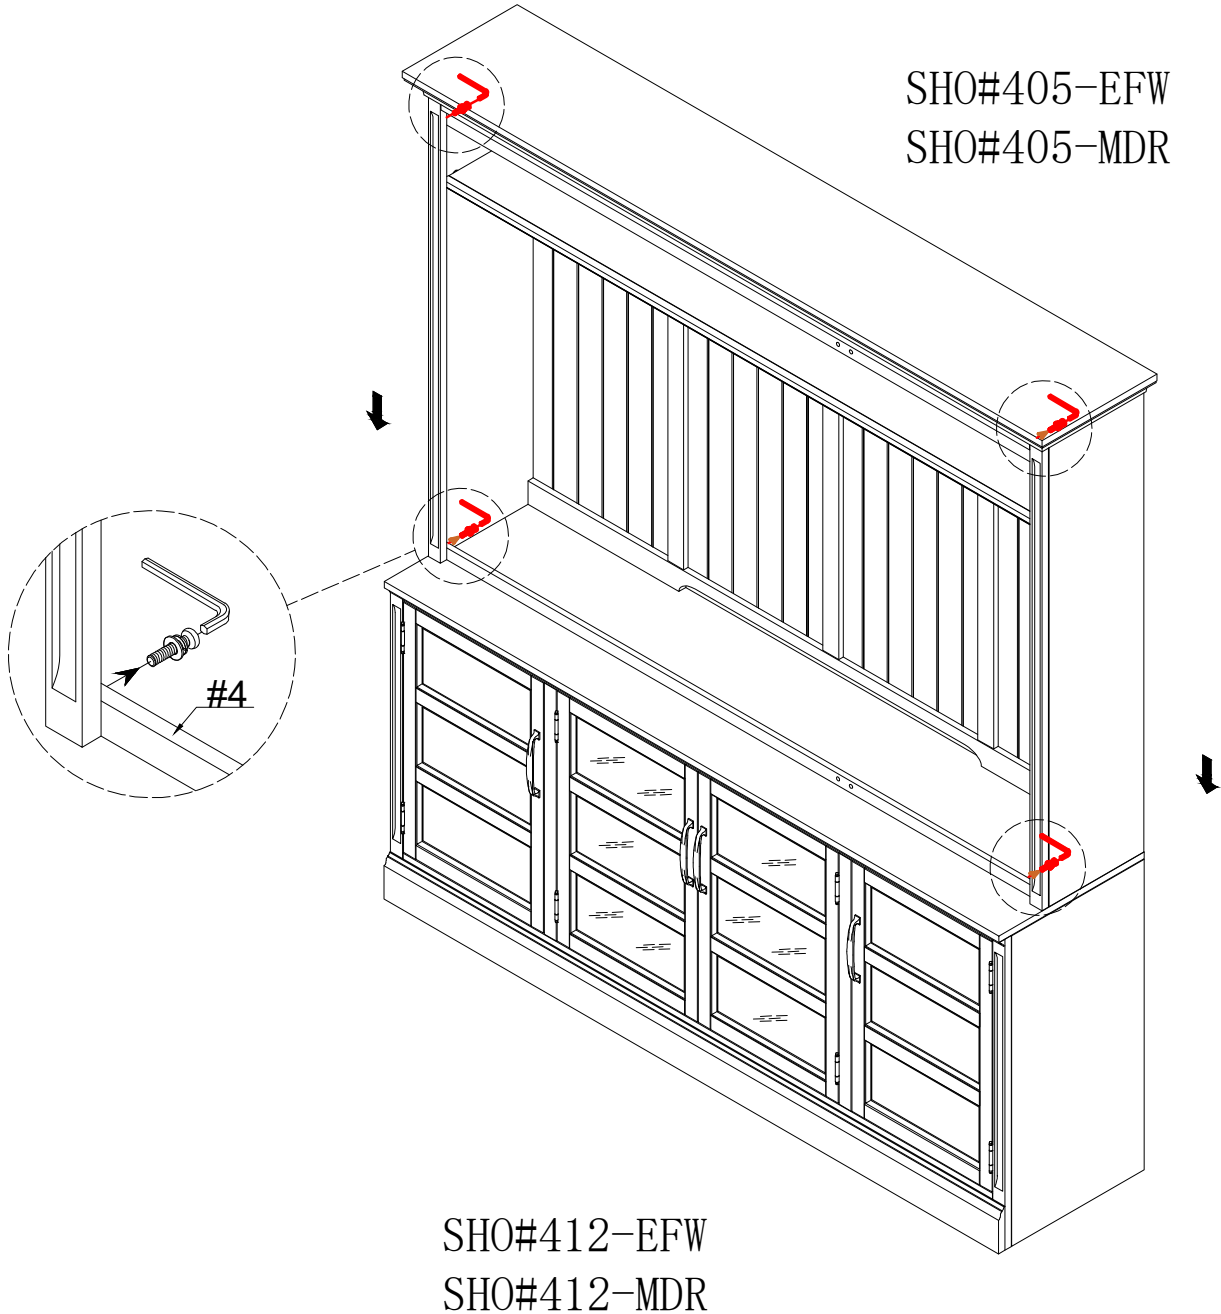




Parker House
FURNITURE

Assembly Instruction

Item NO. SH0#405-EFW/ SH0#405-MDR
SH0#412-EFW/ SH0#412-MDR

 Step 6:

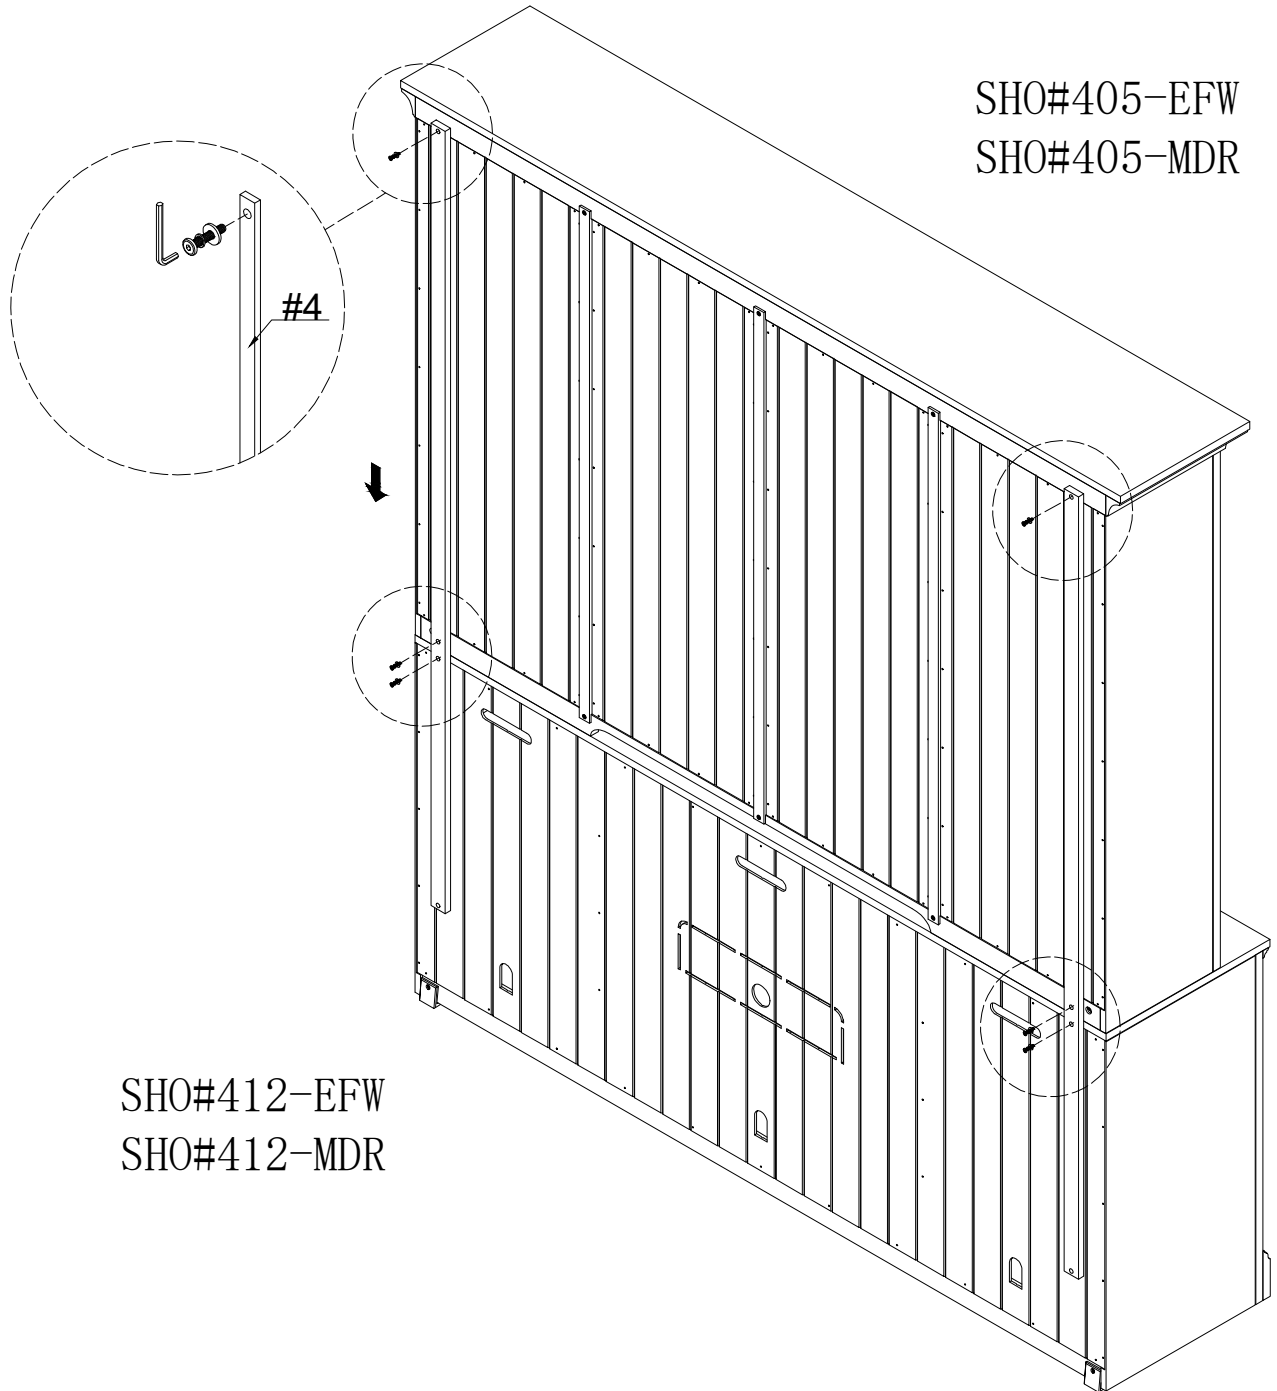




Parker House
FURNITURE

Assembly Instruction


Item NO. SH0#405-EFW/ SH0#405-MDR
SH0#412-EFW/ SH0#412-MDR

 Step 7:

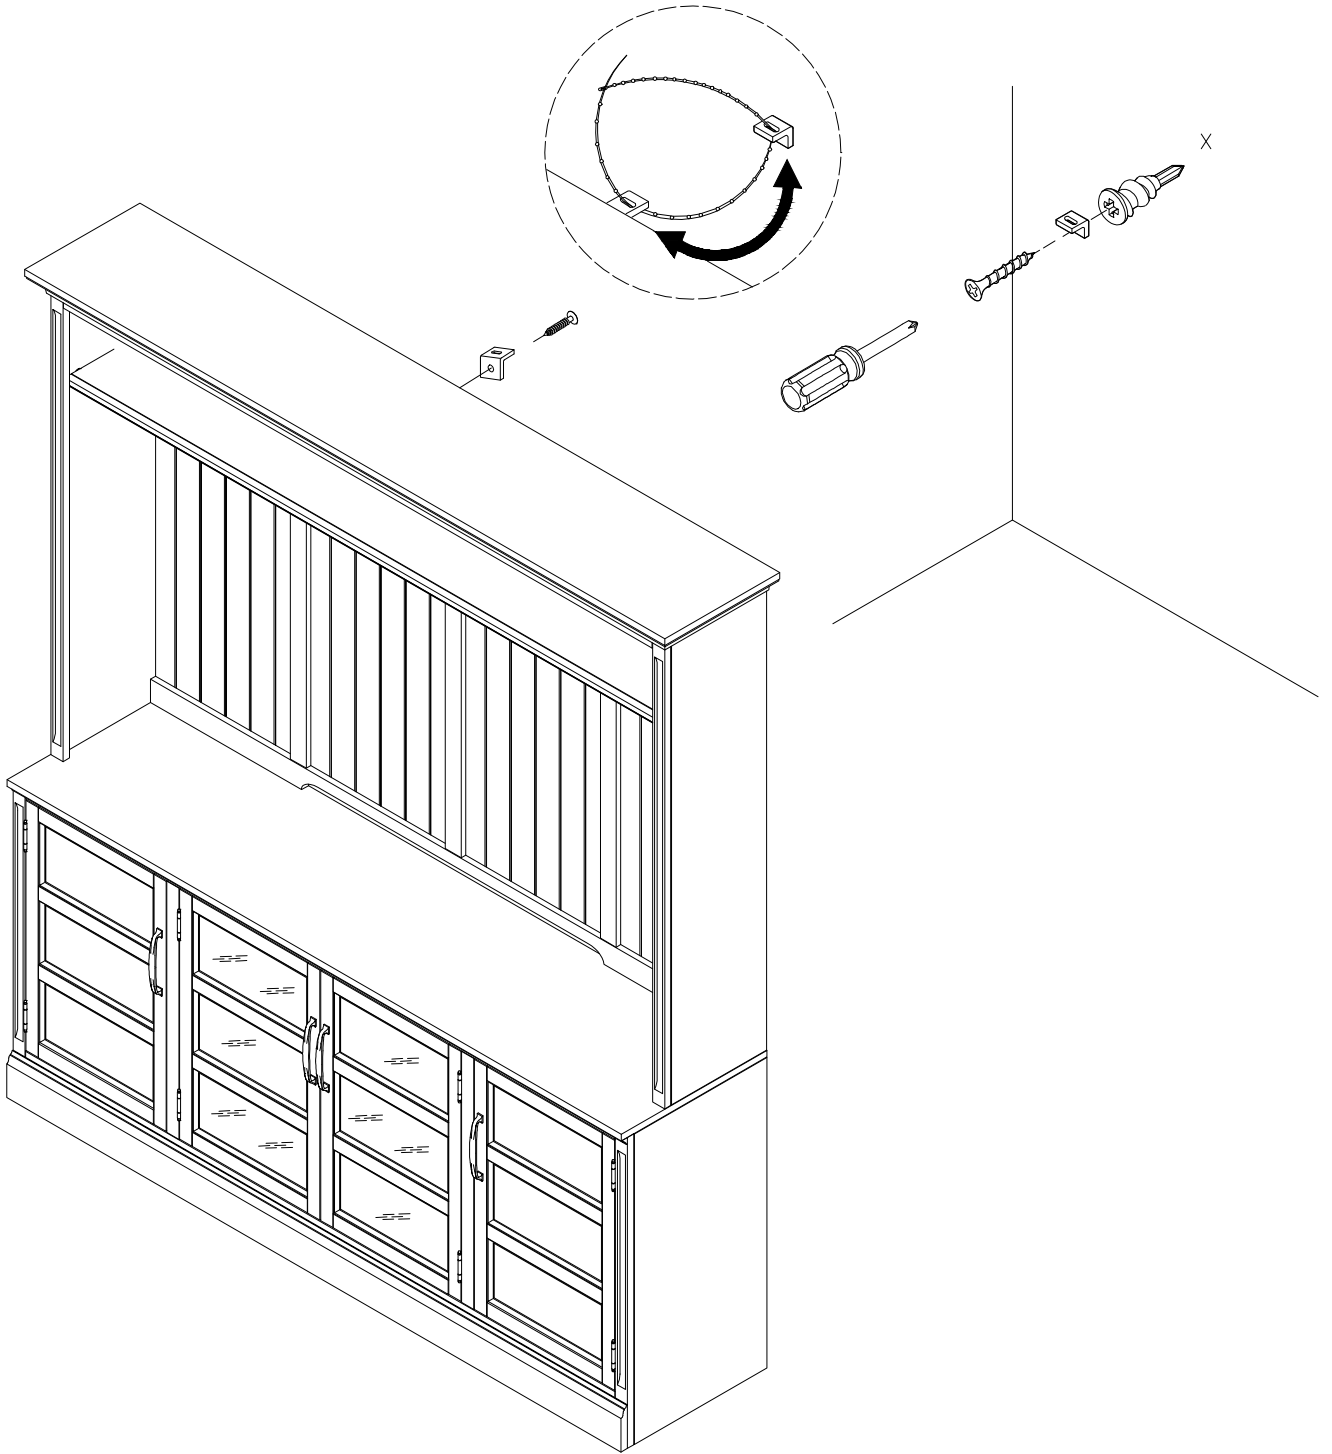

Anti-Tip Hardware Installation Instructions

 Notice: In homes where small children may be present, Parker House. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Parker House. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

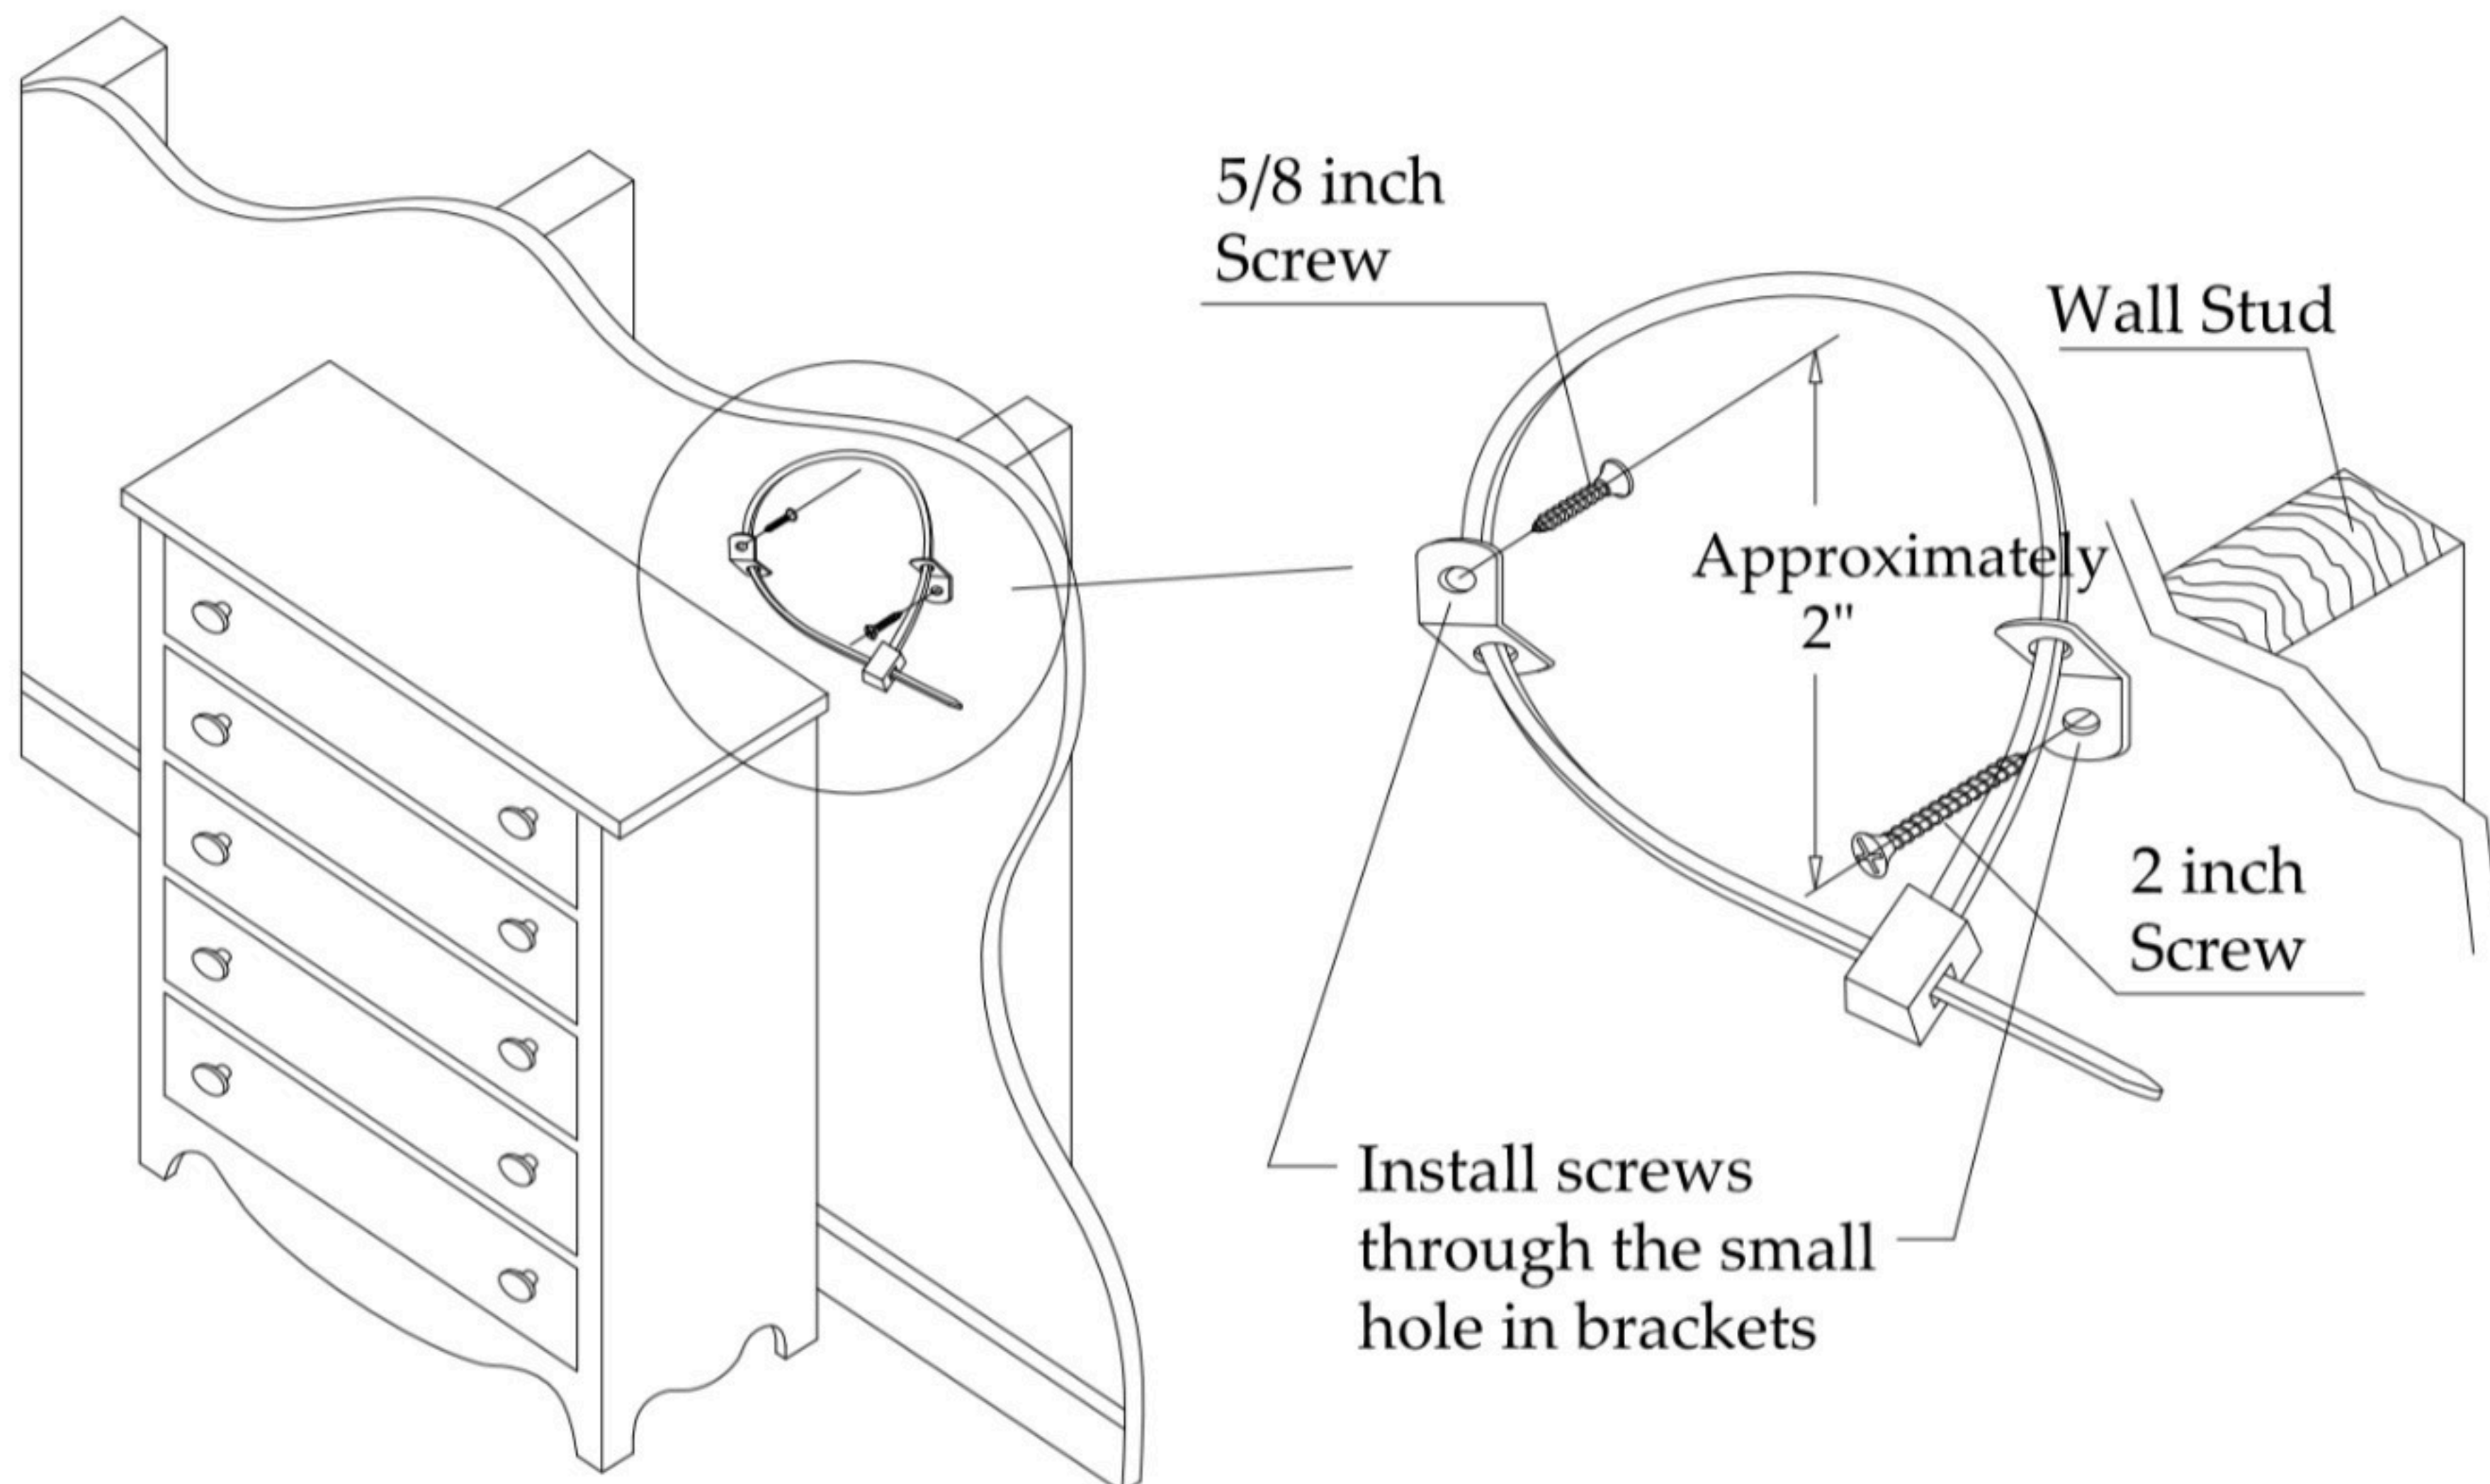

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Parker House. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.