

STEP 3

Reclose the dust cover (1) & Velco (2).

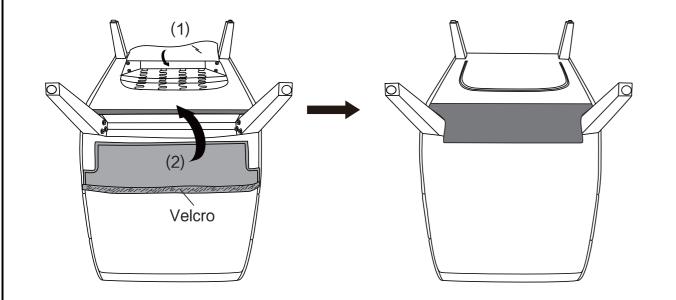


STEP 4

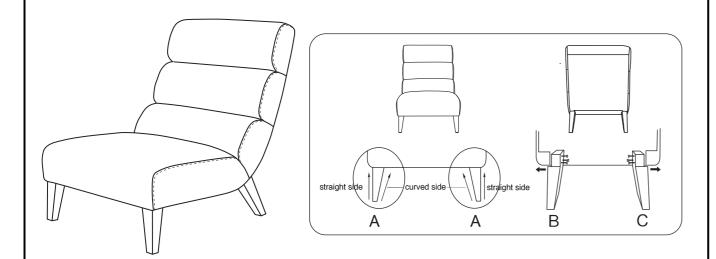

Congratulations! We hope you enjoy your purchase.

ASSEMBLY INSTRUCTIONS

Parker The Scoop Accent chair

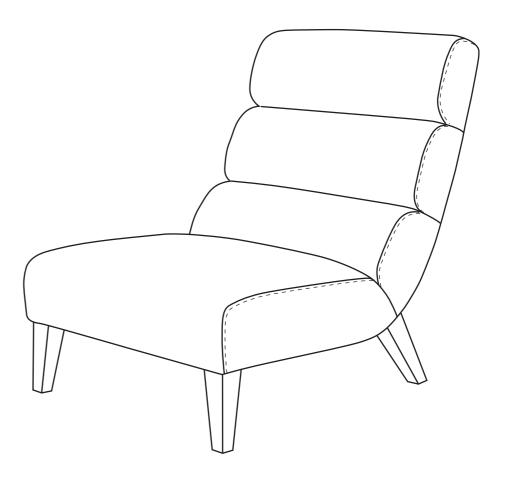

Description: Parker The Scoop Accent chair **Dimension**: 28 1/4"W × 37 3/4"D × 37 3/4"H

Caution: Please inspect all connections periodically and retighten them if loose.

-4-

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.

IMPORTANT NOTE:

- Unzip cushion seat bottom to remove parts carefully.
 Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.


PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

Part	Description	Qty	Drawing	Par	t	Description	Qty	Drawing
А	Front Leg	2		F	11	Bolt (M8x70mm)	10	
В	Back Leg (R)	1		F	2	Spring Washer	10	
С	Back Leg (L)	1		F	3	Flat Washer	10	
D	Chair Body	1		Т	1	Allen Wrench	1	


STEP 1

Please lay the Chair Body (D) on soft, clean surface. Open the dust cover (1) & velcro (2) and take out the parts package.

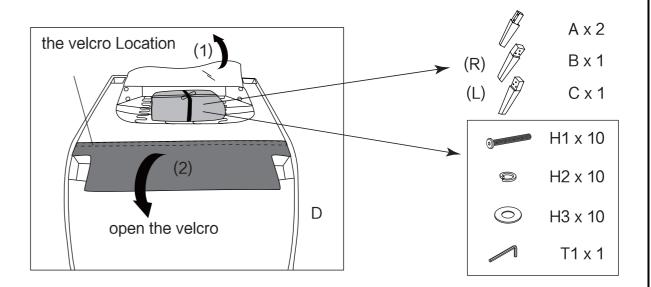

STEP 2

Please refer to below assembly sketch, insert the Front Legs (Ax2) and Back Legs (Bx1 & Cx1) into the Chair Body (D) with Bolts (H1), Spring Washers (H2), Flat Washers (H3) and Allen Wrench (T1), tighten all bolts clockwise.

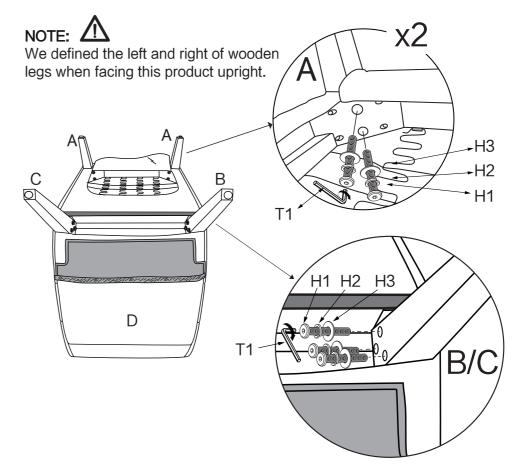

-2-- 3 -