



 


# ASSEMBLY INSTRUCTION

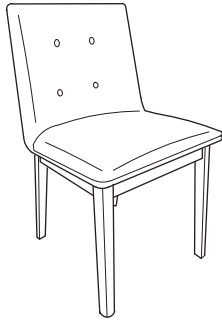


 

Model No : A401-41J (CHAIR WITH BUTTON)



## IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

PART LIST		
NO	DESCRIPTION	QTY / PCS
1	 BACKREST	2 PCS
2	 FRONT LEG	4 PCS
3	 BACK LEG - L	2 PCS
4	 BACK LEG - R	2 PCS

HARDWARE LIST		
NO	DESCRIPTION	QTY / PCS
A	 JCBC M6 X 60 MM	16 PCS
B	 M6 X 11MM SPRING WASHER	16 PCS
C	 M6 X 19MM FLAT WASHER	16 PCS
D	 ALLEN KEY M4 X 100MM	1 PC
E	 PVC NAIL LEG	8 PCS

## STEP 1

