
 


 



I M P O R T A N T N O T E :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children!
- Tighten screws periodically! With the use of this product bolts and screws may become loose over time!
- Don't attempt to modify parts!

PART LIST		
NO	DESCRIPTION	QTY/PCS
1	 HEADBOARD	1 PC
2	 FOOTBOARD	1 PC
3	 SIDE RAIL	2 PCS
4	 SLAT	4 PCS
5	 SUPPORT LEG	8 PCS

HARDWARE LIST			
NO	DESCRIPTION	QTY/PCS	
A	 BOLT M8 x 25mm	8 PCS	
B	 SPRING WASHER M8	8 PCS	
C	 FLAT WASHER M8	8 PCS	
D	 ALLEN KEY M5	1 PC	
E	 CSK SCREW M4 x 32mm	8 PCS	

REMARKS : YOU WILL ALSO NEED A PHILIP SCREW DRIVER (NOT PROVIDED)

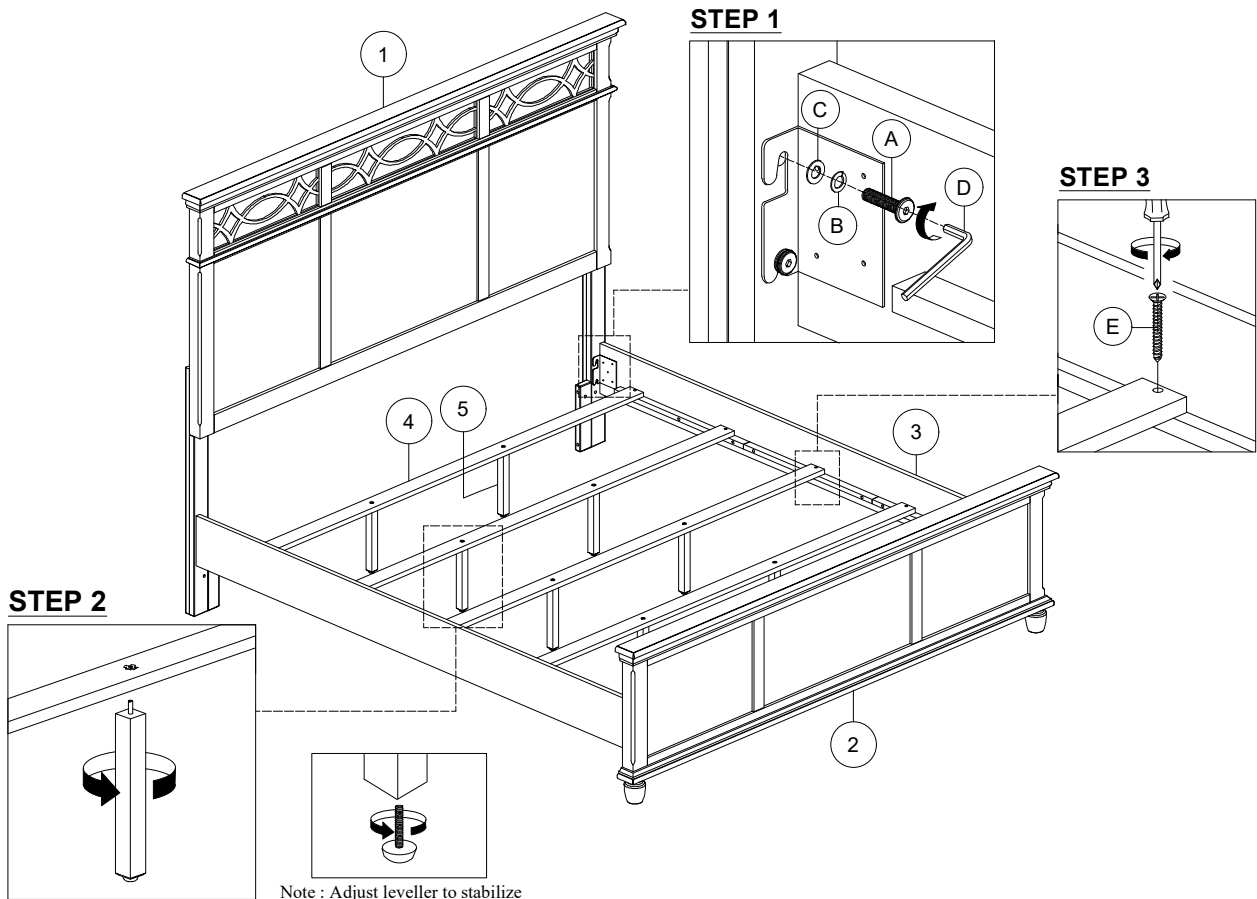

Note : Adjust leveller to stabilize