


# ASSEMBLY INSTRUCTION

Item No : D811/D814-61

Description : WINDOW PANE DINING CHAIR

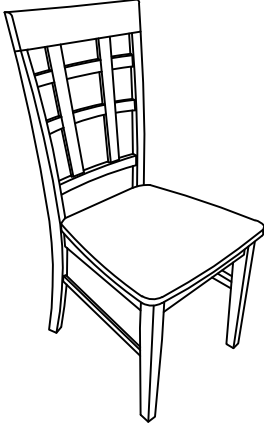

## IMPORTANT NOTE :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

Each Chair


## PARTS LIST

NO	DESCRIPTION	QTY
1	BACK REST	1 PC
2	CHAIR SEAT	1 PC
3	FRONT LEG L & R	2 PCS
4	SIDE STRETCHER L & R (with arrow marked)	2 PCS

## HARDWARE LIST

NO	DESCRIPTION	QTY
A	JCBC SCREW M6 x 80mm	4 PCS
B	JCBC SCREW M6 x 60mm	4 PCS
C	JCBC SCREW M6 x 40mm	2 PCS
D	SPRING WASHER 5/16"	10 PCS
E	FLAT WASHER 5/16" x 22mm	10 PCS
F	ALLEN KEY M4	1 PC
G	CSK SCREW M4 x 38mm	4 PCS

### Step : 1

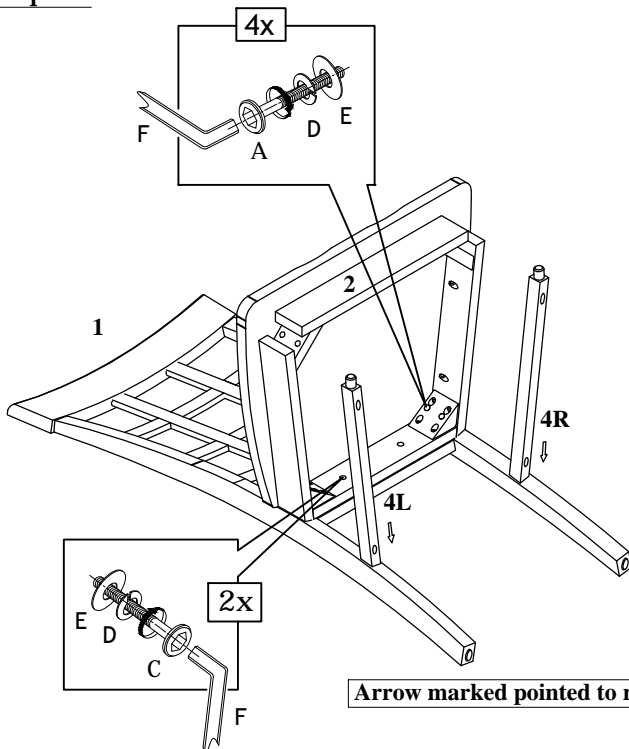

### Step : 2

