COASTER®
FINE FURNITURE

# *ASSEMBLY INSTRUCTIONS*
# *COASTER FINE FURNITURE*

*Fine Furniture for every stage of life*

## 650227P
## POWER MOTION SOFA

REVISION 0:03/15/2019
REVISION 1:01/10/2020
REVISION 3:09/14/2020

COASTERFURNITURE.COM

# ITEM: 650227P

# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

**WARNING!**

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

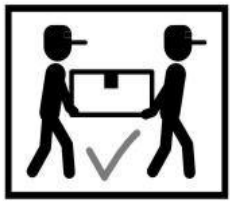

| ASSEMBLY TIME PER UNIT | 20 MINUTES |
|---|---|

## PARTS IDENTIFICATION

| | | | |
|---|---|---|---|
| A | | BASE | 1 PC |
| B | 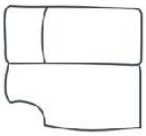 | LEFT BACK | 1 PC |
| C |  | MIDDLE BACK | 1 PC |
| D | | RIGHT BACK | 1 PC |
| E | | LEFT ARM PAD | 1 PC |
| F | | RIGHT ARM PAD | 1 PC |
| G | | POWER CABLE | 1 PC |
| Z<br>1 |  | HARDWARE PACKAGE<br>BOLT | <br>4 PCS |

**ITEM: 650227P**

# ASSEMBLY INSTRUCTIONS

STEP1

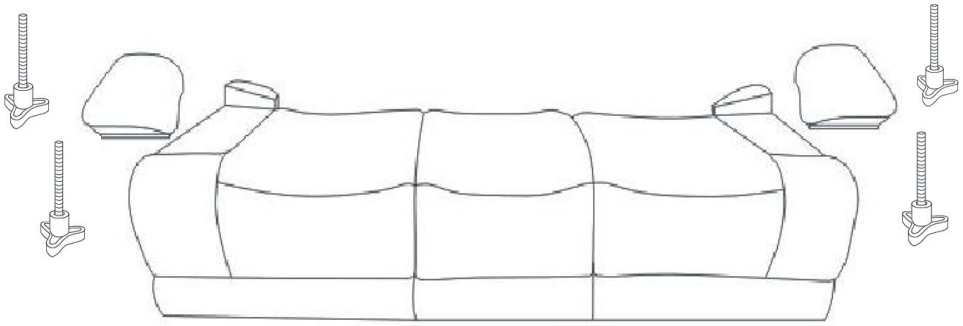

STEP2

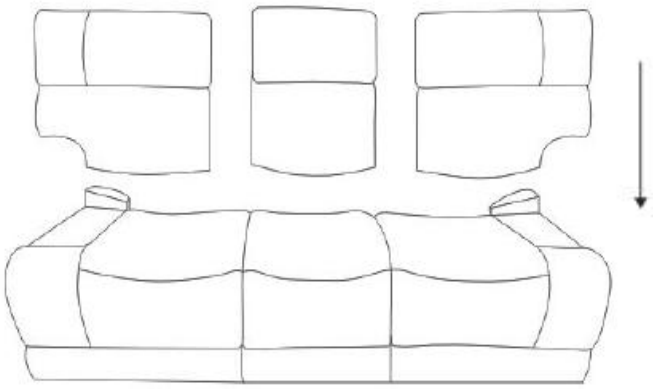

STEP3

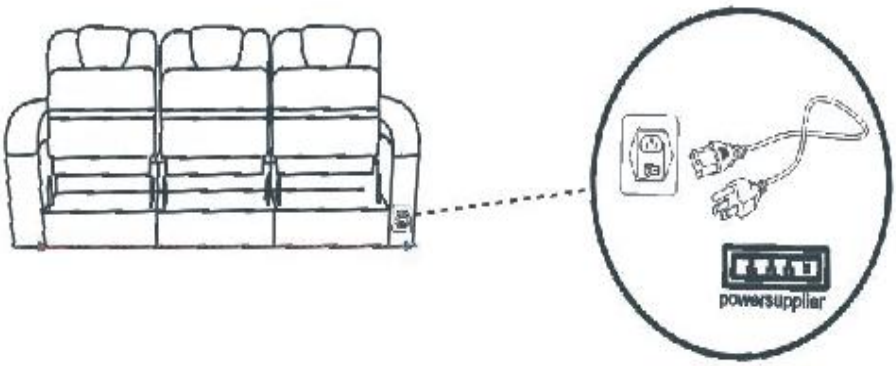


STEP4

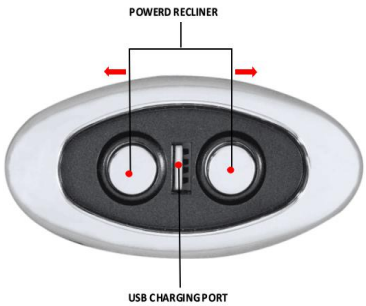


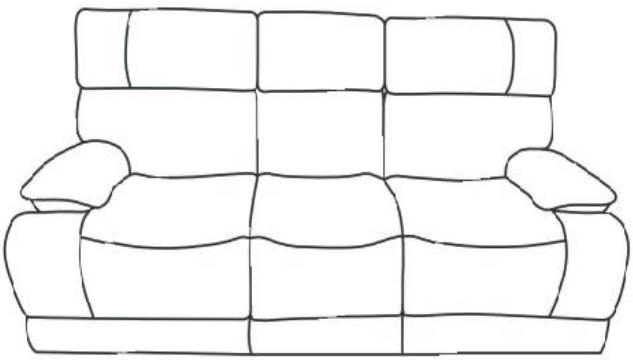

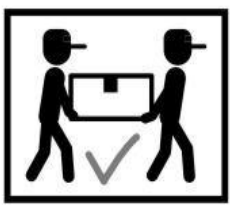

**ITEM: 650227P**

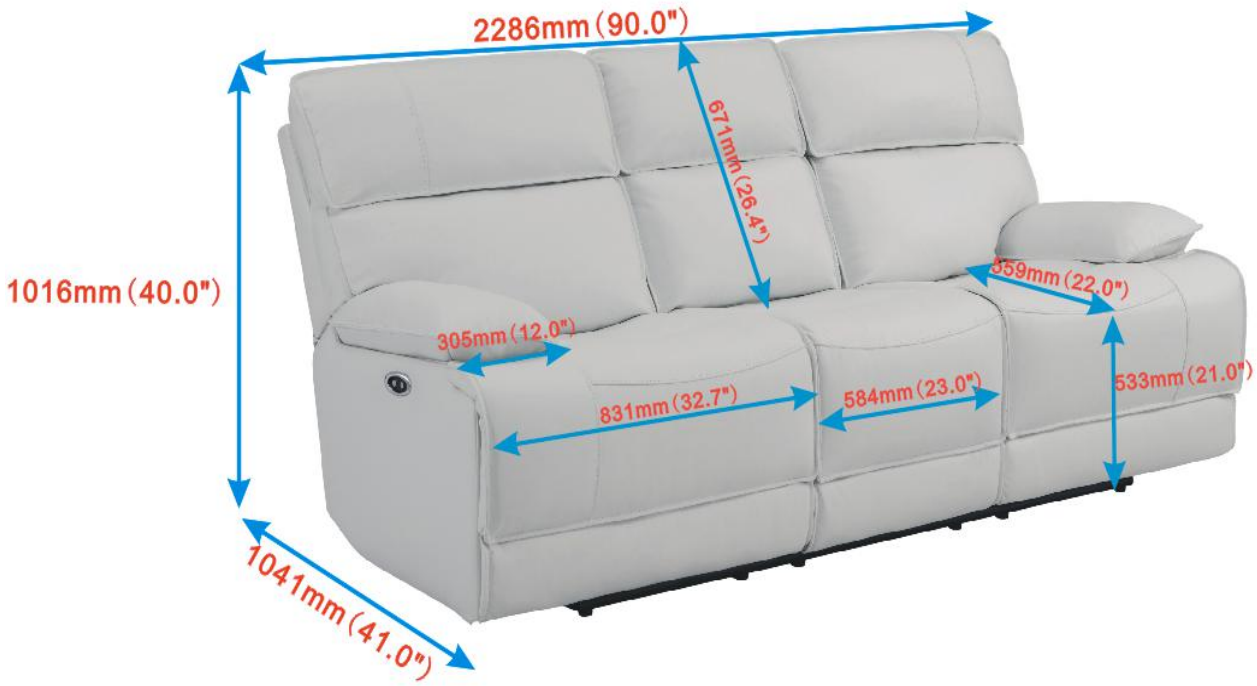

Note : Dimension tolerance ±5%