





Step 2: Attach side rail (G) to headboard (A) and footboard (C) by pushing the bracket down to fit it.

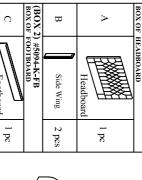


MODEL: #5094 (6')


Step 1 : Tighten the legs (D) to footboard (C) as shown.

E	D	С	10 1700
Slat	Legs 150 x 65 x 70(H)	Footboard	OOM OF TOO IDOM
4 pcs	2 pcs	1 pc	





i	Е	D	
■ Support Leg	Slat 1947mm	Legs 150 x 65 x 70(H)	
)	4 pcs	2 pcs	





	BOX 1	G	OX OF
\	BOX 1) #5094-K-HB IARDWARE LIST	Side Rail	OX OF SIDE RAIL
		L 63	




(BOX 2) #5094-K-FB	I JCBC M6 X 50 + Spring Washer + Flat Washer	H M4 x 100mm	HARDWARE LIST
8	Spring Washer	1 x 100mm	
	4 I	1	






	(BOX 2) #5094-K-FB	(BOX 2) #5094-
4 p	JCBC M6 X 50 + Spring Washer + Flat Washer	I
1 p	M4 x 100mm	Н
	HARDWARE LIST	HARDWARE LIST





















Step 4: Tighten the 4 Corner with Allen Key (H). Install the bed slats to side rail. Tighten the slats with CSK screw. The distance of the slats should be sufficient to obtain desirable bed stability.

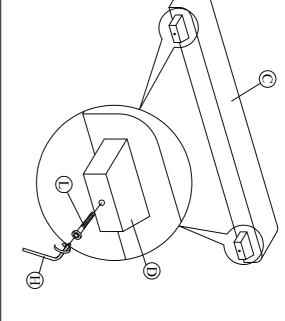

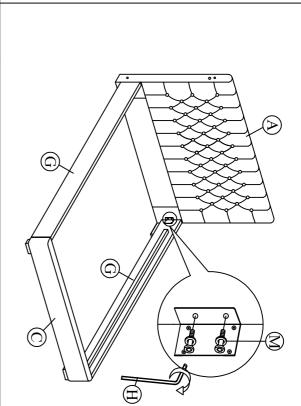

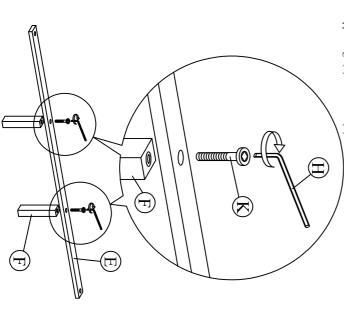

 \leq

JCBC M6 X 30 + Flat Wash

8 pcs

JCBC M6 X 50

2 pcs

 $\overline{}$

JCBC M6 X 40

8 pcs

CSK M4 x 32mn

8 pcs

THE HARDWARE IS LOCATED IN THE PACKING ITEMS

PAGE 1 OF 2

Step 5: Tighten the side wing (B) to headboard (A) as shown. THE HARDWARE IS LOCATED IN THE PACKING ITEMS W R / Match the label! Match the label! © 0 Θ **BACK VIEW** PAGE 2 OF 2