

ASSEMBLY INSTRUCTION

Step 1:

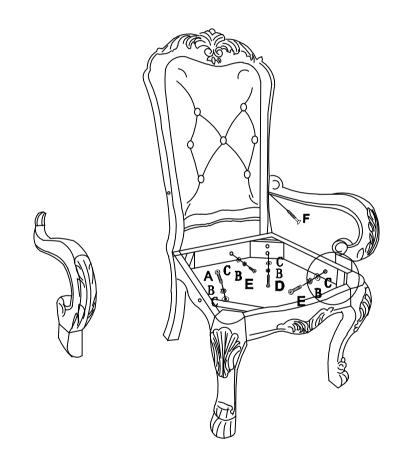

Finish:

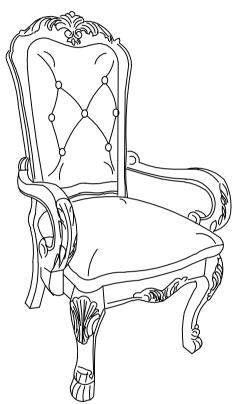

Hardware List:

No.:	Description	Drawing	Size	Q' ty
Α	Middle Bolt	(Guunnuman)	Ø5/16" X2-1/4 "	4
В	Lock Washer	©	Ø5/16" X12mm	11
С	Flat Washer	0	Ø5/16" X22mm	11
D	Long Bolt	(Garanananana)	Ø5/16" X3-1/2 "	4
E	Short Bolt		Ø5/16" X1-3/4 "	3
F	Wood Screw	()1111111111	Ø 8 X 1-1/2"	2
G	Allen Wrench		5mm	1